

CEN

CWA 16926-64

WORKSHOP

August 2015

AGREEMENT

ICS 35.240.40; 35.240.15; 35.200

English version

**Extensions for Financial Services (XFS) interface specification
Release 3.30 - Part 64: Cash Dispenser Device Class Interface -
Migration from Version 3.20 (CWA 16374) to Version 3.30 (this
CWA) - Programmer's Reference**

This CEN Workshop Agreement has been drafted and approved by a Workshop of representatives of interested parties, the constitution of which is indicated in the foreword of this Workshop Agreement.

The formal process followed by the Workshop in the development of this Workshop Agreement has been endorsed by the National Members of CEN but neither the National Members of CEN nor the CEN-CENELEC Management Centre can be held accountable for the technical content of this CEN Workshop Agreement or possible conflicts with standards or legislation.

This CEN Workshop Agreement can in no way be held as being an official standard developed by CEN and its Members.

This CEN Workshop Agreement is publicly available as a reference document from the CEN Members National Standard Bodies.

CEN members are the national standards bodies of Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, Former Yugoslav Republic of Macedonia, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey and United Kingdom.



EUROPEAN COMMITTEE FOR STANDARDIZATION
COMITÉ EUROPÉEN DE NORMALISATION
EUROPÄISCHES KOMITEE FÜR NORMUNG

CEN-CENELEC Management Centre: Avenue Marnix 17, B-1000 Brussels

© 2015 CEN All rights of exploitation in any form and by any means reserved worldwide for CEN national Members.

Ref. No.:CWA 16926-64:2015 E

Table of Contents

European foreword.....	4
1. Migration Information.....	4
2. Cash Dispensers	8
3. References	9
4. Info Commands.....	10
4.1 WFS_INF_CDM_STATUS	10
4.2 WFS_INF_CDM_CAPABILITIES.....	15
4.3 WFS_INF_CDM_CASH_UNIT_INFO	20
4.4 WFS_INF_CDM_TELLER_INFO	27
4.5 WFS_INF_CDM_CURRENCY_EXP	29
4.6 WFS_INF_CDM_MIX_TYPES	30
4.7 WFS_INF_CDM_MIX_TABLE.....	31
4.8 WFS_INF_CDM_PRESENT_STATUS.....	32
4.9 WFS_INF_CDM_GET_ITEM_INFO	34
4.10 WFS_INF_CDM_GET_BLACKLIST	36
4.11 WFS_INF_CDM_GET_ALL_ITEMS_INFO.....	37
5. Execute Commands.....	40
5.1 WFS_CMD_CDM_DENOMINATE	40
5.2 WFS_CMD_CDM_DISPENSE.....	43
5.3 WFS_CMD_CDM_COUNT	47
5.4 WFS_CMD_CDM_PRESENT	50
5.5 WFS_CMD_CDM_REJECT	52
5.6 WFS_CMD_CDM_RETRACT.....	53
5.7 WFS_CMD_CDM_OPEN_SHUTTER	56
5.8 WFS_CMD_CDM_CLOSE_SHUTTER	57
5.9 WFS_CMD_CDM_SET_TELLER_INFO	58
5.10 WFS_CMD_CDM_SET_CASH_UNIT_INFO	59
5.11 WFS_CMD_CDM_START_EXCHANGE.....	61
5.12 WFS_CMD_CDM_END_EXCHANGE.....	63
5.13 WFS_CMD_CDM_OPEN_SAFE_DOOR	65
5.14 WFS_CMD_CDM_CALIBRATE_CASH_UNIT	66
5.15 WFS_CMD_CDM_SET_MIX_TABLE	68
5.16 WFS_CMD_CDM_RESET	69
5.17 WFS_CMD_CDM_TEST_CASH_UNITS.....	72
5.18 WFS_CMD_CDM_SET_GUIDANCE_LIGHT	74
5.19 WFS_CMD_CDM_POWER_SAVE_CONTROL.....	76

5.20	WFS_CMD_CDM_PREPARE_DISPENSE.....	77
5.21	WFS_CMD_CDM_SET_BLACKLIST	78
5.22	WFS_CMD_CDM_SYNCHRONIZE_COMMAND.....	79
6.	Events.....	80
6.1	WFS_SRVE_CDM_SAFEDOOROPEN.....	80
6.2	WFS_SRVE_CDM_SAFEDOORCLOSED	81
6.3	WFS_USRE_CDM_CASHUNITTHRESHOLD.....	82
6.4	WFS_SRVE_CDM_CASHUNITINFOCHANGED.....	83
6.5	WFS_SRVE_CDM_TELLERINFOCHANGED	84
6.6	WFS_EXEE_CDM_DELAYEDDISPENSE	85
6.7	WFS_EXEE_CDM_STARTDISPENSE	86
6.8	WFS_EXEE_CDM_CASHUNITERROR.....	87
6.9	WFS_SRVE_CDM_ITEMSTAKEN	88
6.10	WFS_SRVE_CDM_COUNTS_CHANGED	89
6.11	WFS_EXEE_CDM_PARTIALDISPENSE.....	90
6.12	WFS_EXEE_CDM_SUBDISPENSEOK	91
6.13	WFS_EXEE_CDM_INCOMPLETEDISPENSE	92
6.14	WFS_EXEE_CDM_NOTEERROR.....	93
6.15	WFS_SRVE_CDM_ITEMSPRESENTED	94
6.16	WFS_SRVE_CDM_MEDIADETECTED	95
6.17	WFS_EXEE_CDM_INPUT_P6.....	96
6.18	WFS_SRVE_CDM_DEVICEPOSITION.....	97
6.19	WFS_SRVE_CDM_POWER_SAVE_CHANGE	98
6.20	WFS_EXEE_CDM_INFO_AVAILABLE	99
6.21	WFS_EXEE_CDM_INCOMPLETERETRACT	100
6.22	WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	101
7.	Sub-Dispensing Command Flow.....	102
8.	Rules for Cash Unit Exchange.....	105
9.	Events Associated with Cash Unit Status Changes	106
9.1	One Physical Cash Unit Goes LOW	106
9.2	Last Physical Cash Unit Goes LOW	107
9.3	One Physical Cash Unit Goes INOP	108
9.4	Last Physical Cash Unit Goes EMPTY	109
10.	Multiple Dispense Command Flow.....	110
11.	C - Header file	112

European foreword

This CWA is revision 3.30 of the XFS interface specification.

This CEN Workshop Agreement has been drafted and approved by a Workshop of representatives of interested parties on March 19th 2015, the constitution of which was supported by CEN following the public call for participation made on 1998-06-24. The specification is continuously reviewed and commented in the CEN/ISSS Workshop on XFS. It is therefore expected that an update of the specification will be published in due time as a CWA, superseding this revision 3.30.

A list of the individuals and organizations which supported the technical consensus represented by the CEN Workshop Agreement is available from the CEN/XFS Secretariat. The CEN XFS Workshop gathered suppliers as well as banks and other financial service companies.

The CWA is published as a multi-part document, consisting of:

Part 1: Application Programming Interface (API) - Service Provider Interface (SPI) - Programmer's Reference

Part 2: Service Classes Definition - Programmer's Reference

Part 3: Printer and Scanning Device Class Interface - Programmer's Reference

Part 4: Identification Card Device Class Interface - Programmer's Reference

Part 5: Cash Dispenser Device Class Interface - Programmer's Reference

Part 6: PIN Keypad Device Class Interface - Programmer's Reference

Part 7: Check Reader/Scanner Device Class Interface - Programmer's Reference

Part 8: Depository Device Class Interface - Programmer's Reference

Part 9: Text Terminal Unit Device Class Interface - Programmer's Reference

Part 10: Sensors and Indicators Unit Device Class Interface - Programmer's Reference

Part 11: Vendor Dependent Mode Device Class Interface - Programmer's Reference

Part 12: Camera Device Class Interface - Programmer's Reference

Part 13: Alarm Device Class Interface - Programmer's Reference

Part 14: Card Embossing Unit Device Class Interface - Programmer's Reference

Part 15: Cash-In Module Device Class Interface - Programmer's Reference

Part 16: Card Dispenser Device Class Interface - Programmer's Reference

Part 17: Barcode Reader Device Class Interface - Programmer's Reference

Part 18: Item Processing Module Device Class Interface - Programmer's Reference

Parts 19 - 28: Reserved for future use.

Parts 29 through 47 constitute an optional addendum to this CWA. They define the integration between the SNMP standard and the set of status and statistical information exported by the Service Providers.

Part 29: XFS MIB Architecture and SNMP Extensions - Programmer's Reference

Part 30: XFS MIB Device Specific Definitions - Printer Device Class

Part 31: XFS MIB Device Specific Definitions - Identification Card Device Class

Part 32: XFS MIB Device Specific Definitions - Cash Dispenser Device Class

Part 33: XFS MIB Device Specific Definitions - PIN Keypad Device Class

Part 34: XFS MIB Device Specific Definitions - Check Reader/Scanner Device Class

Part 35: XFS MIB Device Specific Definitions - Depository Device Class

Part 36: XFS MIB Device Specific Definitions - Text Terminal Unit Device Class

Part 37: XFS MIB Device Specific Definitions - Sensors and Indicators Unit Device Class

Part 38: XFS MIB Device Specific Definitions - Camera Device Class

Part 39: XFS MIB Device Specific Definitions - Alarm Device Class

Part 40: XFS MIB Device Specific Definitions - Card Embossing Unit Class

Part 41: XFS MIB Device Specific Definitions - Cash-In Module Device Class

Part 42: Reserved for future use.

Part 43: XFS MIB Device Specific Definitions - Vendor Dependent Mode Device Class

Part 44: XFS MIB Application Management

Part 45: XFS MIB Device Specific Definitions - Card Dispenser Device Class

Part 46: XFS MIB Device Specific Definitions - Barcode Reader Device Class

Part 47: XFS MIB Device Specific Definitions - Item Processing Module Device Class

Parts 48 - 60 are reserved for future use.

Part 61: Application Programming Interface (API) - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Service Provider Interface (SPI) - Programmer's Reference

Part 62: Printer and Scanning Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 63: Identification Card Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 64: Cash Dispenser Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 65: PIN Keypad Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 66: Check Reader/Scanner Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 67: Depository Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 68: Text Terminal Unit Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 69: Sensors and Indicators Unit Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 70: Vendor Dependent Mode Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 71: Camera Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 72: Alarm Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 73: Card Embossing Unit Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 74: Cash-In Module Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 75: Card Dispenser Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 76: Barcode Reader Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

Part 77: Item Processing Module Device Class Interface - Migration from Version 3.20 (CWA 16374) to Version 3.30 (this CWA) - Programmer's Reference

In addition to these Programmer's Reference specifications, the reader of this CWA is also referred to a complementary document, called Release Notes. The Release Notes contain clarifications and explanations on the CWA specifications, which are not requiring functional changes. The current version of the Release Notes is available online from <http://www.cen.eu/work/areas/ict/ebusiness/pages/ws-xfs.aspx>.

The information in this document represents the Workshop's current views on the issues discussed as of the date of publication. It is furnished for informational purposes only and is subject to change without notice. CEN makes no warranty, express or implied, with respect to this document.

The formal process followed by the Workshop in the development of the CEN Workshop Agreement has been endorsed by the National Members of CEN but neither the National Members of CEN nor the CEN-CENELEC Management Centre can be held accountable for the technical content of the CEN Workshop Agreement or possible conflict with standards or legislation. This CEN Workshop Agreement can in no way be held as being an official standard developed by CEN and its members.

The final review/endorsement round for this CWA was started on 2015-01-16 and was successfully closed on 2015-03-19. The final text of this CWA was submitted to CEN for publication on 2015-06-19. The specification is continuously reviewed and commented in the CEN Workshop on XFS. It is therefore expected that an update of the specification will be published in due time as a CWA, superseding this revision 3.30.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. CEN [and/or CENELEC] shall not be held responsible for identifying any or all such patent rights.

According to the CEN-CENELEC Internal Regulations, the national standards organizations of the following countries are bound to implement this European Standard: Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, Former Yugoslav Republic of Macedonia, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey and the United Kingdom.

Comments or suggestions from the users of the CEN Workshop Agreement are welcome and should be addressed to the CEN-CENELEC Management Centre.

1. Migration Information

XFS 3.30 has been designed to minimize backwards compatibility issues. This document highlights the changes made to the CDM device class between version 3.20 and 3.30, by highlighting the additions and deletions to the text.

2. Cash Dispensers

This specification describes the functionality of an XFS compliant Cash Dispenser Module (CDM) Service Provider. It defines the service-specific commands that can be issued to the Service Provider using the **WFSGetInfo**, **WFSAsyncGetInfo**, **WFSExecute** and **WFSAsyncExecute** functions.

Persistent values are maintained through power failures, open sessions, close session and system resets.

This specification covers the dispensing of items. An “item” is defined as any media that can be dispensed and includes coupons, documents, bills and coins. However, if coins and bills are both to be dispensed separate Service Providers must be implemented for each.

All currency parameters in this specification are expressed as a quantity of minimum dispense units, as defined in the description of the **WFS_INF_CDM_CURRENCY_EXP** command.

There are two types of CDM: Self-Service CDM and Teller CDM. A Self-Service CDM operates in an automated environment, while a Teller CDM has an operator present. The functionality provided by the following commands is only applicable to a Teller CDM:

WFS_CMD_CDM_SET_TELLER_INFO
WFS_INF_CDM_TELLER_INFO

It is possible for the CDM to be part of a compound device with the Cash-In Module (CIM). This CIM\CDM combination is referred to throughout this specification as a “Cash Recycler”. For details of the CIM interface see [Ref. 3].

If the device is a Cash Recycler then, if cash unit exchanges are required on both interfaces, the exchanges cannot be performed concurrently. An exchange on one interface must be complete (the **WFS_CMD_CDM_END_EXCHANGE** must have completed) before an exchange can start on the other interface. The **WFS_ERR_CDM_EXCHANGEACTIVE** error code will be returned if the correct sequence is not adhered to.

The CIM interface can be used for all exchange operations on recycle devices, and the CIM interface should be used if the device has recycle units of multiple currencies and/or denominations (including multiple note identifiers associated with the same denomination).

The event **WFS_SRVE_CDM_COUNTS_CHANGED** will be posted if an operation on the CIM interface affects the cash unit counts which are available through the CDM interface.

The following commands on the CIM interface may affect the CDM counts:

WFS_CMD_CIM_CASH_IN
WFS_CMD_CIM_CASH_IN_END
WFS_CMD_CIM_CASH_IN_ROLLBACK
WFS_CMD_CIM_RETRACT
WFS_CMD_CIM_SET_CASH_IN_UNIT_INFO
WFS_CMD_CIM_END_EXCHANGE
WFS_CMD_CIM_RESET
WFS_CMD_CIM_REPLENISH
WFS_CMD_CIM_CASH_UNIT_COUNT

The following applies when a blacklist of items is supported via the **WFS_INF_CDM_GET_BLACKLIST** and **WFS_CMD_CDM_SET_BLACKLIST** command. If a blacklisted item is detected the device will classify the item as a level 2 banknote and will handle the item automatically according to the local country specific note handling standard or legislation. A **WFS_EXEE_CDM_INPUT_P6** event will be sent if a blacklisted banknote is detected.

The Blacklist functionality can use a mask to specify serial numbers. The mask is defined as follows: A '?' character (0x003F) is used to represent a wildcard for a single Unicode character, and a '*' character (0x002A) is used to represent a wildcard for a single or multiple Unicode character.

For example, “S8H9??1674” would represent a match for the serial numbers “S8H9231654” and “S8H9761684”. A mask of “HD90*2” would be used in order to match serial numbers that begin with “HD90” and end with “2”, for example “HD9028882”, “HD9083276112”. Note that the blacklist mask can only use one asterisk, and if a real character is required then it must be preceded by a backslash, for example: '\\' for a backslash, \'*' for an asterisk or \'?' for a question mark.

3. References

- | | |
|--|--|
| 1. XFS Application Programming Interface (API)/Service Provider Interface (SPI), Programmer's Reference, Revision 3. 20 30 | |
| 2. ISO 4217 at http://www.iso.org | |
| 3. XFS Cash-In Module Device Class Interface, Programmer's Reference, Revision 3. 20 30 | |

4. Info Commands

4.1 WFS_INF_CDM_STATUS

Description This command is used to obtain the status of the CDM. It may also return vendor-specific status information.

Input Param None.

Output Param LPWFSCDMSTATUS lpStatus;

```
typedef struct _wfs_cdm_status
{
    WORD fwDevice;
    WORD fwSafeDoor;
    WORD fwDispenser;
    WORD fwIntermediateStacker;
    LPWFSCDMOUTPOS *lppPositions;
    LPSTR lpszExtra;
    DWORD dwGuidLights[WFS_CDM_GUIDLIGHTS_SIZE];
    WORD wDevicePosition;
    USHORT usPowerSaveRecoveryTime;
    WORD wAntiFraudModule;
} WFS_CDM_STATUS, *LPWFSCDMSTATUS;
```

fwDevice

Supplies the state of the CDM. However, an *fwDevice* status of WFS_CDM_DEVONLINE does not necessarily imply that dispensing can take place: the value of the *fwDispenser* field must be taken into account and - for some vendors - the state of the safe door (*fwSafeDoor*) may also be relevant. The state of the CDM will have one of the following values:

Value	Meaning
WFS_CDM_DEVONLINE	The device is online. This is returned when the dispenser is present and operational.
WFS_CDM_DEVOFFLINE	The device is offline (e.g. the operator has taken the device offline by turning a switch or pulling out the device).
WFS_CDM_DEVPOWEROFF	The device is powered off or physically not connected.
WFS_CDM_DEVNODEVICE	The device is not intended to be there, e.g. this type of self service machine does not contain such a device or it is internally not configured.
WFS_CDM_DEVHWERROR	The device is inoperable due to a hardware error.
WFS_CDM_DEVUSERERROR	The device is present but a person is preventing proper device operation.
WFS_CDM_DEVBUSY	The device is busy and unable to process an execute command at this time.
WFS_CDM_DEVFRAUDATTEMPT	The device is present but is inoperable because it has detected a fraud attempt.
WFS_CDM_DEVPOTENTIALFRAUD	The device has detected a potential fraud attempt and is capable of remaining in service. In this case the application should make the decision as to whether to take the device offline.

fwSafeDoor

Supplies the state of the safe door as one of the following values:

Value	Meaning
WFS_CDM_DOORNOTSUPPORTED	Physical device has no safe door or safe door state reporting is not supported.
WFS_CDM_DOOROPEN	Safe door is open.
WFS_CDM_DOORCLOSED	Safe door is closed.

WFS_CDM_DOORUNKNOWN

Due to a hardware error or other condition, the state of the safe door cannot be determined.

fwDispenser

Supplies the state of the dispenser's logical cash units as one of the following values:

Value	Meaning
WFS_CDM_DISPOK	All cash units present are in a good state.
WFS_CDM_DISPCUSTATE	One or more of the cash units is in a low, empty, inoperative or manipulated condition. Items can still be dispensed from at least one of the cash units.
WFS_CDM_DISPCUSTOP	Due to a cash unit failure dispensing is impossible. No items can be dispensed because all of the cash units are in an empty, inoperative or manipulated condition. This state may also occur when a reject/retract cash unit is full or no reject/retract cash unit is present, or when an application lock is set on every cash unit.
WFS_CDM_DISPCUUNKNOWN	Due to a hardware error or other condition, the state of the cash units cannot be determined.

fwIntermediateStacker

Supplies the state of the intermediate stacker. These bills are typically present on the intermediate stacker as a result of a retract operation or because a dispense has been performed without a subsequent present. Possible values for this field are:

Value	Meaning
WFS_CDM_ISEMPY	The intermediate stacker is empty.
WFS_CDM_ISNOTEMPTY	The intermediate stacker is not empty. The items have not been in customer access.
WFS_CDM_ISNOTEMPTYCUST	The intermediate stacker is not empty. The items have been in customer access. If the device is a recycler then the items on the intermediate stacker may be there as a result of a previous cash-in operation.
WFS_CDM_ISNOTEMPTYUNK	The intermediate stacker is not empty. It is not known if the items have been in customer access.
WFS_CDM_ISUNKNOWN	Due to a hardware error or other condition, the state of the intermediate stacker cannot be determined.
WFS_CDM_ISNOTSUPPORTED	The physical device has no intermediate stacker.

lppPositions

Pointer to a NULL-terminated array of pointers to WFSCDMOUTPOS structures. There is one structure for each position to which items can be dispensed or presented:

```
typedef struct _wfs_cdm_position
{
    WORD                fwPosition;
    WORD                fwShutter;
    WORD                fwPositionStatus;
    WORD                fwTransport;
    WORD                fwTransportStatus;
    WORD                fwJammedShutterPosition;
} WFSCDMOUTPOS, *LPWFSCDMOUTPOS;
```

fwPosition

Supplies the output position as one of the following values:

Value	Meaning
WFS_CDM_POSLEFT	Left output position.

WFS_CDM_POSRIGHT	Right output position.
WFS_CDM_POSCENTER	Center output position.
WFS_CDM_POSTOP	Top output position.
WFS_CDM_POSBOTTOM	Bottom output position.
WFS_CDM_POSFRONT	Front output position.
WFS_CDM_POSREAR	Rear output position.

fwShutter

Supplies the state of the shutter as one of the following values:

Value	Meaning
WFS_CDM_SHTCLOSED	The shutter is <u>operational and is</u> closed.
WFS_CDM_SHTOPEN	The shutter is opened <u>operational and is open</u> .
WFS_CDM_SHTJAMMED	The shutter is jammed <u>and is not operational</u> . The field <u>fwJammedShutterPosition provides the positional state of the shutter</u> .
WFS_CDM_SHTUNKNOWN	Due to a hardware error or other condition, the state of the shutter cannot be determined.
WFS_CDM_SHTNOTSUPPORTED	The physical device has no shutter or shutter state reporting is not supported.

fwPositionStatus

Returns information regarding items which may be at the output position. If the device is a recycler it is possible that the output position will not be empty due to a previous cash-in operation. The possible values of this field are:

Value	Meaning
WFS_CDM_PSEMPY	The output position is empty.
WFS_CDM_PSNOTEMPTY	The output position is not empty.
WFS_CDM_PSUNKNOWN	Due to a hardware error or other condition, the state of the output position cannot be determined.
WFS_CDM_PSNOTSUPPORTED	The device is not capable of reporting whether or not items are at the output position.

fwTransport

Supplies the state of the transport mechanism as one of the following values:

Value	Meaning
WFS_CDM_TPOK	The transport is in a good state.
WFS_CDM_TPINOP	The transport is inoperative due to a hardware failure or media jam.
WFS_CDM_TPUNKNOWN	Due to a hardware error or other condition the state of the transport cannot be determined.
WFS_CDM_TPNOTSUPPORTED	The physical device has no transport or transport state reporting is not supported.

fwTransportStatus

Returns information regarding items which may be on the transport. If the device is a recycler device it is possible that the transport will not be empty due to a previous cash-in operation. The possible values of this field are:

Value	Meaning
WFS_CDM_TPSTATEMPTY	The transport is empty.
WFS_CDM_TPSTATNOTEMPTY	The transport is not empty.
WFS_CDM_TPSTATNOTEMPTYCUST	Items which a customer has had access to are on the transport.
WFS_CDM_TPSTATNOTEMPTY_UNK	Due to a hardware error or other condition it is not known whether there are items on the transport.

WFS_CDM_TPSTATNOTSUPPORTED

The device is not capable of reporting whether items are on the transport.

fwJammedShutterPosition

Returns information regarding the position of the jammed shutter. The possible values of this field are:

Value	Meaning
<u>WFS_CDM_SHUTTERPOS_NOTSUPPORTED</u>	<u>The physical device has no shutter or the reporting of the position of a jammed shutter is not supported.</u>
<u>WFS_CDM_SHUTTERPOS_NOTJAMMED</u>	<u>The shutter is not jammed.</u>
<u>WFS_CDM_SHUTTERPOS_OPEN</u>	<u>The shutter is jammed, but fully open.</u>
<u>WFS_CDM_SHUTTERPOS_PARTIALLY_OPEN</u>	<u>The shutter is jammed, but partially open.</u>
<u>WFS_CDM_SHUTTERPOS_CLOSED</u>	<u>The shutter is jammed, but fully closed.</u>
<u>WFS_CDM_SHUTTERPOS_UNKNOWN</u>	<u>The position of the shutter is unknown.</u>

lpszExtra

Pointer to a list of vendor-specific, or any other extended, information. The information is returned as a series of “key=value” strings so that it is easily extensible by Service Providers. Each string is null-terminated, with the final string terminating with two null characters. An empty list may be indicated by either a NULL pointer or a pointer to two consecutive null characters.

dwGuidLights [...]

Specifies the state of the guidance light indicators. The elements of this array can be accessed by using the predefined index values specified for the *dwGuidLights[]* field in the capabilities. Vendor specific guidance lights are defined starting from the end of the array. The maximum guidance light index is WFS_CDM_GUIDLIGHTS_MAX.

Specifies the state of the guidance light indicator as

WFS_CDM_GUIDANCE_NOT_AVAILABLE, WFS_CDM_GUIDANCE_OFF or a combination of the following flags consisting of one type B, optionally one type C and optionally ~~one type C~~ D.

Value	Meaning	Type
WFS_CDM_GUIDANCE_NOT_AVAILABLE	The status is not available.	A
WFS_CDM_GUIDANCE_OFF	The light is turned off.	A
WFS_CDM_GUIDANCE_SLOW_FLASH	The light is blinking slowly.	B
WFS_CDM_GUIDANCE_MEDIUM_FLASH	The light is blinking medium frequency.	B
WFS_CDM_GUIDANCE_QUICK_FLASH	The light is blinking quickly.	B
WFS_CDM_GUIDANCE_CONTINUOUS	The light is turned on continuous (steady).	B
WFS_CDM_GUIDANCE_RED	The light is red.	C
WFS_CDM_GUIDANCE_GREEN	The light is green.	C
WFS_CDM_GUIDANCE_YELLOW	The light is yellow.	C
WFS_CDM_GUIDANCE_BLUE	The light is blue.	C
WFS_CDM_GUIDANCE_CYAN	The light is cyan.	C
WFS_CDM_GUIDANCE_MAGENTA	The light is magenta.	C
WFS_CDM_GUIDANCE_WHITE	The light is white.	C
<u>WFS_CDM_GUIDANCE_EXIT</u>	<u>The light is in the exit state.</u>	<u>D</u>

wDevicePosition

Specifies the device position. The device position value is independent of the *fwDevice* value, e.g. when the device position is reported as WFS_CDM_DEVICENOTINPOSITION, *fwDevice* can have any of the values defined above (including WFS_CDM_DEVONLINE or WFS_CDM_DEVOFFLINE). If the device is not in its normal operating position (i.e. WFS_CDM_DEVICEINPOSITION) then media may not be presented through the normal customer interface. This value is one of the following values:

Value	Meaning
WFS_CDM_DEVICEINPOSITION	The device is in its normal operating position, or is fixed in place and cannot be moved.
WFS_CDM_DEVICENOTINPOSITION	The device has been removed from its normal operating position.
WFS_CDM_DEVICEPOSUNKNOWN	Due to a hardware error or other condition, the position of the device cannot be determined.
WFS_CDM_DEVICEPOSNOTSUPP	The physical device does not have the capability of detecting the position.

usPowerSaveRecoveryTime

Specifies the actual number of seconds required by the device to resume its normal operational state from the current power saving mode. This value is zero if either the power saving mode has not been activated or no power save control is supported.

wAntiFraudModule

Specifies the state of the anti-fraud module as one of the following values:

Value	Meaning
WFS_CDM_AFMNOTSUPP	No anti-fraud module is available.
WFS_CDM_AFMOK	Anti-fraud module is in a good state and no foreign device is detected.
WFS_CDM_AFMINOP	Anti-fraud module is inoperable.
WFS_CDM_AFMDEVICEDETECTED	Anti-fraud module detected the presence of a foreign device.
WFS_CDM_AFMUNKNOWN	The state of the anti-fraud module cannot be determined.

Error Codes Only the generic error codes defined in [Ref. 1] can be generated by this command.

Comments Applications which rely on the *lpszExtra* field may not be device or vendor-independent.

In the case where communication with the device has been lost, the *fwDevice* field will report WFS_CDM_DEVPOWEROFF when the device has been removed or WFS_CDM_DEVHWERROR if the communications are unexpectedly lost. All other fields should contain a value based on the following rules and priority:

1. Report the value as unknown.
2. Report the value as a general h/w error.
3. Report the value as the last known value.

4.2 WFS_INF_CDM_CAPABILITIES

Description This command retrieves the capabilities of the CDM. It may also return vendor specific capability information. The intermediate stacker and the transport are treated as separate areas. Some devices may have the capability to move items from the cash units to the intermediate stacker while there are items on the transport. Similarly some devices may be able to retract items to the transport or the cash units while there are items on the intermediate stacker.

Input Param None.

Output Param LPWFSCDMCAPS lpCaps;

```
typedef struct _wfs_cdm_caps
{
    WORD wClass;
    WORD fwType;
    WORD wMaxDispenseItems;
    BOOL bCompound;
    BOOL bShutter;
    BOOL bShutterControl;
    WORD fwRetractAreas;
    WORD fwRetractTransportActions;
    WORD fwRetractStackerActions;
    BOOL bSafeDoor;
    BOOL bCashBox;
    BOOL bIntermediateStacker;
    BOOL bItemsTakenSensor;
    WORD fwPositions;
    WORD fwMoveItems;
    WORD fwExchangeType;
    LPSTR lpszExtra;
    DWORD dwGuidLights[WFS_CDM_GUIDLIGHTS_SIZE];
    BOOL bPowerSaveControl;
    BOOL bPrepareDispense;
    BOOL bAntiFraudModule;
    DWORD dwItemInfoTypes;
    BOOL bBlacklist;
    LPDWORD lpdwSynchronizableCommands;
} WFS_CDMCAPS, *LPWFSCDMCAPS;
```

wClass

Specifies the logical service class as WFS_SERVICE_CLASS_CDM.

fwType

Supplies the type of CDM as one of the following values:

Value	Meaning
WFS_CDM_TELLERBILL	The CDM is a Teller Bill Dispenser.
WFS_CDM_SELFERVICEBILL	The CDM is a Self-Service Bill Dispenser.
WFS_CDM_TELLERCOIN	The CDM is a Teller Coin Dispenser.
WFS_CDM_SELFSERVICECOIN	The CDM is a Self-Service Coin Dispenser.

wMaxDispenseItems

Supplies the maximum number of items that can be dispensed in a single dispense operation. If no limit applies this value will be zero - in this case, if an attempt is made to dispense more items than the hardware limitations will allow, the Service Provider will implement the dispense as a series of sub-dispense operations (see section Sub-Dispensing Command Flow).

bCompound

Specifies whether the CDM is part of a compound device. If the CDM is part of a compound device with a CIM then this combination can be referred to as a recycler. In this case, no information on cash-in cash units will be supplied via the CDM interface. The CDM interface will however supply information on shared retract or reject cash units and recycle cash units.

bShutter

Specifies whether or not the commands WFS_CMD_CDM_OPEN_SHUTTER and WFS_CMD_CDM_CLOSE_SHUTTER are supported.

bShutterControl

If set to TRUE the shutter is controlled implicitly by the Service Provider. If set to FALSE the shutter must be controlled explicitly by the application using the WFS_CMD_CDM_OPEN_SHUTTER and the WFS_CMD_CDM_CLOSE_SHUTTER commands. This field is always set to TRUE if the device has no shutter. This field applies to all shutters and all output positions.

fwRetractAreas

Specifies the area to which items may be retracted. If the device does not have a retract capability this field will be WFS_CDM_RA_NOTSUPP. Otherwise this field will be set to a combination of the following flags:

Value	Meaning
WFS_CDM_RA_RETRACT	The items may be retracted to a retract cash unit.
WFS_CDM_RA_TRANSPORT	The items may be retracted to the transport.
WFS_CDM_RA_STACKER	The items may be retracted to the intermediate stacker.
WFS_CDM_RA_REJECT	The items may be retracted to a reject cash unit.
WFS_CDM_RA_ITEMCASSETTE	The items may be retracted to the item cassettes, i.e. cassettes that can be dispensed from.

fwRetractTransportActions

Specifies the actions which may be performed on items which have been retracted to the transport. If the device does not have the capability to retract items to or from the transport this value will be WFS_CDM_NOTSUPP. This field will be a combination of the following flags:

Value	Meaning
WFS_CDM_PRESENT	The items may be presented.
WFS_CDM_RETRACT	The items may be retracted to a retract cash unit.
WFS_CDM_REJECT	The items may be retracted to a reject bin.
WFS_CDM_ITEMCASSETTE	The items may be retracted to the item cassettes, i.e. cassettes that can be dispensed from.

fwRetractStackerActions

Specifies the actions which may be performed on items which have been retracted to the stacker. If the device does not have the capability to retract items to or from the stacker this value will be WFS_CDM_NOTSUPP. Otherwise it will be a combination of the following flags:

Value	Meaning
WFS_CDM_PRESENT	The items may be presented.
WFS_CDM_RETRACT	The items may be retracted to a retract cash unit.
WFS_CDM_REJECT	The items may be retracted to a reject bin.
WFS_CDM_ITEMCASSETTE	The items may be retracted to the item cassettes, i.e. cassettes that can be dispensed from.

bSafeDoor

Specifies whether or not the WFS_CMD_CDM_OPEN_SAFE_DOOR command is supported.

bCashBox

This field is only applicable to CDM types WFS_CDM_TELLERBILL and WFS_CDM_TELLERCOIN. It specifies whether or not tellers have been assigned a cash box.

bIntermediateStacker

Specifies whether or not the CDM supports stacking items to an intermediate position before the items are moved to the exit position. If this value is TRUE, the field *bPresent* of the WFS_CMD_CDM_DISPENSE command can be set to FALSE.

blItemsTakenSensor

Specifies whether the CDM can detect when items at the exit position are taken by the user. If set to TRUE the Service Provider generates an accompanying WFS_SRVE_CDM_ITEMSTAKEN event. If set to FALSE this event is not generated. This field applies to all output positions.

fwPositions

Specifies the CDM output positions which are available as a combination of the following flags:

Value	Meaning
WFS_CDM_POSLEFT	The CDM has a left output position.
WFS_CDM_POSRIGHT	The CDM has a right output position.
WFS_CDM_POSCENTER	The CDM has a center output position.
WFS_CDM_POSTOP	The CDM has a top output position.
WFS_CDM_POSBOTTOM	The CDM has a bottom output position.
WFS_CDM_POSFRONT	The CDM has a front output position.
WFS_CDM_POSREAR	The CDM has a rear output position.

fwMoveItems

Specifies the CDM move item options which are available as a combination of the following flags:

Value	Meaning
WFS_CDM_FROMCU	The CDM can move dispense items from the cash units to the intermediate stacker while there are items on the transport.
WFS_CDM_TOCU	The CDM can retract items to the cash units while there are items on the intermediate stacker.
WFS_CDM_TOTRANSPORT	The CDM can retract items to the transport while there are items on the intermediate stacker.
WFS_CDM_TOSTACKER	The CDM can dispense items from the cash units to the intermediate stacker while there are already items on the intermediate stacker that have not been in customer access. Items remaining on the stacker from a previous dispense may first need to be rejected explicitly by the application if they are not to be presented.

fwExchangeType

Specifies the type of cash unit exchange operations supported by the CDM as a combination of the following flags:

Value	Meaning
WFS_CDM_EXBYHAND	The CDM supports manual replenishment either by filling the cash unit by hand or by replacing the cash unit.
WFS_CDM_EXTOCASSETTES	The CDM supports moving items from the replenishment cash unit to another cash unit.

lpszExtra

Pointer to a list of vendor-specific, or any other extended, information. The information is returned as a series of “key=value” strings so that it is easily extensible by Service Providers. Each string is null-terminated, with the final string terminating with two null characters. An empty list may be indicated by either a NULL pointer or a pointer to two consecutive null characters.

dwGuidLights [...]

Specifies which guidance lights are available. A number of guidance light positions are defined below. Vendor specific guidance lights are defined starting from the end of the array. The maximum guidance light index is WFS_CDM_GUIDLIGHTS_MAX.

[In addition to supporting specific flash rates and colors, some guidance lights also have the capability to show directional movement representing “exit”. The “exit” state gives the impression of ejection from a device to a user and would be used for retrieving media from the device.](#)

The elements of this array are specified as a combination of the following flags and indicate all of the possible flash rates (type B) ~~and~~ colors (type C) and directions (type D) that the guidance light indicator is capable of handling. If the guidance light indicator only supports one color then no value of type C is returned. If the guidance light indicator does not support direction then no value of type D is returned. A value of WFS_CDM_GUIDANCE_NOT_AVAILABLE indicates that the device has no guidance light indicator or the device controls the light directly with no application control possible.

Value	Meaning	Type
WFS_CDM_GUIDANCE_NOT_AVAILABLE	There is no guidance light control available at this position.	A
WFS_CDM_GUIDANCE_OFF	The light can be off.	B
WFS_CDM_GUIDANCE_SLOW_FLASH	The light can blink slowly.	B
WFS_CDM_GUIDANCE_MEDIUM_FLASH	The light can blink medium frequency.	B
WFS_CDM_GUIDANCE_QUICK_FLASH	The light can blink quickly.	B
WFS_CDM_GUIDANCE_CONTINUOUS	The light can be continuous (steady).	B
WFS_CDM_GUIDANCE_RED	The light can be red.	C
WFS_CDM_GUIDANCE_GREEN	The light can be green.	C
WFS_CDM_GUIDANCE_YELLOW	The light can be yellow.	C
WFS_CDM_GUIDANCE_BLUE	The light can be blue.	C
WFS_CDM_GUIDANCE_CYAN	The light can be cyan.	C
WFS_CDM_GUIDANCE_MAGENTA	The light can be magenta.	C
WFS_CDM_GUIDANCE_WHITE	The light can be white.	C
<u>WFS_CDM_GUIDANCE_EXIT</u>	<u>The light can be in the exit state.</u>	<u>D</u>

Each array index represents an output position in the CDM. The elements are accessed using the following definitions for the index value:

Value	Meaning
WFS_CDM_GUIDANCE_POSOUTNULL	The default output position.
WFS_CDM_GUIDANCE_POSOUTLEFT	Left output position.
WFS_CDM_GUIDANCE_POSOUTRIGHT	Right output position.
WFS_CDM_GUIDANCE_POSOUTCENTER	Center output position.
WFS_CDM_GUIDANCE_POSOUTTOP	Top output position.
WFS_CDM_GUIDANCE_POSOUTBOTTOM	Bottom output position.
WFS_CDM_GUIDANCE_POSOUTFRONT	Front output position.
WFS_CDM_GUIDANCE_POSOUTREAR	Rear output position.

bPowerSaveControl

Specifies whether power saving control is available. This can either be TRUE if available or FALSE if not available.

bPrepareDispense

On some hardware it can take a significant amount of time for the dispenser to get ready to dispense media. On this type of hardware the WFS_CMD_CDM_PREPARE_DISPENSE command can be used to improve transaction performance. This flag indicates if the hardware requires the application to use the WFS_CMD_CDM_PREPARE_DISPENSE command to maximize transaction performance. If this flag is TRUE then the WFS_CMD_CDM_PREPARE_DISPENSE command is supported and can be used to improve transaction performance. If this flag is FALSE then the WFS_CMD_CDM_PREPARE_DISPENSE command is not supported.

bAntiFraudModule

Specifies whether the anti-fraud module is available. This can either be TRUE if available or FALSE if not available.

dwItemInfoTypes

Specifies the types of information that can be retrieved through the WFS_INF_CDM_GET_ITEM_INFO command as a combination of the following flags:

Value	Meaning
<u>WFS_CDM_ITEM_SERIALNUMBER</u>	<u>Serial Number of the item.</u>
<u>WFS_CDM_ITEM_SIGNATURE</u>	<u>Signature of the item.</u>
<u>WFS_CDM_ITEM_IMAGEFILE</u>	<u>Image file of the item.</u>

bBlacklist

Specifies whether the device has the capability to maintain a blacklist of serial numbers as well as supporting the associated operations. This can either be TRUE if the device has the capability or FALSE if it does not.

lpdwSynchronizableCommands

Pointer to a zero-terminated list of DWORDs which contains the execute command IDs that can be synchronized. If no execute command can be synchronized then this parameter will be NULL.

Error Codes	Only the generic error codes defined in [Ref. 1] can be generated by this command.
Comments	Applications which rely on the <i>lpSzExtra</i> field may not be device or vendor-independent.

4.3 WFS_INF_CDM_CASH_UNIT_INFO

Description This command is used to obtain information regarding the status and contents of the cash units in the CDM.

Where a logical cash unit is configured but there is no corresponding physical cash unit currently present in the device, information about the missing cash unit will still be returned in the *lppList* field of the output parameter. The status of the cash unit will be reported as WFS_CDM_STATCUMISSING.

It is possible that one logical cash unit may be associated with more than one physical cash unit. In this case, the number of cash unit structures returned in *lpCashUnitInfo* will reflect the number of logical cash units in the CDM. That is, if a system contains four physical cash units but two of these are treated as one logical cash unit, *lpCashUnitInfo* will contain information about the three logical cash units and a *usCount* of 3. Information about the physical cash unit(s) associated with a logical cash unit is contained in the WFS_CDM_CASHUNIT structure representing the logical cash unit.

It is also possible that multiple logical cash units may be associated with one physical cash unit. This should only occur if the physical cash unit is capable of handling this situation, i.e. if it can store multiple denominations and report meaningful count and replenishment information for each denomination or if it can store retracted and rejected items as separate logical units and report meaningful count and replenishment information for each of them. In this case the information returned in *lpCashUnitInfo* will again reflect the number of logical cash units in the CDM.

Logical Types

A cash unit may have a logical type. A logical type is based on the value of the following fields of the WFS_CDM_CASHUNIT structure:

lpszCashUnitName
usType
cCurrencyID
ulValues

A logical type of cash unit may be associated with more than one physical cash unit. The logical type is distinct from the logical number (*usNumber*), i.e. *usNumber* does not refer to the logical cassette type.

Counts

Item counts are typically based on software counts and therefore may not represent the actual number of items in the cash unit. Persistent values are maintained through power failures, open sessions, close session and system resets. If a cash unit is shared between the CDM and CIM device class, then CDM operations will result in count changes in the CIM cash unit structure and vice versa. All counts are reported consistently on both interfaces at all times.

On cash units that dispense items, if *ulCount* (on logical and physical cash units) reaches zero it will not decrement further but will remain at zero. When *ulCount* reaches zero no further dispense or denominate operations will be possible using that cash unit, unless the Service Provider provides a configuration option to continue using cash units when *ulCount* reaches zero. The default setting for any such configuration parameter must be to stop using the cash unit when this value reaches zero. If the Service Provider is configured such that the cash unit can still be used when *ulCount* reaches zero then WFS_CDM_STATCUEMPTY should not be generated when *ulCount* reaches zero, rather it should be generated when all physical cash units associated with the logical cash unit are physically empty. On recyclers, the Service Provider should not be configured to keep using the cash unit when *ulCount* is zero if the value in *ulCount* is used by any part of the application, as it may not be accurate. However, if the Service Provider is configured to keep using the cash unit when *ulCount* reaches zero, then the number of notes in the cash unit can be determined relative to *ulInitialCount* using *ulDispensedCount*, *ulRetractedCount* and the CIM *ulCashInCount*, e.g. Number of Notes = *ulInitialCount* – *ulDispensedCount* + *ulRetractedCount* + CIM::*ulCashInCount*.

~~Threshold Events~~

~~The threshold event WFS_USRE_CDM_CASHUNITTHRESHOLD can be triggered either by hardware sensors in the device or by the *ulCount* reaching the *ulMinimum* or *ulMaximum* value.~~

~~The application can check if the device has this capability by querying the *bHardwareSensor* field of the physical cash unit structure. If any of the physical cash units associated with the logical cash unit have this capability, then threshold events based on hardware sensors can be triggered.~~

~~In the situation where the cash unit is associated with multiple physical cash units, if the Service Provider has the capability, the WFS_SRVE_CDM_CASHUNITINFOCHANGED event may be generated when any of the physical cash units reaches the threshold. When the final physical cash unit reaches the threshold, the WFS_USRE_CDM_CASHUNITTHRESHOLD event will be generated.~~

Exchanges

If a physical cash unit is inserted (including removal followed by a reinsertion) when the device is not in the exchange state the *usStatus* of the physical cash unit will be set to WFS_CDM_STATCUMANIP and the values of the physical cash unit prior to its' removal will be returned in any subsequent WFS_INF_CDM_CASH_UNIT_INFO command. The physical cash unit will not be used in any operation. The application must perform an exchange operation specifying the new values for the physical cash unit in order to recover the situation.

On recycling and retract units the counts and status are consistently reported on both the CDM and CIM interfaces. When a value is changed through an exchange on one interface it is also changed on the other.

Recyclers

The CDM interface does not report cash-in only cash units but does report cash units which are shared with the CIM, i.e. recycling cash units (WFS_CDM_TYPERECYCLING) and reject/retract cash units (WFS_CDM_TYPEREJECTCASSETTE / WFS_CDM_TYPERETRACTCASSETTE). The CIM interface reports all cash units of all types, including those that can only be used by commands on the CDM interface.

Input Param None.

Output Param LPWFSCDMCUINFO lpCashUnitInfo;

```
typedef struct _wfs_cdm_cu_info
{
    USHORT                usTellerID;
    USHORT                usCount;
    LPWFSCDMCASHUNIT      *lppList;
} WFS_CDMCUINFO, *LPWFSCDMCUINFO;
```

usTellerID

This field is not used in this command and is always zero.

usCount

Specifies the number of cash unit structures returned.

lppList

Pointer to an array of pointers to WFS_CDMCASHUNIT structures:

```
typedef struct _wfs_cdm_cashunit
{
    USHORT                usNumber;
    USHORT                usType;
    LPSTR                 lpszCashUnitName;
    CHAR                  cUnitID[5];
    CHAR                  cCurrencyID[3];
    ULONG                 ulValues;
    ULONG                 ulInitialCount;
    ULONG                 ulCount;
    ULONG                 ulRejectCount;
    ULONG                 ulMinimum;
    ULONG                 ulMaximum;
    BOOL                  bAppLock;
    USHORT                usStatus;
    USHORT                usNumPhysicalCUs;
    LPWFSCDMPHCU          *lppPhysical;
    ULONG                 ulDispensedCount;
    ULONG                 ulPresentedCount;
    ULONG                 ulRetractedCount;
} WFS_CDM_CASHUNIT, *LPWFSCDM_CASHUNIT;
```

usNumber

Index number of the cash unit structure. Each structure has a unique logical number starting with a value of one (1) for the first structure, and incrementing by one for each subsequent structure.

usType

Type of cash unit. Possible values are:

Value	Meaning
WFS_CDM_TYPENA	Not applicable. Typically means cash unit is missing.
WFS_CDM_TYPEREJECTCASSETTE	Reject cash unit. This type will also indicate a combined reject/retract cash unit.
WFS_CDM_TYPEBILLCASSETTE	Cash unit containing bills.
WFS_CDM_TYPECOINCYLINDER	Coin cylinder.
WFS_CDM_TYPECOINDISPENSER	Coin dispenser as a whole unit.
WFS_CDM_TYPERETRACTCASSETTE	Retract cash unit.
WFS_CDM_TYPECOUPON	Cash unit containing coupons or advertising material.
WFS_CDM_TYPEDOCUMENT	Cash unit containing documents.
WFS_CDM_TYPEREPCONTAINER	Replenishment container. A cash unit can be refilled from a replenishment container.
WFS_CDM_TYPERECYCLING	Recycling cash unit. This unit is only present when the device is a compound device with a CIM.

lpszCashUnitName

A name which helps to identify the logical type of the cash unit. This is especially useful in the case of cash units of type WFS_CDM_TYPEDOCUMENT where different documents can have the same currency and value. For example, travelers checks and bank checks may have the same currency and value but still need to be identifiable as different types of document. Where this value is not relevant (e.g. in bill cash units) the pointer will be NULL. This value is persistent.

cUnitID

The Cash Unit Identifier.

cCurrencyID

A three character array storing the ISO format [Ref. 2] Currency ID. This value will be an array of three ASCII 0x20h characters for cash units which contain items of more than one currency type or items to which currency is not applicable. If the *usStatus* field for this cash unit is WFS_CDM_STATCUNOVAL it is the responsibility of the application to assign a value to this field. This value is persistent.

ulValues

Supplies the value of a single item in the cash unit. This value is expressed in minimum dispense units (see section WFS_INF_CDM_CURRENCY_EXP). If the *cCurrencyID* field for this cash unit is an array of three ASCII 0x20h characters, then this field will contain zero. If the *usStatus* field for this cash unit is WFS_CDM_STATCUNOVAL it is the responsibility of the application to assign a value to this field. This value is persistent.

ulInitialCount

Initial number of items contained in the cash unit. This value is persistent.

ulCount

The meaning of this count depends on the type of cash unit. This value is persistent.

For all cash units except retract cash units (*usType* is not WFS_CDM_TYPERETRACTCASSETTE) this value specifies the number of items inside all the physical cash units associated with this cash unit.

For all dispensing cash units (*usType* is WFS_CDM_TYPEBILLCASSETTE, WFS_CDM_TYPECOINCYLINDER, WFS_CDM_TYPECOINDISPENSER, WFS_CDM_TYPECOUPON, WFS_CDM_TYPEREDOCUMENT or WFS_CDM_TYPERECYCLING), this value includes any items from the physical cash units not yet presented to the customer. This count is only decremented when the items are either known to be in customer access or successfully rejected.

If the cash unit is usable from the CIM interface (*usType* is WFS_CDM_TYPERECYCLING, WFS_CDM_TYPERETRACTCASSETTE or WFS_CDM_TYPEREJECTCASSETTE) then this value will be incremented as a result of a cash-in operation.

Note that for a reject cash unit (*usType* is WFS_CDM_TYPEREJECTCASSETTE), this value is unreliable, since the typical reason for dumping items to the reject cash unit is a suspected count failure.

For a retract cash unit (*usType* is WFS_CDM_TYPERETRACTCASSETTE) this value specifies the number of retract operations (CDM commands, CIM commands and error recoveries) which result in items entering the cash unit.

ulRejectCount

The number of items from this cash unit which are in the reject bin, and which have not been accessible to a customer. This value may be unreliable, since the typical reason for dumping items to the reject cash unit is a suspected pick failure. For reject and retract cash units (*usType* is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE) this field does not apply and will be reported as zero. This value is persistent.

ulMinimum

This field is not applicable to retract and reject cash units. For all other cash units, when *ulCount* reaches this value the threshold event WFS_USRE_CDM_CASHUNITTHRESHOLD (WFS_CDM_STATCULOW) will be generated. If this value is non-zero then hardware sensors in the device do not trigger threshold events. If this value is zero then hardware sensors ~~may~~ will trigger threshold events if *bHardwareSensor* is TRUE. This value is persistent.

ulMaximum

This field is only applicable to retract and reject cash units. When *ulCount* reaches this value the threshold event WFS_USRE_CDM_CASHUNITTHRESHOLD (WFS_CDM_STATCUHIGH) will be generated. If this value is non-zero then hardware sensors in the device do not trigger threshold events. If this value is zero then hardware sensors ~~may~~ will trigger threshold events if *bHardwareSensor* is TRUE. This value is persistent.

bAppLock

This field does not apply to reject or retract cash units. If this value is TRUE items cannot be dispensed from the cash unit. If this value is TRUE and the application attempts to dispense from the cash unit a WFS_EXEE_CDM_CASHUNITERROR event will be generated and a WFS_ERR_CDM_CASHUNITERROR code will be returned. This value is persistent.

usStatus

Supplies the status of the cash unit as one of the following values:

Value	Meaning
WFS_CDM_STATCUOK	The cash unit is in a good state.
WFS_CDM_STATCUFULL	The cash unit is full. This value only applies to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE.
WFS_CDM_STATCUHIGH	The cash unit is almost full (i.e. reached or exceeded the threshold defined by <i>ulMaximum</i>). This value only applies to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE.
WFS_CDM_STATCULOW	The cash unit is almost empty (i.e. reached or below the threshold defined by <i>ulMinimum</i>). This value does not apply to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE.
WFS_CDM_STATCUEMPTY	The cash unit is empty, or insufficient items in the cash unit are preventing further dispense operations. This value does not apply to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE.
WFS_CDM_STATCUINOP	The cash unit is inoperative.
WFS_CDM_STATCUMISSING	The cash unit is missing.
WFS_CDM_STATCUNOVAL	The values of the specified cash unit are not available.
WFS_CDM_STATCUNOREF	There is no reference value available for the notes in this cash unit. The cash unit has not been calibrated.
WFS_CDM_STATCUMANIP	The cash unit has been inserted (including removal followed by a reinsertion) when the device was not in the exchange state. This cash unit cannot be dispensed from.

ulDispensedCount

The number of items dispensed from all the physical cash units associated with this cash unit. This count is incremented when the items are removed from any of the associated physical cash units. This count includes any items that were rejected during the dispense operation. This field is always zero for cash units with a *usType* of WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE. This value is persistent.

ulPresentedCount

The number of items from all the physical cash units associated with this cash unit that have been presented to the customer. This count is incremented when the items are presented to the customer. If it is unknown if a customer has been presented with the items, then this count is not updated. This field is always zero for cash units with a *usType* of WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE. This value is persistent.

ulRetractedCount

The number of items that have been accessible to a customer and retracted into all the physical cash units associated with this cash unit. This value is persistent.

usNumPhysicalCUs

The number of physical cash unit structures returned in the following *lppPhysical* array. This number must be at least 1.

lppPhysical

Pointer to an array of pointers to WFS_CDM_PHCU structures:

```
typedef struct _wfs_cdm_physicalcu
{
    LPSTR                lpPhysicalPositionName;
    CHAR                cUnitID[5];
    ULONG               ulInitialCount;
    ULONG               ulCount;
    ULONG               ulRejectCount;
    ULONG               ulMaximum;
    USHORT              usPStatus;
    BOOL                bHardwareSensor;
    ULONG               ulDispensedCount;
    ULONG               ulPresentedCount;
    ULONG               ulRetractedCount;
} WFS_CDM_PHCU, *LPWFS_CDM_PHCU;
```

lpPhysicalPositionName

A name identifying the physical location of the cash unit within the CDM. This field can be used by CDMs which are compound with a CIM to identify shared cash units.

cUnitID

A 5 character array uniquely identifying the physical cash unit.

ulInitialCount

Initial number of items contained in the cash unit. This value is persistent.

ulCount

As defined by the logical *ulCount* description but applies to a single physical cash unit, but with the following exceptions:

This count does not include items dispensed but not yet presented.

On cash units belonging to logical cash units with *usType* set to WFS_CDM_TYPERETRACTCASSETTE the physical count represents the number of items, unless the device cannot count items during a retract, in which case this count will be zero.

This value is persistent.

ulRejectCount

As defined by the logical *ulRejectCount* description but applies to a single physical cash unit. This value is persistent.

ulMaximum

The maximum number of items the cash unit can hold. This is only for informational purposes. No threshold event WFS_USRE_CDM_CASHUNITTHRESHOLD will be generated. This value is persistent.

usPStatus

Supplies the status of the physical cash unit as one of the following values:

Value	Meaning
WFS_CDM_STATCUOK	The cash unit is in a good state.
WFS_CDM_STATCUFULL	The cash unit is full. This value only applies to cash units where <i>usType</i> is WFS_CDM_TYPEREJECT-CASSETTE or WFS_CDM_TYPERETRACTCASSETTE.

WFS_CDM_STATCUHIGH	The cash unit is almost full (reached or exceeded threshold defined by <i>ulMaximum</i>). This value only applies to cash units where <i>usType</i> is WFS_CDM_TYPEREJECT-CASSETTE or WFS_CDM_TYPERETRACT-CASSETTE.
WFS_CDM_STATCULOW	The cash unit is almost empty. This value does not apply to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACT-CASSETTE.
WFS_CDM_STATCUEMPTY	The cash unit is empty, or insufficient items in the cash unit are preventing further dispense operations. This value does not apply to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACT-CASSETTE.
WFS_CDM_STATCUINOP	The cash unit is inoperative.
WFS_CDM_STATCUMISSING	The cash unit is missing. The cash unit has been removed and is physically not present in the machine.
WFS_CDM_STATCUNOVAL	The values of the specified cash unit are not available.
WFS_CDM_STATCUNOREF	There is no reference value available for the notes in this cash unit. The cash unit has not been calibrated.
WFS_CDM_STATCUMANIP	The cash unit has been inserted (including removal followed by a reinsertion) when the device was not in the exchange state. This cash unit cannot be dispensed from.

bHardwareSensor

Specifies whether or not threshold events can be generated based on hardware sensors in the device. If this value is TRUE for any of the physical cash units related to a logical cash unit then threshold events may be generated based on hardware sensors as opposed to logical counts.

ulDispensedCount

As defined by the logical *ulDispensedCount* description but applies to a single physical cash unit. This value is zero if the h/w does not support physical counts. This value is persistent.

ulPresentedCount

As defined by the logical *ulPresentedCount* description but applies to a single physical cash unit. This value is zero if the h/w does not support physical counts. This value is persistent.

ulRetractedCount

As defined by the logical *ulRetractedCount* description but applies to a single physical cash unit. This value is zero if the h/w does not support physical counts. This value is persistent.

Error Codes	Only the generic error codes defined in [Ref. 1] can be generated by this command.
Comments	None.

4.4 WFS_INF_CDM_TELLER_INFO

Description This command only applies to Teller CDMs. It allows the application to obtain counts for each currency assigned to the teller. These counts represent the total amount of currency dispensed by the teller in all transactions.

This command also enables the application to obtain the position assigned to each teller. If the input parameter is NULL, this command will return information for all tellers and all currencies. The teller information is persistent.

Input Param LPWFSCDMTELLERINFO lpTellerInfo;

```
typedef struct _wfs_cdm_teller_info
{
    USHORT                usTellerID;
    CHAR                  cCurrencyID[3];
} WFS_CDMTELLERINFO, *LPWFSCDMTELLERINFO;
```

usTellerID

Identification of the teller. If the value of *usTellerID* is not valid the error WFS_ERR_CDM_INVALIDTELLERID is reported.

cCurrencyID

Three character ISO format currency identifier [Ref 2].

This field can be an array of three ASCII 0x20 characters. In this case information on all currencies will be returned.

Output Param LPWFSCDMTELLERDETAILS *lppTellerDetails;

Pointer to a NULL-terminated array of pointers to WFS_CDMTELLERDETAILS structures.

```
typedef struct _wfs_cdm_teller_details
{
    USHORT                usTellerID;
    ULONG                ulInputPosition;
    WORD                 fwOutputPosition;
    LPWFSCDMTELLERTOTALS *lppTellerTotals;
} WFS_CDMTELLERDETAILS, *LPWFSCDMTELLERDETAILS;
```

usTellerID

Identification of the teller.

ulInputPosition

The input position assigned to the teller for cash entry. This is only for compatibility except when the device is a compound device. The value is specified by one of the following values:

Value	Meaning
WFS_CDM_POSNULL	No position is assigned to the teller.
WFS_CDM_POSINLEFT	Left position is assigned to the teller.
WFS_CDM_POSINRIGHT	Right position is assigned to the teller.
WFS_CDM_POSINCENTER	Center position is assigned to the teller.
WFS_CDM_POSINTOP	Top position is assigned to the teller.
WFS_CDM_POSINBOTTOM	Bottom position is assigned to the teller.
WFS_CDM_POSINFRONT	Front position is assigned to the teller.
WFS_CDM_POSINREAR	Rear position is assigned to the teller.

fwOutputPosition

The output position from which cash is presented to the teller. The value is specified by one of the following values:

Value	Meaning
WFS_CDM_POSNULL	No position is assigned to the teller.
WFS_CDM_POSLEFT	Left position is assigned to the teller.
WFS_CDM_POSRIGHT	Right position is assigned to the teller.
WFS_CDM_POSCENTER	Center position is assigned to the teller.
WFS_CDM_POSTOP	Top position is assigned to the teller.
WFS_CDM_POSBOTTOM	Bottom position is assigned to the teller.
WFS_CDM_POSFRONT	Front position is assigned to the teller.

WFS_CDM_POSREAR

Rear position is assigned to the teller.

lppTellerTotals

Pointer to a NULL-terminated array of pointers to WFS_CDM_TELLERTOTALS structures.

```
typedef struct _wfs_cdm_teller_totals
{
    CHAR                cCurrencyID[3];
    ULONG               ulItemsReceived;
    ULONG               ulItemsDispensed;
    ULONG               ulCoinsReceived;
    ULONG               ulCoinsDispensed;
    ULONG               ulCashBoxReceived;
    ULONG               ulCashBoxDispensed;
} WFS_CDM_TELLERTOTALS, *LPWFS_CDM_TELLERTOTALS;
```

cCurrencyID

Three character ISO format currency identifier [Ref. 2].

ulItemsReceived

The total amount of items (other than coins) of the specified currency accepted. The amount is expressed in minimum dispense units (see section WFS_INF_CDM_CURRENCY_EXP).

ulItemsDispensed

The total amount of items (other than coins) of the specified currency dispensed. The amount is expressed in minimum dispense units (see section WFS_INF_CDM_CURRENCY_EXP).

ulCoinsReceived

The total amount of coin currency accepted. The amount is expressed in minimum dispense units (see section WFS_INF_CDM_CURRENCY_EXP).

ulCoinsDispensed

The total amount of coin currency dispensed. The amount is expressed in minimum dispense units (see section WFS_INF_CDM_CURRENCY_EXP).

ulCashBoxReceived

The total amount of cash box currency accepted. The amount is expressed in minimum dispense units (see section WFS_INF_CDM_CURRENCY_EXP).

ulCashBoxDispensed

The total amount of cash box currency dispensed. The amount is expressed in minimum dispense units (see section WFS_INF_CDM_CURRENCY_EXP).

Error Codes

In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDCURRENCY	Specified currency not currently available.
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID.

Comments

None.

4.5 WFS_INF_CDM_CURRENCY_EXP

Description	This command returns each exponent assigned to each currency known to the Service Provider.
Input Param	None.
Output Param	<p>LPWFSCDMCURRENCYEXP *lppCurrencyExp;</p> <p>Pointer to a NULL-terminated array of pointers to WFS_CDM_CURRENCY_EXP structures:</p> <pre>typedef struct _wfs_cdm_currency_exp { CHAR cCurrencyID[3]; SHORT sExponent; } WFS_CDM_CURRENCY_EXP, *LPWFSCDMCURRENCY_EXP;</pre> <p><i>cCurrencyID</i> Currency identifier in ISO 4217 format [Ref 2].</p> <p><i>sExponent</i> Currency exponent in ISO 4217 format [Ref. 2].</p>
Error Codes	Only the generic error codes defined in [Ref. 1] can be generated by this command.
Comments	<p>For each currency ISO 4217 defines the currency identifier (a three character code) and a currency unit (e.g. European Euro, Japanese Yen). In the interface defined by this specification, every money amount is specified in terms of multiples of the minimum dispense unit, which is equal to the currency unit times ten to the power of the currency exponent. Thus an amount parameter relates to the actual cash amount as follows:</p> $\text{<cash_amount>} = \text{<money_amount_parameter>} * 10^{\text{<sExponent>}}$ <p><u>Example #1 - Euro</u> Currency identifier is 'EUR' Currency unit is 1 Euro (= 100 Cent)</p> <p>A Service Provider is developed for an ATM that can dispense coins down to one Cent. The currency exponent (<i>sExponent</i>) is set to -2 (minus two), so the minimum dispense unit is one Cent ($1 * 10^{-2}$ Euro); all amounts at the XFS interface are in Cent. Thus a money amount parameter of 10050 is 100 Euro and 50 Cent.</p> <p><u>Example #2 - Japan</u> Currency identifier is 'JPY' Currency unit is 1 Japanese Yen</p> <p>A Service Provider is required to dispense a minimum amount of 1000 Yen. The currency exponent (<i>sExponent</i>) is set to +3 (plus three), so the minimum dispense unit is 1000 Yen; all amounts at the XFS interface are in multiples of 1000 Yen. Thus an amount parameter of 15 is 15000 Yen.</p>

4.6 WFS_INF_CDM_MIX_TYPES

Description This command is used to obtain a list of supported mix algorithms and available house mix tables.

Input Param None.

Output Param LPWFSCDMMIXTYPE *lppMixTypes;

Pointer to a NULL-terminated array of pointers to WFSCDMMIXTYPE structures:

```
typedef struct _wfs_cdm_mix_type
{
    USHORT                usMixNumber;
    USHORT                usMixType;
    USHORT                usSubType;
    LPSTR                 lpszName;
} WFSCDMMIXTYPE, *LPWFSCDMMIXTYPE;
```

usMixNumber

Number identifying the mix algorithm or the house mix table. This number can be passed to the WFS_INF_CDM_MIX_TABLE, WFS_CMD_CDM_DISPENSE and WFS_CMD_CDM_DENOMINATE commands.

usMixType

Specifies whether the mix type is an algorithm or a house mix table. Possible values are:

Value	Meaning
WFS_CDM_MIXALGORITHM	Mix algorithm.
WFS_CDM_MIXTABLE	Mix table.

usSubType

Contains a vendor-defined number that identifies the type of algorithm. Individual vendor-defined mix algorithms are defined above hexadecimal 7FFF. Mix algorithms which are provided by the Service Provider are in the range hexadecimal 8000 - 8FFF. Application defined mix algorithms start at hexadecimal 9000. All numbers below 8000 hexadecimal are reserved. If *usMixType* is WFS_CDM_MIXTABLE, this value will be zero. Predefined values are:

Value	Meaning
WFS_CDM_MIX_MINIMUM_NUMBER_OF_BILLS	Select a mix requiring the minimum possible number of items.
WFS_CDM_MIX_EQUAL_EMPTYING_OF_CASH_UNITS	The denomination is selected based upon criteria which ensure that over the course of its operation the CDM cash units will empty as far as possible at the same rate and will therefore go LOW and then EMPTY at approximately the same time.
WFS_CDM_MIX_MAXIMUM_NUMBER_OF_CASH_UNITS	The denomination will be selected based upon criteria which ensures the maximum number of different logical cash units are used.

lpszName

Points to the name of the table/algorithm used.

Error Codes Only the generic error codes defined in [Ref. 1] can be generated by this command.

Comments None.

4.7 WFS_INF_CDM_MIX_TABLE

Description This command is used to obtain the house mix table specified by the supplied mix number.

Input Param LPUSHORT *lpusMixNumber*;

lpusMixNumber

Pointer to the number of the requested house mix table.

Output Param LPWFSCDMMIXTABLE *lpMixTable*;

```
typedef struct _wfs_cdm_mix_table
{
    USHORT                usMixNumber;
    LPSTR                 lpszName;
    USHORT                usRows;
    USHORT                usCols;
    LPULONG                lpulMixHeader;
    LPWFSCDMMIXROW        *lppMixRows;
} WFS_CDM_MIX_TABLE, *LPWFSCDMMIXTABLE;
```

usMixNumber

Number identifying the house mix table.

lpszName

Points to the name of the house mix table.

usRows

Number of rows in the house mix table. There is at least one row for each distinct total amount to be denominated. If there is more than one row for an amount the first row is taken that is dispensable according to the current status of the cash units.

usCols

Number of columns in the house mix table. There is one column for each distinct item value included in the mix.

lpulMixHeader

Pointer to an array of length *usCols* of unsigned longs; each element defines the value of the item corresponding to its respective column (see section WFS_INF_CDM_CURRENCY_EXP).

lppMixRows

Pointer to an array (of length *usRows*) of pointers to WFS_CDM_MIX_ROW structures:

```
typedef struct _wfs_cdm_mix_row
{
    ULONG                ulAmount;
    LPUSHORT             lpusMixture;
} WFS_CDM_MIX_ROW, *LPWFSCDMMIXROW;
```

ulAmount

Amount denominated by this mix row (see section WFS_INF_CDM_CURRENCY_EXP).

lpusMixture

Pointer to a mix row, an array of length *usCols* of USHORTs; each element defines the quantity of each item denomination in the mix used in the denomination of *ulAmount*.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDMIXNUMBER	The <i>lpusMixNumber</i> parameter does not correspond to a defined mix table.

Comments None.

4.8 WFS_INF_CDM_PRESENT_STATUS

Description This command is used to obtain the status of the most recent attempt to dispense and/or present items to the customer. The items may have been dispensed and/or presented as a result of the WFS_CMD_CDM_PRESENT or WFS_CMD_CDM_DISPENSE command. This status is not updated as a result of any other command that can dispense/present items.

This value is persistent and is valid until the next time an attempt is made to present or dispense items to the customer.

The denominations reported by this command may not accurately reflect the operation if the cash units have been re-configured (e.g. if the values associated with a cash unit are changed, or new cash units are configured).

Input Param LPWORD lpfwPosition;

lpfwPosition

Pointer to the output position the items were presented or dispensed to as one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The items were presented according to the default configuration.
WFS_CDM_POSLEFT	The items were presented to the left output position.
WFS_CDM_POSRIGHT	The items were presented to the right output position.
WFS_CDM_POSCENTER	The items were presented to the center output position.
WFS_CDM_POSTOP	The items were presented to the top output position.
WFS_CDM_POSBOTTOM	The items were presented to the bottom output position.
WFS_CDM_POSFRONT	The items were presented to the front output position.
WFS_CDM_POSREAR	The items were presented to the rear output position.

Output Param LPWFSCDMPRESENTSTATUS lpPresentStatus;

```
typedef struct _wfs_cdm_present_status
{
    LPWFSCDMDENOMINATION    lpDenomination;
    WORD                    wPresentState;
    LPSTR                    lpszExtra;
} WFS_CDMPRESENTSTATUS, *LPWFSCDMPRESENTSTATUS;
```

lpDenomination

Pointer to a WFS_CDMDENOMINATION structure which contains the amount dispensed and the number of items dispensed from each cash unit. For a description of the WFS_CDMDENOMINATION structure see the definition of the command WFS_CMD_CDM_DENOMINATE. [Where the capability fwMoveItems reports WFS_CDM_TOSTACKER this value is cumulative across a series of WFS_CMD_CDM_DISPENSE calls that add additional items to the stacker.](#)

Where mixed currencies were dispensed the *ulAmount* field in the returned denomination structure will be zero and the *cCurrencyID* field will be set to three ASCII 0x20 characters.

wPresentState

Supplies the status of the last dispense or present operation. Possible values are:

Value	Meaning
WFS_CDM_PRESENTED	The items were presented. This status is set as soon as the customer has access to the items.
WFS_CDM_NOTPRESENTED	The customer has not had access to the items.

WFS_CDM_UNKNOWN	It is not known if the customer had access to the items.
-----------------	--

lpzExtra
Pointer to a list of vendor-specific, or any other extended, information. The information is returned as a series of “*key=value*” strings so that it is easily extensible by Service Providers. Each string is null-terminated, with the final string terminating with two null characters. An empty list may be indicated by either a NULL pointer or a pointer to two consecutive null characters.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_UNSUPPOSITION	The specified output position is not supported.

Comments None.

|

4.9 WFS INF CDM GET ITEM INFO

Description This command is used to get information about the number of level 1 / level 2 / level 3 / level 4 notes dispensed and the number of level 2 / level 3 / level 4 signatures created. This information is available from the point where the first WFS_EXEE_CDM_INFO_AVAILABLE event is generated until one of the following CDM commands is executed:

WFS_CMD_CDM_DISPENSE, WFS_CMD_CDM_COUNT, WFS_CMD_CDM_PRESENT,
WFS_CMD_CDM_RETRACT, WFS_CMD_CDM_REJECT,
WFS_CMD_CDM_OPEN_SHUTTER, WFS_CMD_CDM_CLOSE_SHUTTER,
WFS_CMD_CDM_RESET, WFS_CMD_CDM_START_EXCHANGE,
WFS_CMD_CDM_END_EXCHANGE, WFS_CMD_CDM_CALIBRATE_CASH_UNIT,
WFS_CMD_CDM_TEST_CASH_UNITS.

Additionally for a recycler, the following CIM commands will also invalidate the information:

WFS_CMD_CIM_CASH_IN_START, WFS_CMD_CIM_CASH_IN,
WFS_CMD_CIM_CASH_IN_ROLLBACK, WFS_CMD_CIM_CASH_IN_END,
WFS_CMD_CIM_RETRACT, WFS_CMD_CIM_RESET,
WFS_CMD_CIM_START_EXCHANGE, WFS_CMD_CIM_END_EXCHANGE,
WFS_CMD_CIM_CREATE_P6_SIGNATURE, WFS_CMD_CIM_REPLENISH,
WFS_CMD_CIM_CASH_UNIT_COUNT.

This command is used to retrieve the required information on an individual item basis. Applications should loop retrieving the information for each index and for each level reported with the WFS_EXEE_CDM_INFO_AVAILABLE event.

Input Param LPWFSCDMGETITEMINFO lpGetItemInfo:

```
typedef struct wfs_cdm_get_item_info
{
    USHORT          usLevel;
    USHORT          usIndex;
    DWORD           dwItemInfoType;
} WFS_CDM_GET_ITEM_INFO, *LPWFSCDMGETITEMINFO;
```

usLevel

Defines the note level. Possible values are:

Value	Meaning
<u>WFS_CDM_LEVEL_1</u>	Information for level 1 notes. Only an image file can be retrieved for level 1 notes.
<u>WFS_CDM_LEVEL_2</u>	Information for level 2 notes. On systems that do not support note handling standards this value cannot be used and WFS_ERR_INVALID_DATA will be returned.
<u>WFS_CDM_LEVEL_3</u>	Information for level 3 notes. On systems that do not support note handling standards this value cannot be used and WFS_ERR_INVALID_DATA will be returned.
<u>WFS_CDM_LEVEL_4</u>	Information for level 4 notes. This value is also used to retrieve item information on systems that do not support note handling standards.

usIndex

Specifies the index for the item information required (zero to *usNumOfItems*-1 as reported in the WFS_EXEE_CDM_INFO_AVAILABLE event).

dwItemInfoType

Specifies the type of information required. This can be a combination of the following flags:

Value	Meaning
<u>WFS_CDM_ITEM_SERIALNUMBER</u>	Serial number of the item.
<u>WFS_CDM_ITEM_SIGNATURE</u>	Signature of the item.

WFS_CDM_ITEM_IMAGEFILEImage file of the item.Output Param LPWFSCDMITEMINFO lpItemInfo:The data returned by this command relates to a single item (*usIndex*).typedef struct wfs_cdm_item_info

```

{
    CHAR                cCurrencyID[3];
    ULONG               ulValue;
    USHORT              usRelease;
    LPWSTR              lpszSerialNumber;
    LPWFSCDMSIGNATURE   lpSignature;
    LPSTR               lpszImageFileName;
} WFS_CDMITEMINFO, *LPWFSCDMITEMINFO;

```

*cCurrencyID*Currency ID in ISO 4217 format [Ref. 2]. This value will be an array of three ASCII 0x20h characters for level 1 items.*ulValue*The value of a single item expressed in minimum dispense units. This value will be zero for level 1 items.*usRelease*The release of the banknote type. The higher this number is, the newer the release. Zero means that there is only one release of that banknote type. This value has not been standardized and therefore a release number of the same banknote will not necessarily have the same value in different systems. This value will be zero for level 1 items.*lpszSerialNumber*This field contains the serial number of the item as a Unicode string. A '?' character (0x003F) is used to represent any serial number character that cannot be recognized. If no serial number is available or has not been requested then *lpszSerialNumber* is NULL.*lpSignature*This field contains the signature for the item. If no signature is available or has not been requested then this field is NULL.typedef struct wfs_cdm_signature

```

{
    ULONG               ulLength;
    LPVOID              lpData;
} WFS_CDMSIGNATURE, *LPWFSCDMSIGNATURE;

```

*ulLength*Length of the signature in bytes.*lpData*Pointer to the returned signature data.*lpszImageFileName*Name of the file where the image containing the item's serial number is stored, e.g. "C:\Temp\cash123456.jpg". If the Service Provider does not support this function or the image file has not been requested then *lpszImageFileName* is NULL.The application is responsible for the use and management of this file. For example, the application can transfer the image files to a directory which is managed by the application.Error Codes Only the generic error codes defined in [Ref. 1] can be generated by this command.

Comments The application has to call this command multiple times in a loop where there is multiple information to retrieve. In addition, since the item information is not cumulative and can be replaced by any command that can move notes, it is recommended that applications that are interested in the available information should query for it following the
WFS_EXEE_CDM_INFO_AVAILABLE event but before any other command is executed.

4.10 WFS INF CDM GET BLACKLIST

Description This command is used to retrieve the entire blacklist information pre-set inside the device or set via the `WFS_CMD_CDM_SET_BLACKLIST` command, or `WFS_CMD_CIM_SET_BLACKLIST` in the case of a recycler.

Input Param None.

Output Param `LPWFSCDMBLACKLIST lpBlacklist`:

```
typedef struct wfs_cdm_blacklist
{
    LPWSTR                lpszVersion;
    USHORT                usCount;
    LPWFSCDMBLACKLISTELEMENT *lppBlacklistElements;
} WFSCDMBLACKLIST, *LPWFSCDMBLACKLIST;
```

lpszVersion

This is an application defined Unicode string that sets the version identifier of the blacklist. This can be set to NULL if it has no version identifier.

usCount

Number of pointers to `WFSCDMBLACKLISTELEMENT` structures returned in *lppBlacklistElements*.

lppBlacklistElements

Pointer to an array of pointers to `WFSCDMBLACKLISTELEMENT` structures.

```
typedef struct wfs_cdm_blacklist_element
{
    LPWSTR                lpszSerialNumber;
    CHAR                  cCurrencyID[3];
    ULONG                 ulValue;
} WFSCDMBLACKLISTELEMENT, *LPWFSCDMBLACKLISTELEMENT;
```

lpszSerialNumber

This Unicode string defines the serial number or a mask of serial numbers of one blacklist item with the defined currency and value. For a definition of the mask see Section 2.

cCurrencyID

The three character ISO format currency identifier [Ref. 2] of the blacklist element.

ulValue

The value of a blacklist element. This field can be zero to represent all values.

Error Codes Only the generic error codes defined in [Ref. 1] can be generated by this command.

Comments None.

4.11 WFS INF CDM GET ALL ITEMS INFO

Description This command can be used to retrieve all item information available for all levels at once by specifying `WFS_CDM_LEVEL_ALL` in the *usLevel* parameter. Alternatively this command can be used to retrieve all information for a particular level of banknote. This information is available from the point where the first `WFS_EXEE_CDM_INFO_AVAILABLE` event is generated until one of the following CDM commands is executed:

`WFS_CMD_CDM_DISPENSE`, `WFS_CMD_CDM_COUNT`, `WFS_CMD_CDM_PRESENT`,
`WFS_CMD_CDM_RETRACT`, `WFS_CMD_CDM_REJECT`,
`WFS_CMD_CDM_OPEN_SHUTTER`, `WFS_CMD_CDM_CLOSE_SHUTTER`,
`WFS_CMD_CDM_RESET`, `WFS_CMD_CDM_START_EXCHANGE`,
`WFS_CMD_CDM_END_EXCHANGE`, `WFS_CMD_CDM_CALIBRATE_CASH_UNIT`,
`WFS_CMD_CDM_TEST_CASH_UNITS`.

Additionally for a recycler, the following CIM commands will also invalidate the information:

`WFS_CMD_CIM_CASH_IN_START`, `WFS_CMD_CIM_CASH_IN`,
`WFS_CMD_CIM_CASH_IN_ROLLBACK`, `WFS_CMD_CIM_CASH_IN_END`,
`WFS_CMD_CIM_RETRACT`, `WFS_CMD_CIM_RESET`,
`WFS_CMD_CIM_START_EXCHANGE`, `WFS_CMD_CIM_END_EXCHANGE`,
`WFS_CMD_CIM_CREATE_P6_SIGNATURE`, `WFS_CMD_CIM_REPLENISH`,
`WFS_CMD_CIM_CASH_UNIT_COUNT`.

The `WFS_EXEE_CDM_INPUT_P6` event signals that a suspected forgery has been detected and is only generated when level 2 and/or level 3 notes are detected.

Input Param `LPWFSCDMGETALLITEMSINFO lpGetAllItemsInfo`:

```
typedef struct wfs_cdm_get_all_items_info
{
    USHORT usLevel;
} WFS_CDM_GETALLITEMSINFO, *LPWFSCDMGETALLITEMSINFO;
```

usLevel

Defines the note level. Possible values are:

Value	Meaning
<code>WFS_CDM_LEVEL_1</code>	Information for level 1 notes. Only an image file can be retrieved for level 1 notes.
<code>WFS_CDM_LEVEL_2</code>	Information for level 2 notes is to be returned with the <i>lpAllItemsInfo</i> output parameter.
<code>WFS_CDM_LEVEL_3</code>	Information for level 3 notes is to be returned with the <i>lpAllItemsInfo</i> output parameter.
<code>WFS_CDM_LEVEL_4</code>	Information for level 4 notes is to be returned with the <i>lpAllItemsInfo</i> output parameter. This value is also used to retrieve item information on systems that do not support note handling standards.
<code>WFS_CDM_LEVEL_ALL</code>	Information for all levels all items is to be returned with the <i>lpAllItemsInfo</i> output parameter.

Output Param `LPWFSCDMALLITEMSINFO lpAllItemsInfo`:

```
typedef struct wfs_cdm_all_items_info
{
    USHORT usCount;
    LPWFSCDMITEMINFOALL *lpItemsList;
} WFS_CDM_ALLITEMSINFO, *LPWFSCDMALLITEMSINFO;
```

usCount

Number of `WFS_CDMITEMINFOALL` structures returned in *lpItemsList*.

lpItemsList

Pointer to an array of pointers to `WFS_CDMITEMINFOALL` structures:

```
typedef struct wfs_cdm_item_info_all
{
    USHORT          usLevel;
    CHAR            cCurrencyID[3];
    ULONG           ulValue;
    USHORT          usRelease;
    LPWSTR          lpszSerialNumber;
    LPSTR           lpszImageFileName;
    WORD            wOnBlacklist;
    WORD            wItemLocation;
    USHORT          usNumber;
} WFS_CDMITEMINFOALL, * LPWFS_CDMITEMINFOALL;
```

usLevel

Defines the note level. Possible values are:

Value	Meaning
WFS_CDM_LEVEL_1	A level 1 banknote.
WFS_CDM_LEVEL_2	A level 2 banknote.
WFS_CDM_LEVEL_3	A level 3 banknote.
WFS_CDM_LEVEL_4	A level 4 banknote.

cCurrencyID

Currency ID in ISO 4217 format [Ref. 2]. This value will be an array of three ASCII 0x20h characters for level 1 items.

ulValue

The value of a single item expressed in minimum dispense units. This value will be zero for level 1 items.

usRelease

The release of the banknote type. The higher this number is, the newer the release. Zero means that there is only one release of that banknote type. This value has not been standardized and therefore a release number of the same banknote will not necessarily have the same value in different systems. This value will be zero for level 1 items.

lpszSerialNumber

This field contains the serial number of the item as a Unicode string. A '?' character (0x003F) is used to represent any serial number character that cannot be recognized. If no serial number is available then *lpszSerialNumber* is NULL.

lpszImageFileName

Full file path to an image file containing the serial number(s). If no image is available then this field is NULL.

wOnBlacklist

Specifies if the serial number reported in the *lpszSerialNumber* field is on the blacklist. If the blacklist reporting capability is not supported this field will be zero. Otherwise, possible values are:

Value	Meaning
WFS_CDM_ONBLACKLIST	The serial number of the items is on the blacklist.
WFS_CDM_NOTONBLACKLIST	The serial number of the items is not on the blacklist.
WFS_CDM_BLACKLISTUNKNOWN	It is unknown if the serial number of the item is on the blacklist.

wItemLocation

Specifies the location of the item as one of the following values:

Value	Meaning
WFS_CDM_LOCATION_DEVICE	The item is inside the device in some position other than a cash unit.
WFS_CDM_LOCATION_CASHUNIT	The item is in a cash unit. The logical cash unit number is defined by <i>usNumber</i> .

<u>WFS_CDM_LOCATION_CUSTOMER</u>	The item has been dispensed to the customer.
----------------------------------	--

<u>WFS_CDM_LOCATION_UNKNOWN</u>	The item location is unknown.
---------------------------------	-------------------------------

usNumber

If *wItemLocation* is WFS_CDM_LOCATION_CASHUNIT this parameter specifies the logical number of the cash unit which received the item. If *wItemLocation* is not WFS_CDM_LOCATION_CASHUNIT then *usNumber* will be zero.

Error Codes Only the generic error codes defined in [Ref. 1] can be generated by this command.

Comments In addition, since the item information is not cumulative and can be replaced by any command that can move notes, it is recommended that applications that are interested in the available information should query for it following the WFS_EXEE_CDM_INFO_AVAILABLE event but before any other command is executed.

5. Execute Commands

5.1 WFS_CMD_CDM_DENOMINATE

Description This command provides a denomination. A denomination specifies the number of items which are required from each cash unit in order to satisfy a given amount. The denomination depends upon the currency, the mix algorithm and any partial denomination supplied by the application.

This command can also be used to validate that any denomination supplied by the application can be dispensed.

If items of differing currencies are to be included in the same denomination then the currency field must be an array of three ASCII 0x20h characters, the amount must be zero and the mix number must be WFS_CDM_INDIVIDUAL. However, these restrictions do not apply if a single currency is combined with non-currency items, such as coupons.

If the *bCashBox* field of the WFS_CDMCAPS structure returned by the WFS_INF_CDM_CAPABILITIES command is TRUE then, if the entire denomination cannot be satisfied, a partial denomination will be returned with the remaining amount to be supplied from the teller's cash box.

This command can be used in four different ways:

1. In order to check that it is possible to dispense a given denomination. The input parameters to the command are currency and denomination, with a mix number of WFS_CDM_INDIVIDUAL and an amount of zero. If items of differing currencies are to be dispensed then the currency field should be an array of three ASCII 0x20h characters.
2. In order to validate that a given amount matches a given denomination and that it is possible to dispense the denomination. The input parameters to the command should be amount, currency and denomination, with a mix number of WFS_CDM_INDIVIDUAL.
3. In order to obtain a denomination of a given amount. The input parameters supplied should be amount, currency and mix number.
4. In order to complete a partial denomination of a given amount. In this case the input parameters to the command should be currency, amount, mix number and either a partially specified denomination or a minimum amount from the cash box. A completed denomination is returned. *ulCashBox* of the denomination structure may be updated as a result of this command.

Input Param LPWFSCMDENOMINATE lpDenominate;

```
typedef struct _wfs_cdm_denominate
{
    USHORT          usTellerID;
    USHORT          usMixNumber;
    LPWFSCMDENOMINATION lpDenomination;
} WFS_CDM_DENOMINATE, *LPWFSCMDENOMINATE;
```

usTellerID

Identification of teller. This field is ignored if the device is a Self-Service CDM.

usMixNumber

Mix algorithm or house mix table to be used.

lpDenomination

Pointer to a WFS_CDM_DENOMINATION structure, describing the contents of the denomination operation.

```
typedef struct _wfs_cdm_denomination
{
    CHAR          cCurrencyID[3];
    ULONG         ulAmount;
    USHORT        usCount;
    LPULONG        lpulValues;
    ULONG         ulCashBox;
} WFS_CDM_DENOMINATION, *LPWFSCMDENOMINATION;
```


cCurrencyID

Identification of currency in ISO format [Ref. 2]. Where the denomination contains multiple currencies this field should be set to three ASCII 0x20 characters.

ulAmount

The amount to be denominated or dispensed. Where the denomination contains multiple currencies this value is zero.

usCount

The size of the *lpulValues* list. This *usCount* is the same as the *usCount* returned from the last WFS_INF_CDM_CASH_UNIT_INFO command or set by the last WFS_CMD_CDM_END_EXCHANGE command. If this value is not required because a mix algorithm is used then the *usCount* can be set to zero.

If the application passes in an invalid *usCount* the Service Provider should return a WFS_ERR_INVALID_DATA return code.

lpulValues

Pointer to an array of ULONGs. This list specifies the number of items to take from each of the cash units. This list corresponds to the array of cash unit structures returned by the last WFS_INF_CDM_CASH_UNIT_INFO command or set by the last WFS_CMD_CDM_SET_CASH_UNIT_INFO or WFS_CMD_CDM_END_EXCHANGE commands. The first value in the array is related to the cash structure with the index number 1.

This array contains a field for each possible cash unit. If a cash unit is not required in the denomination its corresponding field in this array should be set to zero.

If the application does not wish to specify a denomination, it should set the *lpulValues* pointer to NULL.

ulCashBox

Only applies to Teller CDM devices. Amount to be paid from the teller's cash box.

Output Param LPWFSCMDDENOMINATION lpDenomination;

For a description see the input structure.

Where mixed currencies are being denominated the *ulAmount* field in the returned denomination structure will be zero and the *cCurrencyID* field will be set to three ASCII 0x20 characters.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDCURRENCY	There are no cash units in the CDM of the currency specified in the <i>cCurrencyID</i> field of the input parameter.
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_CASHUNITERROR	There is a problem with a cash unit. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
WFS_ERR_CDM_INVALIDDENOMINATION	The <i>usMixNumber</i> is WFS_CDM_INDIVIDUAL and the sum of the values for <i>ulCashBox</i> and the items specified by <i>lpulValues</i> does not match the non-zero amount specified. This error code is not used when the amount specified is zero.
WFS_ERR_CDM_INVALIDMIXNUMBER	Unknown mix algorithm.
WFS_ERR_CDM_NOCURRENCYMIX	The cash units specified in the denomination were not all of the same currency.
WFS_ERR_CDM_NOTDISPENSABLE	The amount is not dispensable by the CDM.
WFS_ERR_CDM_TOOMANYITEMS	The request requires too many items to be dispensed.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state (see section WFS_CMD_CDM_START_EXCHANGE).

WFS_ERR_CDM_NOCASHBOXPRESENT Cash box amount needed, however teller is not assigned a cash box.

WFS_ERR_CDM_AMOUNTNOTINMIXTABLE A mix table is being used to determine the denomination but the amount specified for the denomination is not in the mix table.

Events In addition to the generic event defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_EXEE_CDM_CASHUNITERROR	An error occurred while attempting to denominate from the cash unit specified by the event.

Comments None.

5.2 WFS_CMD_CDM_DISPENSE

Description This command performs the dispensing of items to the customer. The command provides the same functionality as the WFS_CMD_CDM_DENOMINATE command plus the additional functionality of dispensing the items. If items of differing currencies are to be dispensed then the currency field must be an array of three ASCII 0x20h characters, the amount must be zero and the mix number must be WFS_CDM_INDIVIDUAL. However, these restrictions do not apply if a single currency is dispensed with non-currency items, such as coupons.

The WFS_CMD_CDM_DISPENSE command can be used in the following ways:

1. The input parameters to the command are amount, currency and denomination. The mix number is WFS_CDM_INDIVIDUAL. In this case, the denomination is checked for validity and, if valid, is dispensed.
2. The input parameters are amount, currency and mix number. In this case the amount is denominated and, if this succeeds, the items are dispensed.
3. If the amount is zero, but the currency and the denomination are supplied with a mix number of WFS_CDM_INDIVIDUAL the denomination is checked for validity and, if valid, is dispensed.
4. The command will calculate a partial denomination of a given amount and dispense the complete denomination. In this case the input parameters to the command should be currency, amount, mix number and either a partially specified denomination or a minimum amount from the cash box. The cash box amount may be updated as a result of this command.

When more than one physical cash unit exists for a logical cash unit number, the device selects the actual physical cash unit to use in the dispense operation.

If the *bCashBox* field of the WFS_CDM_CAPABILITIES structure returned by the WFS_INF_CDM_CAPABILITIES command is TRUE then, if the entire denomination cannot be satisfied, a partial denomination will be returned with the remaining amount to be supplied from the teller's cash box.

If the device is a Teller CDM, the input field *fwPosition* can be set to WFS_CDM_POSNULL. If this is the case the *usTellerID* is used to perform the dispense operation to the assigned teller position.

The field *bPresent* of the WFS_CDM_DISPENSE structure determines whether items are actually presented to the user as part of the dispense operation. If this field is set to TRUE then the items will be moved to the exit slot, if it is FALSE the items will be moved to an intermediate stacker. In the second case it will be necessary to use the WFS_CMD_CDM_PRESENT command to present the items to the user. If *bPresent* is set to FALSE then the *fwPosition* field is ignored. If the CDM does not have an intermediate stacker then *bPresent* is ignored.

If *bPresent* is set to TRUE and a shutter exists, then it will be implicitly controlled during the present operation, even if the *bShutterControl* capability is set to FALSE. The shutter will be closed when the user removes the items or the items are retracted.

Input Param LPWFS_CDM_DISPENSE lpDispense;

```
typedef struct _wfs_cdm_dispense
{
    USHORT          usTellerID;
    USHORT          usMixNumber;
    WORD            fwPosition;
    BOOL            bPresent;
    LPWFS_CDM_DENOMINATION lpDenomination;
} WFS_CDM_DISPENSE, *LPWFS_CDM_DISPENSE;
```

usTellerID

Identifies the teller. This field is ignored if the device is a Self-Service CDM.

usMixNumber

Mix algorithm or house mix table to be used to create a denomination of the supplied amount. If the value is WFS_CDM_INDIVIDUAL, the denomination supplied in the *lpDenomination* field is validated prior to the dispense operation. If it is found to be invalid no alternative denomination will be calculated.

fwPosition

Determines to which side the amount is dispensed. If the device is a Teller CDM this field is ignored and the output position associated with *usTellerID* is used. The value is specified by one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration information is used. This can be either position dependent or teller dependent.
WFS_CDM_POSLEFT	Present items to left side of device.
WFS_CDM_POSRIGHT	Present items to right side of device.
WFS_CDM_POSCENTER	Present items to center output position.
WFS_CDM_POSTOP	Present items to the top output position.
WFS_CDM_POSBOTTOM	Present items to the bottom output position.
WFS_CDM_POSFRONT	Present items to the front output position.
WFS_CDM_POSREAR	Present items to the rear output position.

bPresent

If this field is set to TRUE then the items will be moved to the exit slot, if it is FALSE the items will be moved to an intermediate stacker.

lpDenomination

Pointer to a WFS_CDM_DENOMINATION structure, describing the denominations used for the dispense operation. For the WFS_CDM_DENOMINATION structure specification see the definition of the command WFS_CMD_CDM_DENOMINATE.

Output Param LPWFS_CDM_DENOMINATION lpDenomination;

For the WFS_CDM_DENOMINATION structure specification see the definition of the command WFS_CMD_CDM_DENOMINATE.

The values in this structure report the amount dispensed and the number of items dispensed from each cash unit.

Where mixed currencies are being dispensed the *ulAmount* field in the returned denomination structure will be zero and the *cCurrencyID* field will be set to three ASCII 0x20 characters.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDCURRENCY	There are no cash units in the CDM of the currency specified in the <i>cCurrencyID</i> field of the input parameter.
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_CASHUNITERROR	There is a problem with a cash unit. A WFS_EXEE_CDM_CASHUNITERROR execute event is posted with the details.
WFS_ERR_CDM_INVALIDDENOMINATION	The sum of the values for cash box and cash units was greater than the amount specified.
WFS_ERR_CDM_INVALIDMIXNUMBER	Mix algorithm is not known.
WFS_ERR_CDM_NOCURRENCYMIX	Cash units containing two or more different currencies were selected.
WFS_ERR_CDM_NOTDISPENSABLE	The amount is not dispensable by the CDM.
WFS_ERR_CDM_TOOMANYITEMS	The request would require too many items to be dispensed. This error is also generated if <i>bPresent</i> is FALSE and sub-dispensing is required.
WFS_ERR_CDM_UNSUPPOSITION	The specified output position is not supported.
WFS_ERR_CDM_SAFEDOOROPEN	The safe door is open. This device requires the safe door to be closed in order to perform this operation.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

WFS_ERR_CDM_NOCASHBOXPRESENT	Cash box amount needed, however teller is not assigned a cash box.
WFS_ERR_CDM_AMOUNTNOTINMIXTABLE	A mix table is being used to determine the denomination but the amount specified for the denomination is not in the mix table.
WFS_ERR_CDM_ITEMSNOTTAKEN	Items have not been taken during a sub-dispense operation. This error occurs if a hardware timeout expires.
WFS_ERR_CDM_ITEMSLEFT	Items have been left in the transport or exit slot as a result of a prior dispense, present or recycler cash-in operation.
WFS_ERR_CDM_SHUTTEROPEN	The Service Provider cannot dispense items with an open output shutter.

If the *bPresent* field of the WFS_CDM_DISPENSE structure is TRUE, the following error codes can also be returned:

Value	Meaning
WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter is not open or did not open when it should have. No items presented.
WFS_ERR_CDM_PRERRORNOITEMS	An error occurred while items were being moved to the exit slot - no items are presented.
WFS_ERR_CDM_PRERRORITEMS	An error occurred while items were being moved to the exit slot - at least some of the items have been presented.
WFS_ERR_CDM_PRERRORUNKNOWN	An error occurred while items were being moved to the exit slot - the position of the items is unknown. Intervention may be required to reconcile the cash amount totals.

Events

In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.
WFS_EXEE_CDM_DELAYEDDISPENSE	The dispense operation will be delayed by the specified time.
WFS_EXEE_CDM_STARTDISPENSE	Fired when the delayed dispense operation starts.
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error during a dispense operation.
WFS_SRVE_CDM_ITEMSTAKEN	The user has removed the items presented. If the dispense is not a sub-dispense this event occurs after the completion of the dispense command.
WFS_EXEE_CDM_PARTIALDISPENSE	Indicates that the dispense operation is to be divided into several sub-dispense operations.
WFS_EXEE_CDM_SUBDISPENSEOK	A sub-dispense operation was completed successfully.
WFS_EXEE_CDM_INCOMPLETEDISPENSE	It has not been possible to dispense the entire denomination but part of the denomination has been dispensed, whether on the intermediate stacker or in customer access. The return error code will be WFS_ERR_CDM_NOTDISPENSABLE.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
WFS_EXEE_CDM_INPUT_P6	ECB6-level Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.

[WFS_SRVE_CDM_SHUTTERSTATUSCHANGED](#)

[The shutter status has changed.](#)

Comments None.

5.3 WFS_CMD_CDM_COUNT

Description This command empties the specified physical cash unit(s). All items dispensed from the cash unit are counted and moved to the specified output location.

The number of items counted can be different from the number of items dispensed in cases where the CDM has the ability to detect this information. If the CDM cannot differentiate between what is dispensed and what is counted then *ulDispensed* will be the same as *ulCounted*.

Upon successful WFS_CMD_CDM_COUNT command execution the physical cash unit(s) *ulCount* field within the WFS_CDM_PHYSICAL_CU structure is reset.

Input Param LPWFS_CDM_PHYSICAL_CU lpPhysicalCU;

```
typedef struct _wfs_cdm_physical_cu
{
    BOOL                bEmptyAll;
    WORD                fwPosition;
    LPSTR               lpPhysicalPositionName;
} WFS_CDM_PHYSICAL_CU, *LPWFS_CDM_PHYSICAL_CU;
```

bEmptyAll

Specifies whether all physical cash units are to be emptied. If this value is TRUE then *lpPhysicalPositionName* is ignored.

fwPosition

Specifies the location to which items should be moved. The value is set to one of the following values:

Value	Meaning
WFS_CDM_POSNULL	Output location is determined by Service Provider.
WFS_CDM_POSLEFT	Present items to left side of device.
WFS_CDM_POSRIGHT	Present items to right side of device.
WFS_CDM_POSCENTER	Present items to center output position.
WFS_CDM_POSTOP	Present items to the top output position.
WFS_CDM_POSBOTTOM	Present items to the bottom output position.
WFS_CDM_POSFRONT	Present items to the front output position.
WFS_CDM_POSREAR	Present items to the rear output position.
WFS_CDM_POSREJECT	Reject bin is used as output location.

lpPhysicalPositionName

Specifies which physical cash unit to empty and count. This name is the same as the *lpPhysicalPositionName* in the WFS_CDM_PHYSICAL_CU structure.

Output Param LPWFS_CDM_COUNT lpCount;

```
typedef struct _wfs_cdm_count
{
    USHORT                usNumPhysicalCUs;
    LPWFS_CDM_COUNTED_PHYS_CU *lppCountedPhysCUs;
} WFS_CDM_COUNT, *LPWFS_CDM_COUNT;
```

usNumPhysicalCUs

This value indicates the number of physical cash unit structures (WFS_CDM_COUNTED_PHYS_CU) returned. This value will always be greater than zero.

lppCountedPhysCUs

Pointer to an array of pointers to WFS_CDM_COUNTED_PHYS_CU structures:

```
typedef struct _wfs_cdm_counted_phys_cu
{
    LPSTR                lpPhysicalPositionName;
    CHAR                cUnitId[5];
    ULONG                ulDispensed;
    ULONG                ulCounted;
    USHORT              usPStatus;
} WFS_CDM_COUNTED_PHYS_CU, *LPWFS_CDM_COUNTED_PHYS_CU;
```

lpPhysicalPositionName

Specifies which physical cash unit was emptied and counted. This name is that defined in the *lpPhysicalPositionName* field of the WFS_CDMPHCU structure.

cUnitId

Cash unit ID. This is the identifier defined in the *cUnitID* field of the WFS_CDMPHCU structure.

ulDispensed

The number of items that were dispensed during the emptying of the cash unit.

ulCounted

The number of items that were counted during the emptying of the cash unit.

usPStatus

Supplies the status of the physical cash unit as one of the following values:

Value	Meaning
WFS_CDM_STATCUOK	The cash unit is in a good state.
WFS_CDM_STATCUFULL	The cash unit is full.
WFS_CDM_STATCUHIGH	The cash unit is almost full (reached or exceeded the threshold defined by WFS_CDMCASHUNIT.ulMaximum).
WFS_CDM_STATCULOW	The cash unit is almost empty.
WFS_CDM_STATCUEMPTY	The cash unit is empty.
WFS_CDM_STATCUINOP	The cash unit is inoperative.
WFS_CDM_STATCUMISSING	The cash unit is missing.
WFS_CDM_STATCUNOVAL	The values of the specified cash unit are not available.
WFS_CDM_STATCUNOREF	There is no reference value available for the notes in this cash unit.
WFS_CDM_STATCUMANIP	The cash unit has been inserted (including removal followed by a reinsertion) when the device was not in the exchange state. This cash unit cannot be dispensed from.

Error Codes

In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A cash unit caused a problem. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_SAFEDOOROPEN	The safe door is open. This device requires the safe door to be closed in order to perform this operation.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

Events

In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error during the count operation.
WFS_SRVE_CDM_ITEMSTAKEN	The items emptied to the output location have been removed by the user.
WFS_SRVE_CDM_ITEMSPRESENTED	Items have been emptied to the output location. These items may need to be removed from the output location before the operation can continue.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
WFS_EXEE_CDM_INPUT_P6	ECB6 Level 2 and/or level 3 notes have been detected.

<u>WFS_EXEE_CDM_INFO_AVAILABLE</u>	<u>Information is available for items being processed by this operation.</u>
<u>WFS_SRVE_CDM_SHUTTERSTATUSCHANGED</u>	<u>The shutter status has changed.</u>

Comments None.

5.4 WFS_CMD_CDM_PRESENT

Description This command will move items to the exit position for removal by the user. If a shutter exists, then it will be implicitly controlled during the present operation, even if the *bShutterControl* capability is set to FALSE. The shutter will be closed when the user removes the items or the items are retracted. If *lpfwPosition* points to WFS_CMD_POSNULL the position set in the WFS_CMD_CDM_DISPENSE command which caused these items to be dispensed will be used.

When this command successfully completes the items are in customer access.

Input Param LPWORD *lpfwPosition*;

lpfwPosition

Pointer to the output position where the amount is to be presented. The value is set to one of the following values:

Value	Meaning
WFS_CMD_POSNULL	The default configuration information is used. This can be either position dependent or teller dependent.
WFS_CMD_POSLEFT	Present items to left side of device.
WFS_CMD_POSRIGHT	Present items to right side of device.
WFS_CMD_POSCENTER	Present items to center output position.
WFS_CMD_POSTOP	Present items to the top output position.
WFS_CMD_POSBOTTOM	Present items to the bottom output position.
WFS_CMD_POSFRONT	Present items to the front output position.
WFS_CMD_POSREAR	Present items to the rear output position.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter did not open when it should have. No items presented.
WFS_ERR_CDM_SHUTTEROPEN	The shutter is open when it should be closed. No items presented.
WFS_ERR_CDM_NOITEMS	There are no items on the stacker.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_PRERRORNOITEMS	There was an error during the present operation - no items were presented.
WFS_ERR_CDM_PRERRORITEMS	There was an error during the present operation - at least some of the items were presented.
WFS_ERR_CDM_PRERRORUNKNOWN	There was an error during the present operation - the position of the items is unknown. Intervention may be required to reconcile the cash amount totals.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.

Events In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.
WFS_SRVE_CDM_ITEMSTAKEN	The items have been removed by the user. This event is generated after the completion of the present operation.
WFS_EXEE_CDM_INPUT_P6	ECB6-level Level 2 and/or level 3 notes have been detected.
<u>WFS_EXEE_CDM_INFO_AVAILABLE</u>	<u>Information is available for items being processed by this operation.</u>

[WFS_SRVE_CDM_SHUTTERSTATUSCHANGED](#)
[The shutter status has changed.](#)

Comments None.

5.5 WFS_CMD_CDM_REJECT

Description This command will move items from the intermediate stacker and transport them to a reject cash unit (i.e. a cash unit with *usType* WFS_CDM_TYPEREJECTCASSETTE). The WFS_CDM_CASHUNIT.*ulCount* field of the reject cash unit is incremented by the number of items that were thought to be present at the time of the reject or the number counted by the device during the reject. Note that the reject bin count is unreliable.

Input Param None.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A reject cash unit caused a problem. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
WFS_ERR_CDM_NOITEMS	There were no items on the stacker.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

Events In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A reject bin threshold condition has been reached.
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error during the reject operation.
WFS_EXEE_CDM_INPUT_P6	ECB6 level Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.

Comments None.

5.6 WFS_CMD_CDM_RETRACT

Description This command will retract items which may have been in customer access. Retracted items will be moved to either a retract cash unit, a reject cash unit, item cash units, the transport or the intermediate stacker. After the items are retracted the shutter is closed automatically, even if the *bShutterControl* capability is set to FALSE.

If items are moved to a retract cash unit (i.e. a cash unit with *usType* WFS_CDM_TYPERETRACTCASSETTE), then the WFS_CDM_CASHUNIT.*ulCount* field of the retract cash unit must be incremented by 1 to specify the number of retracts. If items are moved to any other cash unit (e.g. a cash unit with *usType* WFS_CDM_TYPEREJECTCASSETTE) then the WFS_CDM_CASHUNIT.*ulCount* field of the cash unit must be incremented by the number of items that were thought to be present at the time the WFS_CMD_CDM_RETRACT command was issued or the number counted by the device during the retract. Note that reject bin counts are unreliable.

For cash recycler implementations with a note handling standard it is recommended to use the WFS_CMD_CIM_RETRACT command instead of this command.

Input Param LPWFSCDMRETRACT lpRetract;

```
typedef struct _wfs_cdm_retract
{
    WORD                fwOutputPosition;
    USHORT              usRetractArea;
    USHORT              usIndex;
} WFS_CDM_RETRACT, *LPWFSCDMRETRACT;
```

fwOutputPosition

Specifies the output position from which to retract the items. The value is set to one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration information should be used.
WFS_CDM_POSLEFT	Retract items from the left output position.
WFS_CDM_POSRIGHT	Retract items from the right output position.
WFS_CDM_POSCENTER	Retract items from the center output position.
WFS_CDM_POSTOP	Retract items from the top output position.
WFS_CDM_POSBOTTOM	Retract items from the bottom output position.
WFS_CDM_POSFRONT	Retract items from the front output position.
WFS_CDM_POSREAR	Retract items from the rear output position.

usRetractArea

This value specifies the area to which the items are to be retracted. Possible values are:

Value	Meaning
WFS_CDM_RA_RETRACT	Retract the items to a retract cash unit.
WFS_CDM_RA_TRANSPORT	Retract the items to the transport.
WFS_CDM_RA_STACKER	Retract the items to the intermediate stacker area.
WFS_CDM_RA_REJECT	Retract the items to a reject cash unit.
WFS_CDM_RA_ITEMCASSETTE	Retract the items to the item cassettes, i.e. cassettes that can be dispensed from.

usIndex

If *usRetractArea* is set to WFS_CDM_RA_RETRACT this field defines the position inside the retract cash units into which the cash is to be retracted. *usIndex* starts with a value of one (1) for the first retract position and increments by one for each subsequent position. If there are several logical retract cash units (of type WFS_CDM_TYPERETRACTCASSETTE in command WFS_INF_CDM_CASH_UNIT_INFO), *usIndex* would be incremented from the first position of the first retract cash unit to the last position of the last retract cash unit defined in WFS_CDM_CUINFO. The maximum value of *usIndex* is the sum of WFS_CDM_CASHUNIT.*ulMaximum* of each retract cash unit. If *usRetractArea* is not set to WFS_CDM_RA_RETRACT the value of this field is ignored.

Output Param LPWFSCDMITEMNUMBERLIST lpItemNumberList;

Pointer to a WFSCDMITEMNUMBERLIST structure. This parameter will provide details about the items moved with this command or this parameter will be NULL if the device is not capable of identifying the moved items.

```
typedef struct _wfs_cdm_item_number_list
{
    USHORT                                usNumOfItemNumbers;
    LPWFSCDMITEMNUMBER                  *lppItemNumber;
} WFSCDMITEMNUMBERLIST, *LPWFSCDMITEMNUMBERLIST;
```

usNumOfItemNumbers

Number of item types moved during this command, i.e. the number of *lppItemNumber* list elements.

lppItemNumber

List of item types moved to the *usRetractArea* during this command. A pointer to an array of pointers to WFSCDMITEMNUMBER structures:

```
typedef struct _wfs_cdm_item_number
{
    CHAR                                cCurrencyID[3];
    ULONG                                ulValues;
    USHORT                               usRelease;
    ULONG                                ulCount;
    USHORT                               usNumber;
} WFSCDMITEMNUMBER, *LPWFSCDMITEMNUMBER;
```

cCurrencyID

A three character array storing the ISO format [Ref. 2] Currency ID; or three ASCII 0x20h characters if the currency of the item is not known.

ulValues

The value of a single item expressed in minimum dispense units; or a zero value if the value of the item is not known.

usRelease

The release of the item. The higher this number is, the newer the release. Zero means that there is only one release or the release is not known. This value has not been standardized and therefore a release number of the same item will not necessarily have the same value in different systems.

ulCount

The count of items of the same type moved to the same destination during the execution of this command.

usNumber

The logical number of the cash unit which received items during the execution of this command. This value will be zero if items were moved to the *usRetractArea* WFS_CDM_RA_TRANSPORT or WFS_CDM_RA_STACKER.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A retract cash unit caused a problem. A
WFS_EXEE_CDM_CASHUNITERROR	event will be posted with the details.

WFS_ERR_CDM_NOITEMS	There were no items to retract.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_SHUTTERNOTCLOSED	The shutter failed to close.
WFS_ERR_CDM_ITEMSTAKEN	Items were present at the output position at the start of the operation, but were removed before the operation was complete - some or all of the items were not retracted.
WFS_ERR_CDM_INVALIDRETRACTPOSITION	The <i>usIndex</i> is not supported.
WFS_ERR_CDM_NOTRETRACTAREA	The retract area specified in <i>usRetractArea</i> is not supported.
WFS_ERR_CDM_UNSUPPOSITION	The output position specified is not supported.
WFS_ERR_CDM_POSITION_NOT_EMPTY	The retract area specified in <i>usRetractArea</i> is not empty so the retract operation is not possible.
WFS_ERR_CDM_INCOMPLETERETRACT	Some or all of the items were not retracted for a reason not covered by other error codes. The detail will be reported with the WFS_EXEE_CDM_INCOMPLETERETRACT event.

Events

In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in a retract or reject cash unit.
WFS_EXEE_CDM_CASHUNITERROR	An error occurred while attempting to retract to a retract, reject or item cash unit.
WFS_SRVE_CDM_ITEMSTAKEN	The items presented have been removed by the user.
WFS_EXEE_CDM_INPUT_P6	ECB6 level Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.
WFS_EXEE_CDM_INCOMPLETERETRACT	The retract command has completed with an error and not all of the items have been retracted. The detail of what was actually retracted will be reported with the event data.
WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	The shutter status has changed.

Comments

None.

5.7 WFS_CMD_CDM_OPEN_SHUTTER

Description This command opens the shutter.

Input Param LPWORD lpfwPosition;

lpfwPosition

Pointer to the output position where the shutter is to be opened. If the application does not need to specify a shutter, this field can be set to NULL or its contents to WFS_CDM_POSNULL. The position can be set to one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration information should be used.
WFS_CDM_POSLEFT	Open the shutter at the left output position.
WFS_CDM_POSRIGHT	Open the shutter at the right output position.
WFS_CDM_POSCENTER	Open the shutter at the center output position.
WFS_CDM_POSTOP	Open the shutter at the top output position.
WFS_CDM_POSBOTTOM	Open the shutter at the bottom output position.
WFS_CDM_POSFRONT	Open the shutter at the front output position.
WFS_CDM_POSREAR	Open the shutter at the rear output position.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter failed to open.
WFS_ERR_CDM_SHUTTEROPEN	The shutter was already open.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

Events ~~Only~~In addition to the generic events defined in [Ref. 1], the following events can be generated ~~by~~as a result of this command:

Value	Meaning
<u>WFS_SRVE_CDM_SHUTTERSTATUSCHANGED</u>	<u>The shutter status has changed.</u>

Comments None.

5.8 WFS_CMD_CDM_CLOSE_SHUTTER

Description This command closes the shutter.

Input Param LPWORD lpfwPosition;

lpfwPosition

Pointer to the output position where the shutter is to be closed. If the application does not need to specify a shutter, this field can be set to NULL or its contents to WFS_CDM_POSNULL. The position can be set to one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration information should be used.
WFS_CDM_POSLEFT	Close the shutter at the left output position.
WFS_CDM_POSRIGHT	Close the shutter at the right output position.
WFS_CDM_POSCENTER	Close the shutter at the center output position.
WFS_CDM_POSTOP	Close the shutter at the top output position.
WFS_CDM_POSBOTTOM	Close the shutter at the bottom output position.
WFS_CDM_POSFRONT	Close the shutter at the front output position.
WFS_CDM_POSREAR	Close the shutter at the rear output position.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_SHUTTERCLOSED	The shutter was already closed.
WFS_ERR_CDM_SHUTTERNOTCLOSED	The shutter failed to close.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

Events ~~Only~~ In addition to the generic events defined in [Ref. 1], the following events can be generated ~~by~~ as a result of this command:

Value	Meaning
<u>WFS_SRVE_CDM_SHUTTERSTATUSCHANGED</u>	<u>The shutter status has changed.</u>

Comments None.

5.9 WFS_CMD_CDM_SET_TELLER_INFO

Description This command allows the application to set the teller position and initialize counts for each currency assigned to the teller. The values set by this command are persistent. This command only applies to Teller CDMs.

Input Param LPWFSCDMTELLERUPDATE lpTellerUpdate;

```
typedef struct _wfs_cdm_teller_update
{
    USHORT                usAction;
    LPWFSCDMTELLERDETAILS lpTellerDetails;
} WFS_CDMTELLERUPDATE, *LPWFSCDMTELLERUPDATE;
```

usAction

The action to be performed specified as one of the following values:

Value	Meaning
WFS_CDM_CREATE_TELLER	A teller is to be added.
WFS_CDM_MODIFY_TELLER	Information about an existing teller is to be modified.
WFS_CDM_DELETE_TELLER	A teller is to be removed.

lpTellerDetails

For a specification of the structure WFS_CDMTELLERDETAILS please refer to the WFS_INF_CDM_TELLER_INFO command.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDCURRENCY	The specified currency is not currently available.
WFS_ERR_CDM_INVALIDTELLERID	The teller ID is invalid. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_EXCHANGEACTIVE	The target teller is currently in the middle of an exchange operation.

Events In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_SRVE_CDM_TELLERINFOCHANGED	Teller information has been created, modified or deleted.

Comments None.

5.10 WFS_CMD_CDM_SET_CASH_UNIT_INFO

Description	<p>This command is used to adjust information regarding the status and contents of the cash units present in the CDM.</p> <p>This command generates the service event WFS_SRVE_CDM_CASHUNITINFOCHANGED to inform applications that the information for a cash unit has been changed.</p> <p>This command can only be used to change software counters, thresholds and the application lock. All other fields in the input structure will be ignored.</p> <p>The following fields of the WFSCDMCASHUNIT structure may be updated by this command:</p> <ul style="list-style-type: none"> <i>ulInitialCount</i> <i>ulCount</i> <i>ulRejectCount</i> <i>ulMinimum</i> <i>ulMaximum</i> <i>bAppLock</i> <i>ulDispensedCount</i> <i>ulPresentedCount</i> <i>ulRetractedCount</i> <p>As may the following fields of the WFSCDMPHCU structure:</p> <ul style="list-style-type: none"> <i>ulInitialCount</i> <i>ulCount</i> <i>ulRejectCount</i> <i>ulDispensedCount</i> <i>ulPresentedCount</i> <i>ulRetractedCount</i> <p>Any other changes must be performed via an exchange operation.</p> <p>If the fields <i>ulCount</i> and <i>ulRejectCount</i> of <i>lppPhysical</i> are set to zero by this command, the application is indicating that it does not wish counts to be maintained for the physical cash units. Counts on the logical cash units will still be maintained and can be used by the application. If the physical counts are set by this command then the logical count will be the sum of the physical counts and any value sent as a logical count will be ignored.</p> <p>The values set by this command are persistent.</p>										
Input Param	<p>LPWFSCDMCUINFO lpCUInfo;</p> <p>The WFSCDMCUINFO structure is specified in the documentation of the WFS_INF_CDM_CASH_UNIT_INFO command. All cash units should be included not just the cash units whose values are to be changed.</p>										
Output Param	None.										
Error Codes	<p>In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:</p> <table> <tr> <th>Value</th><th>Meaning</th></tr> <tr> <td>WFS_ERR_CDM_INVALIDTELLERID</td><td>Invalid teller ID. This error will never be generated by a Self-Service CDM.</td></tr> <tr> <td>WFS_ERR_CDM_INVALIDCASHUNIT</td><td>Invalid cash unit.</td></tr> <tr> <td>WFS_ERR_CDM_EXCHANGEACTIVE</td><td>The CDM is in an exchange state.</td></tr> <tr> <td>WFS_ERR_CDM_CASHUNITERROR</td><td>A problem occurred with a cash unit. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.</td></tr> </table>	Value	Meaning	WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.	WFS_ERR_CDM_INVALIDCASHUNIT	Invalid cash unit.	WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.	WFS_ERR_CDM_CASHUNITERROR	A problem occurred with a cash unit. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
Value	Meaning										
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.										
WFS_ERR_CDM_INVALIDCASHUNIT	Invalid cash unit.										
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.										
WFS_ERR_CDM_CASHUNITERROR	A problem occurred with a cash unit. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.										
Events	<p>In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:</p> <table> <tr> <th>Value</th><th>Meaning</th></tr> <tr> <td>WFS_USRE_CDM_CASHUNITTHRESHOLD</td><td>A threshold condition has been reached in one of the cash units.</td></tr> </table>	Value	Meaning	WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.						
Value	Meaning										
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.										

CWA 16926-64:2015 (E)

WFS_SRVE_CDM_CASHUNITINFOCHANGED

A cash unit was updated as a result of this command.

WFS_EXEE_CDM_CASHUNITERROR

An error occurred while accessing a cash unit.

Comments None.

5.11 WFS_CMD_CDM_START_EXCHANGE

Description This command puts the CDM in an exchange state, i.e. a state in which cash units can be emptied, replenished, removed or replaced. Other than the updates which can be made via the WFS_CMD_CDM_SET_CASH_UNIT_INFO command all changes to a cash unit must take place while the cash unit is in an exchange state.

This command returns current cash unit information in the form described in the documentation of the WFS_INF_CDM_CASH_UNIT_INFO command. This command will also initiate any physical processes which may be necessary to make the cash units accessible. Before using this command an application should first have ensured that it has exclusive control of the CDM.

This command may return WFS_SUCCESS even if WFS_EXEE_CDM_CASHUNITERROR events are generated. If this command returns WFS_SUCCESS or WFS_ERR_CDM_EXCHANGEACTIVE the CDM is in an exchange state.

While in an exchange state the CDM will process all WFS requests but exclude WFS[Async]Execute commands, except those listed below:

WFS_CMD_CDM_END_EXCHANGE

WFS_CMD_CDM_SET_MIX_TABLE

WFS_CMD_CDM_RESET

Any other WFS[Async]Execute commands will result in the error WFS_ERR_CDM_EXCHANGEACTIVE being generated.

If an error is returned by this command, the WFS_INF_CDM_CASH_UNIT_INFO command should be used to determine cash unit information.

If the CDM is part of a compound device together with a CIM (i.e. a cash recycler), exchange operations can either be performed separately on each interface to the compound device, or the entire exchange operation can be done through the CIM interface.

Exchange via CDM and CIM interfaces

If the exchange is performed separately via the CDM and CIM interfaces then these operations cannot be performed simultaneously. An exchange state must therefore be initiated on each interface in the following sequence:

CDM

(Lock)

WFS_CMD_CDM_START_EXCHANGE

...exchange action...

WFS_CMD_CDM_END_EXCHANGE

(Unlock)

CIM

(Lock)

WFS_CMD_CIM_START_EXCHANGE

...exchange action...

WFS_CMD_CIM_END_EXCHANGE

(Unlock)

In the case of a recycler, the cash-in cash unit counts are set via the CIM interface and the cash-out cash unit counts are set via the CDM interface. Recycling cash units can be set via either interface. However, if the device has recycle units of multiple currencies and/or denominations (or multiple note identifiers associated with the same denomination) then the CIM interface should be used for exchange operations which affect these units. Those fields which are not common to both the CDM and CIM cash units are left unchanged when an exchange (or WFS_CMD_XXX_SET_CASH_UNIT_INFO) is executed on the other interface. For example if the CDM is used to set the current counts then the CIM *lpNoteNumberList* structure is not changed even if the data becomes inconsistent.

Exchange via the CIM Interface

All cash unit info fields exposed through the CDM interface are also exposed through the CIM interface, so the entire exchange operation for a recycling device can be achieved through the CIM interface.

Input Param LPWFSCDMSTARTEX lpStartEx;

```
typedef struct _wfs_cdm_start_ex
{
    WORD                fwExchangeType;
    USHORT              usTellerID;
    USHORT              usCount;
    LPUSHORT            lpusCUNumList;
} WFS_CDMSTARTEX, *LPWFSCDMSTARTEX;
```

fwExchangeType

Specifies the type of cash unit exchange operation. This field should be set to one of the following values:

Value	Meaning
WFS_CDM_EXBYHAND	The cash units will be replenished manually either by filling or emptying the cash unit by hand or by replacing the cash unit.
WFS_CDM_EXTOCASSETTES	Items will be moved from the replenishment container to the bill cash units.

usTellerID

Identifies the teller. If the device is a Self-Service CDM this field is ignored.

usCount

Number of cash units to be exchanged. This is also the size of the array contained in the *lpusCUNumList* field.

lpusCUNumList

Pointer to an array of unsigned shorts containing the logical numbers of the cash units to be exchanged. If an invalid logical number is contained in this list, the command will fail with a WFS_ERR_CDM_CASHUNITERROR error.

Output Param LPWFSCDMCUINFO lpCUInfo;

The WFS_CDMCUINFO structure is specified in the documentation of the WFS_INF_CDM_CASH_UNIT_INFO command. This is the complete list of cash units not just the cash units that are to be changed.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_CASHUNITERROR	An error occurred with a cash unit while performing the exchange operation. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is already in an exchange state.

Events In addition to the generic events defined in [Ref. 1] the following events can be generated by this command:

Value	Meaning
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
WFS_EXEE_CDM_INPUT_P6	ECB6-level Level 2 and/or level 3 notes have been detected.
<u>WFS_EXEE_CDM_INFO_AVAILABLE</u>	<u>Information is available for items being processed by this operation.</u>

Comments None.

5.12 WFS_CMD_CDM_END_EXCHANGE

Description This command will end the exchange state. If any physical action took place as a result of the WFS_CMD_CDM_START_EXCHANGE command then this command will cause the cash units to be returned to their normal physical state. Any necessary device testing will also be initiated. The application can also use this command to update cash unit information in the form described in the documentation of the WFS_INF_CDM_CASH_UNIT_INFO command.

When *lpCUInfo* is not NULL the input parameters to this command may be ignored if the Service Provider can obtain cash unit information from self-configuring cash units.

If the fields *ulCount* and *ulRejectCount* of *lppPhysical* are set to zero by this command, the application is indicating that it does not wish counts to be maintained for the physical cash units. Counts on the logical cash units will still be maintained and can be used by the application. If the physical counts are set by this command then the logical count will be the sum of the physical counts and any value sent as a logical count will be ignored.

If an error occurs during the execution of this command, the application must issue WFS_INF_CDM_CASH_UNIT_INFO to determine the cash unit information.

A WFS_EXEE_CDM_CASHUNITERROR event will be sent for any logical cash unit which cannot be successfully updated. If no cash units could be updated then a WFS_ERR_CDM_CASHUNITERROR code will be returned and WFS_EXEE_CDM_CASHUNITERROR events generated for every logical cash unit that could not be updated.

Even if this command does not return WFS_SUCCESS the exchange state has ended.

The values set by this command are persistent.

Input Param LPWFSCDMCUINFO *lpCUInfo*;

The WFS_CDMCUINFO structure is specified in the documentation for the WFS_INF_CDM_CASH_UNIT_INFO command. This pointer can be NULL if the cash unit information has not changed. If this parameter is not NULL then it must contain the complete list of cash unit structures, not just the ones that have changed. If this parameter is NULL then any cash unit in a manipulated state (i.e. *usPStatus* value of WFS_CDM_STATCUMANIP) will remain in this state after the command completes.

The *usStatus* and *usPStatus* values passed in the cash unit structures included within the *lpCUInfo* parameter are ignored and the actual status of the cash units is determined when this command is executed. When *lpCUInfo* is not NULL and this command is successfully executed cash units will no longer be in a manipulated state (i.e. *usPStatus* will no longer be WFS_CDM_STATCUMANIP).

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A <u>cash unit</u> problem occurred with a cash unit <u>that meant no cash units could be updated. One or more</u> WFS_EXEE_CDM_CASHUNITERROR event <u>events</u> will be posted <u>sent</u> with the details.
WFS_ERR_CDM_NOEXCHANGEACTIVE	There is no exchange active.

Events In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_EXEE_CDM_CASHUNITERROR	A cash unit problem occurred that meant no cash units could be updated. One or more <u>WFS_EXEE_CDM_CASHUNITERROR events will be sent with the details</u> <u>caused an error</u> .

	WFS_SRVE_CDM_CASHUNITINFOCHANGED	A cash unit was changed.
	WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.
	WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
	WFS_EXEE_CDM_INPUT_P6	ECB6-level Level 2 and/or level 3 notes have been detected.
	WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.
Comments	None.	

5.13 WFS_CMD_CDM_OPEN_SAFE_DOOR

Description This command unlocks the safe door or starts the time delay count down prior to unlocking the safe door, if the device supports it. The command completes when the door is unlocked or the timer has started.

Input Param None.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

Events Only the generic events defined in [Ref. 1] can be generated by this command.

Comments None.

5.14 WFS_CMD_CDM_CALIBRATE_CASH_UNIT

Description This command will cause a vendor dependent sequence of hardware events which will calibrate one or more physical cash units associated with a logical cash unit. This is necessary if a new type of bank note is put into the cash unit as the command enables the CDM to obtain the measures of the new bank notes.

If more than one physical cash unit is associated with the cash unit, it is up to the Service Provider to determine whether all the physical cash units need to be calibrated or if it is sufficient to calibrate for one physical unit and load the data into the others.

This command cannot be used to calibrate cash units which have been locked by the application. A WFS_ERR_CDM_CASHUNITERROR code will be returned and a WFS_EXEE_CDM_CASHUNITERROR event generated.

Input Param LPWFSCDMCALIBRATE lpCalibrateIn;

```
typedef struct _wfs_cdm_calibrate
{
    USHORT                usNumber;
    USHORT                usNumOfBills;
    LPWFSCDMITEMPOSITION *lpPosition;
} WFS_CDMCALIBRATE, *LPWFSCDMCALIBRATE;
```

usNumber

The logical number of the cash unit.

usNumOfBills

The number of bills to be dispensed during the calibration process.

lpPosition

Specifies where the dispensed items should be moved to. For a description of the WFS_CDMITEMPOSITION structure see section WFS_CMD_CDM_RESET.

Output Param LPWFSCDMCALIBRATE lpCalibrateOut;

The WFS_CDMCALIBRATE structure is defined in the Input Param section.

usNumber

The logical number of cash unit which has been calibrated.

usNumOfBills

Number of items that were actually dispensed during the calibration process. This value may be different from that passed in using the input structure if the cash dispenser always dispenses a default number of bills. When bills are presented to an output position this is the count of notes presented to the output position, any other notes rejected during the calibration process are not included in this count as they will be accounted for within the cash unit counts.

lpPosition

Specifies where the items were moved to during the calibration process.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A cash unit caused an error. A WFS_EXEE_CDM_CASHUNITERROR event will be sent with the details.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not valid.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_INVALIDCASHUNIT	The cash unit number specified is not valid.

Events In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.

WFS_SRVE_CDM_CASHUNITINFOCHANGED

A cash unit was changed.

WFS_EXEE_CDM_CASHUNITERROR

A cash unit caused an error.

WFS_SRVE_CDM_ITEMSTAKEN

The items were removed.

WFS_EXEE_CDM_NOTEERROR

An item detection error has occurred.

WFS_EXEE_CDM_INPUT_P6

~~ECB6-level~~Level 2 and/or level 3 notes have been detected.WFS_EXEE_CDM_INFO_AVAILABLEInformation is available for items being processed by this operation.**Comments**

None.

5.15 WFS_CMD_CDM_SET_MIX_TABLE

Description This command is used to set up the mix table specified by the mix number. Mix tables are persistent and are available to all applications in the system. An amount can be specified as different denominations within the mix table. If the amount is specified more than once the Service Provider will attempt to denominate or dispense the first amount in the table. If this does not succeed (e.g. because of a cash unit failure) the Service Provider will attempt to denominate or dispense the next amount in the table. The Service Provider can only dispense amounts which are explicitly mentioned in the mix table.

If a mix number passed in already exists then the information is overwritten with the new information.

Input Param LPWFSCDMMIXTABLE lpMixTable;

The structure WFSCDMMIXTABLE is defined in the documentation of the command WFS_INF_CDM_MIX_TABLE.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDMIXNUMBER	The supplied <i>usMixNumber</i> is reserved for a predefined mix algorithm.
WFS_ERR_CDM_INVALIDMIXTABLE	The contents of at least one of the defined rows of the mix table is incorrect.

Events Only the generic events defined in [Ref. 1] can be generated by this command.

Comments None.

5.16 WFS_CMD_CDM_RESET

Description	<p>This command is used by the application to perform a hardware reset which will attempt to return the CDM device to a known good state. This command does not over-ride a lock obtained through WFS[Async]Lock on another application or service handle.</p> <p>The device will attempt to move any items found anywhere within the device to the position specified within the <i>lpResetIn</i> parameter. This may not always be possible because of hardware problems.</p> <p>If items are found inside the device the WFS_SRVE_CDM_MEDIADETECTED event will be generated and will inform the application where the items were actually moved to.</p> <p>If an exchange state is active then this command will end the exchange state (even if this command does not complete successfully).</p> <p>On a recycling device this command is not accepted if a cash-in transaction is active and will return a WFS_ERR_DEV_NOT_READY error.</p> <p>If items are moved to a retract cash unit (i.e. a cash unit with <i>usType</i> WFS_CDM_TYPERETRACTCASSETTE), then the WFS_CDM_CASHUNIT.<i>ulCount</i> field of the retract cash unit must be incremented by 1 to specify the number of operations that changed the count. If items are moved to any other cash unit (e.g. a cash unit with <i>usType</i> WFS_CDM_TYPEREJECTCASSETTE), then the WFS_CDM_CASHUNIT.<i>ulCount</i> field of the cash unit must be incremented either by the number of items that were present at the time the WFS_CMD_CDM_RESET command was issued or the number counted by the device during the WFS_CMD_CDM_RESET command. Note that reject bin counts are unreliable.</p>
Input Param	<p>If the application does not wish to specify a cash unit or position it can set <i>lpResetIn</i> to NULL. In this case the Service Provider will determine where to move any items found.</p> <p>LPWFSCDMITEMPOSITION <i>lpResetIn</i>;</p> <pre>typedef struct _wfs_cdm_itemposition { USHORT usNumber; LPWFSCDMRETRACT lpRetractArea; WORD fwOutputPosition; } WFS_CDMITEMPOSITION *LPWFSCDMITEMPOSITION;</pre> <p><i>usNumber</i> In the case of a single cash unit destination this value specifies the cash unit to be used for the storage of any items found, i.e. when items are to be moved to a reject or retract cash unit. In all other cases this value must be zero, i.e. when items are to be moved to item cassettes, the transport, the stacker or an output position.</p> <p><i>lpRetractArea</i> This field is used if items are to be moved to the stacker, the transport, a retract cash unit or to item cassettes. If items are to be moved to a reject cash unit or to an output position then this field must be NULL.</p> <pre>typedef struct _wfs_cdm_retract { WORD fwOutputPosition; USHORT usRetractArea; USHORT usIndex; } WFS_CDMRETRACT, *LPWFSCDMRETRACT;</pre> <p><i>fwOutputPosition</i> This value will be ignored.</p> <p><i>usRetractArea</i> This value specifies the area to which the items are to be moved to. Possible values are:</p>

Value	Meaning
WFS_CDM_RA_RETRACT	Items will be moved to a retract cash unit. In the case where several cash units of type WFS_CDM_TYPERETRACT-CASSETTE exist the <i>usNumber</i> field will define which retract unit the items will be moved to.
WFS_CDM_RA_TRANSPORT	Items will be moved to the transport.
WFS_CDM_RA_STACKER	Items will be moved to the intermediate stacker area.
WFS_CDM_RA_ITEMCASSETTE	Items will be moved to the item cassettes, i.e. cassettes that can be dispensed from.

usIndex

If *usRetractArea* is set to WFS_CDM_RA_RETRACT this field defines the position inside the retract cash units into which the cash is to be retracted. *usIndex* starts with a value of one (1) for the first retract position and increments by one for each subsequent position. If there are several logical retract cash units (of type WFS_CDM_TYPERETRACTCASSETTE in command WFS_INF_CDM_CASH_UNIT_INFO), *usIndex* would be incremented from the first position of the first retract cash unit to the last position of the last retract cash unit defined in WFS_CDM_CASHUNIT. The maximum value of *usIndex* is the sum of the WFS_CDM_CASHUNIT.*ulMaximum* of each retract cash unit. If *usRetractArea* is not set to WFS_CDM_RA_RETRACT the value of this field is ignored.

fwOutputPosition

The output position to which items are to be moved. If the *usNumber* is non-zero then this field will be ignored. The value is specified as one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration.
WFS_CDM_POSLEFT	The left output position.
WFS_CDM_POSRIGHT	The right output position.
WFS_CDM_POSCENTER	The center output position.
WFS_CDM_POSTOP	The top output position.
WFS_CDM_POSBOTTOM	The bottom output position.
WFS_CDM_POSFRONT	The front output position.
WFS_CDM_POSREAR	The rear output position.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1] the following can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A cash unit caused an error. One or more WFS_EXEE_CDM_CASHUNITERROR events will be sent with the details.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_INVALIDCASHUNIT	The cash unit number specified is not valid.
WFS_ERR_CDM_POSITION_NOT_EMPTY	The retract area specified in <i>usRetractArea</i> is not empty so the moving of items was not possible.
WFS_ERR_CDM_INCOMPLETERETRACT	Some or all of the items were not retracted for a reason not covered by other error codes. The detail will be reported with the WFS_EXEE_CDM_INCOMPLETERETRACT event.

Events In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error.

WFS_SRVE_CDM_MEDIADETECTED	Media has been found in the device.
WFS_SRVE_CDM_ITEMSTAKEN	The items presented have been removed by the user.
WFS_EXEE_CDM_INPUT_P6	ECB6 level <u>Level</u> 2 and/or level 3 notes have been detected.
<u>WFS_EXEE_CDM_INFO_AVAILABLE</u>	<u>Information is available for items being processed by this operation.</u>
<u>WFS_EXEE_CDM_INCOMPLETERETRACT</u>	<u>The command has completed with an error and not all of the items have been retracted. The detail of what was actually retracted will be reported in the</u> <u>WFS_EXEE_CDM_INCOMPLETERETRACT event data.</u>
<u>WFS_SRVE_CDM_SHUTTERSTATUSCHANGED</u>	<u>The shutter status has changed.</u>

Comments None.

5.17 WFS_CMD_CDM_TEST_CASH_UNITS

Description	<p>This command is used to test cash units following replenishment. All physical cash units which are testable (i.e. that have a status of WFS_CDM_STATCUOK or WFS_CDM_STATCULOW and no application lock in the logical cash unit associated with the physical cash unit) are tested. If the hardware is able to do so tests are continued even if an error occurs while testing one of the cash units. The command completes with WFS_SUCCESS if the Service Provider successfully manages to test all of the testable cash units regardless of the outcome of the test. This is the case if all testable cash units could be tested and a dispense was possible from at least one of the cash units.</p> <p>A WFS_EXEE_CDM_CASHUNITERROR event will be sent for any logical cash unit which has one or more physical cash units which cannot be tested or which fail the test, even if the logical cash unit has other physical cash units which are successfully tested. If all the cash units could not be tested or no cash units are testable then a WFS_ERR_CDM_CASHUNITERROR code will be returned and WFS_EXEE_CDM_CASHUNITERROR events generated for every logical cash unit that encountered a problem. The operation performed to test the cash units is vendor dependent. Items may be dispensed or transported into a reject bin as a result of this command.</p> <p>If no cash units are testable then a WFS_ERR_CDM_CASHUNITERROR code will be returned and WFS_EXEE_CDM_CASHUNITERROR events will be generated for every cash unit.</p>																					
Input Param	<p>LPWFSCDMITEMPOSITION lpPosition;</p> <p>Specifies where items dispensed as a result of this command should be moved to. For a description of the WFSCDMITEMPOSITION structure see section WFS_CMD_CDM_RESET.</p> <p>If a Service Provider default configuration is to be used this parameter can be NULL.</p>																					
Output Param	<p>LPWFSCDMCUINFO lpCUInfo;</p> <p>The WFSCDMCUINFO structure is defined in the documentation of the WFS_INF_CDM_CASH_UNIT_INFO command.</p>																					
Error Codes	<p>In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:</p> <table><tr><th>Value</th><th>Meaning</th></tr><tr><td>WFS_ERR_CDM_CASHUNITERROR</td><td>A cash unit caused a problem that meant all cash units could not be tested or no cash units were testable. One or more WFS_EXEE_CDM_CASHUNITERROR events will be posted with the details.</td></tr><tr><td>WFS_ERR_CDM_UNSUPPOSITION</td><td>The position specified is not supported.</td></tr><tr><td>WFS_ERR_CDM_SHUTTERNOTOPEN</td><td>The shutter is not open or did not open when it should have. No items presented.</td></tr><tr><td>WFS_ERR_CDM_SHUTTEROPEN</td><td>The shutter is open when it should be closed. No items presented.</td></tr><tr><td>WFS_ERR_CDM_INVALIDCASHUNIT</td><td>The cash unit number specified is not valid.</td></tr><tr><td>WFS_ERR_CDM_EXCHANGEACTIVE</td><td>The CDM is in an exchange state.</td></tr><tr><td>WFS_ERR_CDM_PRERRORNOITEMS</td><td>There was an error during the present operation - no items were presented.</td></tr><tr><td>WFS_ERR_CDM_PRERRORITEMS</td><td>There was an error during the present operation - at least some of the items were presented.</td></tr><tr><td>WFS_ERR_CDM_PRERRORUNKNOWN</td><td>There was an error during the present operation - the position of the items is unknown. Intervention may be required to reconcile the cash amount totals.</td></tr></table>		Value	Meaning	WFS_ERR_CDM_CASHUNITERROR	A cash unit caused a problem that meant all cash units could not be tested or no cash units were testable. One or more WFS_EXEE_CDM_CASHUNITERROR events will be posted with the details.	WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.	WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter is not open or did not open when it should have. No items presented.	WFS_ERR_CDM_SHUTTEROPEN	The shutter is open when it should be closed. No items presented.	WFS_ERR_CDM_INVALIDCASHUNIT	The cash unit number specified is not valid.	WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.	WFS_ERR_CDM_PRERRORNOITEMS	There was an error during the present operation - no items were presented.	WFS_ERR_CDM_PRERRORITEMS	There was an error during the present operation - at least some of the items were presented.	WFS_ERR_CDM_PRERRORUNKNOWN	There was an error during the present operation - the position of the items is unknown. Intervention may be required to reconcile the cash amount totals.
Value	Meaning																					
WFS_ERR_CDM_CASHUNITERROR	A cash unit caused a problem that meant all cash units could not be tested or no cash units were testable. One or more WFS_EXEE_CDM_CASHUNITERROR events will be posted with the details.																					
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.																					
WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter is not open or did not open when it should have. No items presented.																					
WFS_ERR_CDM_SHUTTEROPEN	The shutter is open when it should be closed. No items presented.																					
WFS_ERR_CDM_INVALIDCASHUNIT	The cash unit number specified is not valid.																					
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.																					
WFS_ERR_CDM_PRERRORNOITEMS	There was an error during the present operation - no items were presented.																					
WFS_ERR_CDM_PRERRORITEMS	There was an error during the present operation - at least some of the items were presented.																					
WFS_ERR_CDM_PRERRORUNKNOWN	There was an error during the present operation - the position of the items is unknown. Intervention may be required to reconcile the cash amount totals.																					
Events	<p>In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:</p> <table><tr><th>Value</th><th>Meaning</th></tr><tr><td>WFS_USRE_CDM_CASHUNITTHRESHOLD</td><td>A threshold condition has been reached in one of the cash units.</td></tr></table>		Value	Meaning	WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.																
Value	Meaning																					
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.																					

WFS_EXEE_CDM_CASHUNITERROR	A cash unit has failed the test or a cash unit was not testable.
WFS_SRVE_CDM_ITEMSTAKEN	The items presented have been removed by the user.
WFS_SRVE_CDM_CASHUNITINFOCHANGED	A cash unit was updated as a result of this command.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
WFS_EXEE_CDM_INPUT_P6	ECB6 level <u>Level</u> 2 and/or level 3 notes have been detected.
<u>WFS_EXEE_CDM_INFO_AVAILABLE</u>	<u>Information is available for items being processed by this operation.</u>
<u>WFS_SRVE_CDM_SHUTTERSTATUSCHANGED</u>	<u>The shutter status has changed.</u>

Comments None.

5.18 WFS_CMD_CDM_SET_GUIDANCE_LIGHT

Description This command is used to set the status of the CDM guidance lights. This includes defining the flash rate, [the color](#) and the ~~color~~ [direction](#). When an application tries to use a color [or direction](#) that is not supported then the Service Provider will return the generic error WFS_ERR_UNSUPP_DATA.

Input Param LPWFSCDMSETGUIDLIGHT lpSetGuidLight;

```
typedef struct _wfs_cdm_set_guidlight
{
    WORD wGuidLight;
    DWORD dwCommand;
} WFS_CDMSETGUIDLIGHT, *LPWFSCDMSETGUIDLIGHT;
```

wGuidLight

Specifies the index of the guidance light to set as one of the values defined within the capabilities section in the *dwGuidLights [...]* field.

dwCommand

Specifies the state of the guidance light indicator as WFS_CDM_GUIDANCE_OFF or a combination of the following flags consisting of one type B, [optionally one type C](#) and optionally ~~one~~ type [CD](#). If no value of type C is specified then the default color is used. The Service Provider determines which color is used as the default color.

Value	Meaning	Type
WFS_CDM_GUIDANCE_OFF	The light indicator is turned off.	A
WFS_CDM_GUIDANCE_SLOW_FLASH	The light indicator is set to flash slowly.	B
WFS_CDM_GUIDANCE_MEDIUM_FLASH	The light indicator is set to flash medium frequency.	B
WFS_CDM_GUIDANCE_QUICK_FLASH	The light indicator is set to flash quickly.	B
WFS_CDM_GUIDANCE_CONTINUOUS	The light indicator is turned on continuously (steady).	B
WFS_CDM_GUIDANCE_RED	The light indicator color is set to red.	C
WFS_CDM_GUIDANCE_GREEN	The light indicator color is set to green.	C
WFS_CDM_GUIDANCE_YELLOW	The light indicator color is set to yellow.	C
WFS_CDM_GUIDANCE_BLUE	The light indicator color is set to blue.	C
WFS_CDM_GUIDANCE_CYAN	The light indicator color is set to cyan.	C
WFS_CDM_GUIDANCE_MAGENTA	The light indicator color is set to magenta.	C
WFS_CDM_GUIDANCE_WHITE	The light indicator color is set to white.	C
WFS_CDM_GUIDANCE_EXIT	The light indicator is set to the exit state.	D

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALID_PORT	An attempt to set a guidance light to a new value was invalid because the guidance light does not exist.

Events Only the generic events defined in [Ref. 1] can be generated by this command.

Comments Guidance light support was added into the CDM primarily to support guidance lights for workstations where more than one instance of a CDM is present. The original SIU guidance light

mechanism was not able to manage guidance lights for workstations with multiple CDMs. This command can also be used to set the status of the CDM guidance lights when only one instance of a CDM is present.

The slow and medium flash rates must not be greater than 2.0 Hz. It should be noted that in order to comply with American Disabilities Act guidelines only a slow or medium flash rate must be used.

5.19 WFS_CMD_CDM_POWER_SAVE_CONTROL

Description This command activates or deactivates the power-saving mode.

If the Service Provider receives another execute command while in power saving mode, the Service Provider automatically exits the power saving mode, and executes the requested command. If the Service Provider receives an information command while in power saving mode, the Service Provider will not exit the power saving mode.

Input Param LPWFSCDMPOWERSAVECONTROL lpPowerSaveControl;

```
typedef struct _wfs_cdm_power_save_control
{
    USHORT                                usMaxPowerSaveRecoveryTime;
} WFS_CDMPOWERSAVECONTROL, *LPWFSCDMPOWERSAVECONTROL;
```

usMaxPowerSaveRecoveryTime

Specifies the maximum number of seconds in which the device must be able to return to its normal operating state when exiting power save mode. The device will be set to the highest possible power save mode within this constraint. If *usMaxPowerSaveRecoveryTime* is set to zero then the device will exit the power saving mode.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_POWERSAVETOOSHORT	The power saving mode has not been activated because the device is not able to resume from the power saving mode within the specified <i>usMaxPowerSaveRecoveryTime</i> value.
WFS_ERR_CDM_POWERSAVEMEDIAPRESENT	The power saving mode has not been activated because media is present inside the device.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

Events In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_SRVE_CDM_POWER_SAVE_CHANGE	The power save recovery time has changed.

Comments None.

5.20 WFS_CMD_CDM_PREPARE_DISPENSE

Description	<p>On some hardware it can take a significant amount of time for the dispenser to get ready to dispense media. On this type of hardware the WFS_CMD_CDM_PREPARE_DISPENSE command can be used to improve transaction performance.</p> <p>If this command is supported (see the <i>bPrepareDispense</i> capability) then applications can help to improve the time taken to dispense media by issuing this command as soon as the application knows that a dispense is likely to happen. This command either prepares the device for the next dispense operation, or terminates the dispense preparation if the subsequent dispense operation is no longer required.</p> <p>With the exception of the WFS_CMD_CDM_DENOMINATE command, which will not stop the dispense preparation, any execute command on CDM or CIM will automatically stop the dispense preparation.</p> <p>If this command is executed and the device is already in the specified <i>wAction</i> state, then this execution will have no effect and will complete with WFS_SUCCESS.</p>						
Input Param	<p>LPWFSCDMPREPAREDISPENSE lpPrepareDispense;</p> <pre>typedef struct _wfs_cdm_prepare_dispense { WORD wAction; } WFS_CDM_PREPAREDISPENSE, *LPWFSCDMPREPAREDISPENSE;</pre> <p><i>wAction</i> A value specifying the type of actions. The value is set to one of the following values:</p> <table> <tr> <th>Value</th><th>Meaning</th></tr> <tr> <td>WFS_CDM_START</td><td>Initiates the action to prepare for the next dispense command. This command does not wait until the device is ready to dispense before returning a completion event, it completes as soon as the preparation has been initiated.</td></tr> <tr> <td>WFS_CDM_STOP</td><td>Stops the previously activated dispense preparation. For example the motor of the transport will be stopped. This should be used if for some reason the subsequent dispense operation is no longer required.</td></tr> </table>	Value	Meaning	WFS_CDM_START	Initiates the action to prepare for the next dispense command. This command does not wait until the device is ready to dispense before returning a completion event, it completes as soon as the preparation has been initiated.	WFS_CDM_STOP	Stops the previously activated dispense preparation. For example the motor of the transport will be stopped. This should be used if for some reason the subsequent dispense operation is no longer required.
Value	Meaning						
WFS_CDM_START	Initiates the action to prepare for the next dispense command. This command does not wait until the device is ready to dispense before returning a completion event, it completes as soon as the preparation has been initiated.						
WFS_CDM_STOP	Stops the previously activated dispense preparation. For example the motor of the transport will be stopped. This should be used if for some reason the subsequent dispense operation is no longer required.						
Output Param	None.						
Error Codes	<p>Only <u>In addition to</u> the generic error codes defined in [Ref. 1], <u>the following error codes</u> can be generated by this command:</p> <table> <tr> <th>Value</th><th>Meaning</th></tr> <tr> <td><u>WFS_ERR_CDM_EXCHANGEACTIVE</u></td><td><u>The CDM is in an exchange state.</u></td></tr> </table>	Value	Meaning	<u>WFS_ERR_CDM_EXCHANGEACTIVE</u>	<u>The CDM is in an exchange state.</u>		
Value	Meaning						
<u>WFS_ERR_CDM_EXCHANGEACTIVE</u>	<u>The CDM is in an exchange state.</u>						
Events	<u>Only the generic events defined in [Ref. 1] can be generated by this command.</u>						
Comments	<u>None.</u>						

5.21 WFS_CMD_CDM_SET_BLACKLIST

Description This command is used to set all blacklist information. This list is persistent.

Input Param This parameter should be set to NULL if the application wishes to empty the blacklist.

LPWFSCDMBLACKLIST lpBlacklist:

The LPWFSCDMBLACKLIST structure is defined in the documentation of the WFS_INF_CDM_GET_BLACKLIST command.

lpzVersion

This is an application defined Unicode string that sets the version identifier of the blacklist. This can be set to NULL if it has no version identifier.

usCount

Number of pointers to WFSCDMBLACKLISTELEMENT structures returned in lpBlacklistElements.

lpBlacklistElements

Pointer to an array of pointers to WFSCDMBLACKLISTELEMENT structures. Each element represents a serial number, currency and value combination that a banknote will be matched against to determine if it is blacklisted.

The WFSCDMBLACKLISTELEMENT structure is defined in the documentation of the WFS_INF_CDM_GET_BLACKLIST command.

lpzSerialNumber

This Unicode string defines the serial number or a mask of serial numbers of one blacklist element with the defined currency and value. For a definition of the mask see Section 2.

cCurrencyID

The three character ISO format currency identifier [Ref. 2] of the blacklist element.

ulValue

The value of a blacklist element. This field can be set to zero to match all values.

Output Param None.

Error Codes Only the generic error codes defined in [Ref. 1] can be generated by this command.

Events Only the generic events defined in [Ref. 1] can be generated by this command.

Comments Some classes of counterfeit banknotes have the same or similar serial numbers. By setting a serial number blacklist financial institutions can react quickly to a threat from counterfeit banknotes.

5.22 WFS_CMD_CDM_SYNCHRONIZE_COMMAND

Description This command is used to reduce response time of a command (e.g. for synchronization with display) as well as to synchronize actions of the different device classes. This command is intended to be used only on hardware which is capable of synchronizing functionality within a single device class or with other device classes.

The list of execute commands which this command supports for synchronization is retrieved in the *lpdwSynchronizableCommands* parameter of the WFS_INF_CDM_CAPABILITIES.

This command is optional, i.e. any other command can be called without having to call it in advance. Any preparation that occurs by calling this command will not affect any other subsequent command. However, any subsequent execute command other than the one that was specified in the *dwCommand* input parameter will execute normally and may invalidate the pending synchronization. In this case the application should call the WFS_CMD_CDM_SYNCHRONIZE_COMMAND again in order to start a synchronization.

Input Param LPWFSCDMSYNCHRONIZECOMMAND lpSynchronizeCommand:

```
typedef struct wfs_cdm_synchronize_command
{
    DWORD dwCommand;
    LPVOID lpCmdData;
} WFS_CMD_CDM_SYNCHRONIZECOMMAND, *LPWFSCDMSYNCHRONIZECOMMAND;
```

dwCommand

The command ID of the command to be synchronized and executed next.

lpCmdData

Pointer to data or a data structure that represents the parameter that is normally associated with the command that is specified in *dwCommand*. For example, if *dwCommand* is WFS_CMD_CDM_RETRACT then *lpCmdData* will point to a WFS_CDMRETRACT structure. This parameter can be NULL if no command input parameter is needed or if this detail is not needed to synchronize for the command.

It will be device-dependent whether the synchronization is effective or not in the case where the application synchronizes for a command with this command specifying a parameter but subsequently executes the synchronized command with a different parameter. This case should not result in an error; however, the preparation effect could be different from what the application expects. The application should, therefore, make sure to use the same parameter between *lpCmdData* of this command and the subsequent corresponding execute command.

Output Param None.

Error Codes In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_COMMANDUNSUPP	The command specified in the <i>dwCommand</i> field is not supported by the Service Provider.
WFS_ERR_CDM_SYNCHRONIZEUNSUPP	The preparation for the command specified in the <i>dwCommand</i> with the parameter specified in the <i>lpCmdData</i> is not supported by the Service Provider.

Events Only the generic events defined in [Ref. 1] can be generated by this command.

Comments ~~None~~ For sample flows of this synchronization see the [Ref. 1] Appendix C.

6. Events

6.1 WFS_SRVE_CDM_SAFEDOOROPEN

Description	This service event is generated when the safe door has been opened.
Event Param	None.
Comments	None.

6.2 WFS_SRVE_CDM_SAFEDOORCLOSED

Description	This service event is generated when the safe door has been closed.
Event Param	None.
Comments	None.

6.3 WFS_USRE_CDM_CASHUNITTHRESHOLD

Description	<p>This user event is generated when a threshold condition has occurred in one of the logical cash units. If the logical cash unit is a shared cash unit in a compound CIM/CDM then this event can also be generated as a result of a CIM operation.</p> <p>This event can be triggered either by hardware sensors in the device or by the logical <i>ulCount</i> reaching the <i>ulMinimum</i> or <i>ulMaximum</i> value as specified in the WFS_CDM_CASHUNIT structure.</p> <p>The application can check if the device has hardware sensors by querying the <i>bHardwareSensor</i> field of the physical cash unit structure. If any of the physical cash units associated with the logical cash unit have this capability then threshold events based on hardware sensors will be triggered if the <i>ulMaximum</i> or <i>ulMinimum</i> values are not used and are set to zero.</p> <p>In the situation where the cash unit is associated with multiple physical cash units the WFS_SRVE_CDM_CASHUNITINFOCHANGED event will be generated when any of the physical cash units reaches the threshold. When the final physical cash unit reaches the threshold, the WFS_USRE_CDM_CASHUNITTHRESHOLD event as well as the WFS_SRVE_CDM_CASHUNITINFOCHANGED event will be generated.</p>
Event Param	<p>LPWFS_CDM_CASHUNIT lpCashUnit;</p> <p><i>lpCashUnit</i> Pointer to a WFS_CDM_CASHUNIT structure, describing the cash unit on which the threshold condition occurred. See <i>lpCashUnit->usStatus</i> for the current status. For a description of the WFS_CDM_CASHUNIT structure, see the definition of the WFS_INF_CDM_CASH_UNIT_INFO command.</p>
Comments	None.

6.4 WFS_SRVE_CDM_CASHUNITINFOCHANGED

Description	<p>This service event is generated when information about a physical or logical cash unit has changed under the following circumstances:</p> <ul style="list-style-type: none"> • <u>It is generated whenever <i>usStatus</i> and/or <i>usPStatus</i> changes.</u> For instance, a physical cash unit may have <u>has</u> been removed or inserted -, or a physical/logical cash unit has become empty or full. • This event will also be posted <u>generated</u> for every cash unit changed in any way (including changes to counts, e.g. <i>ulCount</i>, <i>ulRejectCount</i>, <i>ulInitialCount</i>, <i>ulDispensedCount</i> and <i>ulPresentedCount</i>) as a result of the following commands: WFS_CMD_CDM_SET_CASH_UNIT_INFO WFS_CMD_CDM_END_EXCHANGE • This event will also be fired when any change is made to a cash unit by the following commands, except for changes to counts (e.g. <i>ulCount</i>, <i>ulRejectCount</i>, <i>ulInitialCount</i>, <i>ulDispensedCount</i> and <i>ulPresentedCount</i>), or if the WFS_USRE_CDM_CASHUNITTHRESHOLD is more appropriate: <p>WFS_CMD_CDM_CALIBRATE_CASH_UNIT WFS_CMD_CDM_TEST_CASH_UNITS</p> <p>If the cash unit is shared cash unit in a compound CIM/CDM then this event can also be generated as a result of a CIM operation.</p> <p>When a physical cash unit is removed, the status of the physical cash unit becomes WFS_CDM_STATCUMISSING. If there are no physical cash units of the same logical type remaining the status of the logical type becomes WFS_CDM_STATCUMISSING.</p> <p>When a physical cash unit is inserted and this physical cash unit is of an existing logical type, both the logical and the physical cash unit structures will be updated.</p> <p>If a physical cash unit of a new logical type is inserted the cash unit structure reported by the last WFS_INF_CDM_CASH_UNIT_INFO command is no longer valid. In that case an application should issue a WFS_INF_CDM_CASH_UNIT_INFO command after receiving this event to obtain updated cash unit information.</p>
Event Param	<p>LPWFSCDMCASHUNIT lpCashUnit;</p> <p><i>lpCashUnit</i></p> <p>Pointer to the changed cash unit structure. For a description of the WFS_CDMCASHUNIT structure see the definition of the WFS_INF_CDM_CASH_UNIT_INFO command.</p>
Comments	<p>None.</p>

6.5 WFS_SRVE_CDM_TELLERINFOCHANGED

Description	This service event is generated when the counts assigned to a teller have changed. This event is only returned as a result of a WFS_CMD_CDM_SET_TELLER_INFO command.
Event Param	LPUSHORT <i>lpusTellerID</i> ; <i>lpusTellerID</i> Pointer to an unsigned short holding the ID of the teller whose counts have changed.
Comments	None.

6.6 WFS_EXEE_CDM_DELAYEDDISPENSE

Description	This execute event is generated if the start of a dispense operation has been delayed.
Event Param	LPULONG lpulDelay; <i>lpulDelay</i> Pointer to an unsigned long holding the time in milliseconds by which the dispense operation will be delayed.
Comments	None.

6.7 WFS_EXEE_CDM_STARTDISPENSE

Description	This execute event is generated when a delayed dispense operation begins.
Event Param	LPREQUESTID lpReqID; <i>lpReqID</i> Pointer to the <i>RequestID</i> of the original dispense command.
Comments	None.

6.8 WFS_EXEE_CDM_CASHUNITERROR

Description This execute event is generated if there is a problem with a cash unit during the execution of a command.

Event Param LPWFSCDMCUERROR lpCashUnitError;

typedef struct _wfs_cdm_cu_error
{
WORD wFailure;
LPWFSCDMCASHUNIT lpCashUnit;
} WFS_CDM_CUERROR, *LPWFSCDMCUERROR;

wFailure
Specifies the kind of failure that occurred in the cash unit. Values are:

Value	Meaning
WFS_CDM_CASHUNITEMPTY	Specified cash unit is empty.
WFS_CDM_CASHUNITERROR	Specified cash unit has malfunctioned.
WFS_CDM_CASHUNITFULL	Specified cash unit is full.
WFS_CDM_CASHUNITLOCKED	Specified cash unit is locked.
WFS_CDM_CASHUNITINVALID	Specified cash unit is invalid.
WFS_CDM_CASHUNITCONFIG	An attempt has been made to change the settings of a self-configuring cash unit.
WFS_CDM_CASHUNITNOTCONF	Specified cash unit is not configured.

lpCashUnit
Pointer to the cash unit structure that caused the problem. The WFS_CDM_CASHUNIT structure is defined in the documentation of the WFS_INF_CDM_CASH_UNIT_INFO command. It is possible that this pointer may be NULL if the *wFailure* field is WFS_CDM_CASHUNITINVALID.

Comments None.

6.9 WFS_SRVE_CDM_ITEMSTAKEN

Description This service event is generated when items presented to the user have been taken. This event may be generated at any time.

Event Param LPWORD lpfwPosition;

lpfwPosition

Pointer to the output position from which the items have been removed. Possible values are:

Value	Meaning
WFS_CDM_POSNULL	The default configuration.
WFS_CDM_POSLEFT	The left output position.
WFS_CDM_POSRIGHT	The right output position.
WFS_CDM_POSCENTER	The center output position.
WFS_CDM_POSTOP	The top output position.
WFS_CDM_POSBOTTOM	The bottom output position.
WFS_CDM_POSFRONT	The front output position.
WFS_CDM_POSREAR	The rear output position.

Comments None.

6.10 WFS_SRVE_CDM_COUNTS_CHANGED

Description	This service event is generated if the device is a compound device together with a CIM and the counts in a shared cash unit have changed as a result of any CIM operation other than WFS_CMD_CIM_SET_CASH_UNIT_INFO and WFS_CMD_CIM_END_EXCHANGE.
Event Param	<p>LPWFSCDMCOUNTSCHANGED lpCountsChanged;</p> <pre>typedef struct _wfs_cdm_counts_changed { USHORT usCount; LPUSHORT lpusCUNumList; } WFS_CDMCOUNTSCHANGED, *LPWFSCDMCOUNTSCHANGED;</pre> <p><i>usCount</i> The size of <i>lpusCUNumList</i>.</p> <p><i>lpusCUNumList</i> Pointer to a list of the <i>usNumber</i> values of the cash units whose counts have changed.</p>
Comments	None.

6.11 WFS_EXEE_CDM_PARTIALDISPENSE

Description	This execute event is generated when a dispense operation is divided into several sub-dispense operations because the hardware capacity of the CDM is exceeded.
Event Param	LPUSHORT <i>lpusDispNum</i> ; <i>lpusDispNum</i> Pointer to an unsigned short holding the number of sub-dispense operations into which the dispense operation has been divided.
Comments	None.

6.12 WFS_EXEE_CDM_SUBDISPENSEOK

Description	This execute event is generated when one of the sub-dispense operations into which the dispense operation was divided has finished successfully.
Event Param	LPWFSCDMDENOMINATION lpDenomination; <i>lpDenomination</i> The WFSCDMDENOMINATION structure is defined in the documentation of the command WFS_CMD_CDM_DENOMINATE. Note that in this case the values in this structure report the amount and number of each denomination dispensed in the sub-dispense operation.
Comments	None.

6.13 WFS_EXEE_CDM_INCOMPLETEDISPENSE

Description	This execute event is generated when not all of the items specified in a WFS_CMD_CDM_DISPENSE operation could be dispensed. Some of the items have been dispensed. If the device has no intermediate stacker then the items that were dispensed will be in customer access.
Event Param	LPWFSCMDDENOMINATION lpDenomination; <i>lpDenomination</i> The WFS_CMD_CDM_DENOMINATE structure is defined in the documentation of the command WFS_CMD_CDM_DENOMINATE. Note that in this case the values in this structure report the amount and number of each denomination that has actually been dispensed.
Comments	None.

6.14 WFS_EXEE_CDM_NOTEERROR

Description This execute event specifies the reason for a note detection error during the execution of a command.

Event Param LPUSHORT lpusReason;

lpusReason

Pointer to an unsigned short holding the reason for the notes detection error. Possible values are:

Value	Meaning
WFS_CDM_DOUBLENOTEDETECTED	Double notes have been detected.
WFS_CDM_LONGNOTEDETECTED	A long note has been detected.
WFS_CDM_SKEWEDNOTE	A skewed note has been detected.
WFS_CDM_INCORRECTCOUNT	An item counting error has occurred.
WFS_CDM_NOTESTOOCLOSE	Notes have been detected as being too close.
WFS_CDM_OTHERNOTEERROR	An item error not covered by the other values has been detected.
WFS_CDM_SHORTNOTEDETECTED	Short notes have been detected.

Comments None.

6.15 WFS_SRVE_CDM_ITEMSPRESENTED

Description	This service event specifies that items have been presented to the user during a count operation and need to be taken.
Event Param	None.
Comments	None.

6.16 WFS_SRVE_CDM_MEDIADETECTED

Description	This service event is generated if media is detected during a reset (WFS_CMD_CDM_RESET). The parameter on the event informs the application of the position of the media after the reset completes. If the device has been unable to successfully move the items found then this parameter will be NULL.
Event Param	LPWFSCDMITEMPOSITION *lpItemPosition; For a description of this parameter see section WFS_CMD_CDM_RESET.
Comments	None.

6.17 WFS_EXEE_CDM_INPUT_P6

Description	This execute event is generated if level 2 and/or level 3 notes are detected during execution of a CDM command. Details about the notes detected and their associated signatures are obtained through the CIM interface.
Event Param	None.
Comments	None.

6.18 WFS_SRVE_CDM_DEVICEPOSITION

Description This service event reports that the device has changed its position status.

Event Param LPWFSCDMDEVICEPOSITION lpDevicePosition;

```
typedef struct _wfs_cdm_device_position
{
    WORD wPosition;
} WFS_CDM_DEVICEPOSITION, *LPWFSCDMDEVICEPOSITION;
```

wPosition

Position of the device as one of the following values:

Value	Meaning
WFS_CDM_DEVICEINPOSITION	The device is in its normal operating position.
WFS_CDM_DEVICENOTINPOSITION	The device has been removed from its normal operating position.
WFS_CDM_DEVICEPOSUNKNOWN	The position of the device cannot be determined.

Comments None.

6.19 WFS_SRVE_CDM_POWER_SAVE_CHANGE

Description	This service event specifies that the power save recovery time has changed.
Event Param	<p>LPWFSCDMPOWERSAVECHANGE lpPowerSaveChange;</p> <pre>typedef struct _wfs_cdm_power_save_change { USHORT usPowerSaveRecoveryTime; } WFS_CDMPOWERSAVECHANGE, *LPWFSCDMPOWERSAVECHANGE;</pre> <p><i>usPowerSaveRecoveryTime</i> Specifies the actual number of seconds required by the device to resume its normal operational state. This value is zero if the device exited the power saving mode.</p>
Comments	If another device class compounded with this device enters into a power saving mode, this device will automatically enter into the same power saving mode and this event will be generated.

6.20 WFS EXEE CDM INFO AVAILABLE

Description This execute event is generated when information is available for items being processed by the Service Provider.

Event Param LPWFSCDMITEMINFOSUMMARY *lppItemInfoSummary;

Pointer to a NULL-terminated array of pointers to WFSCDMITEMINFOSUMMARY structures, one structure for every level.

```
typedef struct wfs cdm item info summary
{
    USHORT          usLevel;
    USHORT          usNumOfItems;
} WFSCDMITEMINFOSUMMARY, *LPWFSCDMITEMINFOSUMMARY;
```

usLevel

Defines the note level. Possible values are:

<u>Value</u>	<u>Meaning</u>
<u>WFS_CDM_LEVEL_1</u>	<u>Information for level 1 notes.</u>
<u>WFS_CDM_LEVEL_2</u>	<u>Information for level 2 notes.</u>
<u>WFS_CDM_LEVEL_3</u>	<u>Information for level 3 notes.</u>
<u>WFS_CDM_LEVEL_4</u>	<u>Information for level 4 notes.</u>

usNumOfItems

Number of items classified as *usLevel* which have information available.

Comments None.

6.21 WFS EXEE CDM INCOMPLETERETRACT

Description This execute event is sent when the WFS_CMD_CDM_RETRACT or WFS_CMD_CDM_RESET command has completed with an error and not all of the items have been retracted.

Event Param LPWFSCDMINCOMPLETERETRACT lpIncompleteRetract;

```
typedef struct wfs_cdm_incomplete_retract
{
    WFSCDMITEMNUMBERLIST lpItemNumberList;
    USHORT                usReason;
} WFSCDMINCOMPLETERETRACT, *LPWFSCDMINCOMPLETERETRACT;
```

lpItemNumberList:

The WFSCDMITEMNUMBERLIST structure is defined in the description of the command WFS_CMD_CDM_RETRACT. Note that in this case the values in this structure report the amount and number of each denomination that were successfully moved during the command prior to the failure.

usReason

The reason for not having retracted items. The value is specified as one of the following values:

<u>Value</u>	<u>Meaning</u>
<u>WFS_CMD_IRRETRACTFAILURE</u>	The retract has partially failed for a reason not covered by the other reasons listed in this event, for example failing to pick an item to be retracted.
<u>WFS_CMD_IRRETRACTAREAFULL</u>	The specified retract area (see input parameter <i>usRetractArea</i>) has become full during the retract operation.
<u>WFS_CMD_IRFOREIGNITEMSDETECTED</u>	Foreign items have been detected.
<u>WFS_CMD_IRINVALIDBUNCH</u>	An invalid bunch of items has been detected, e.g. it is too large or could not be processed.

Comments None.

6.22 WFS SRVE CDM SHUTTERSTATUSCHANGED

Description Within the limitations of the hardware sensors this service event is generated whenever the status of a shutter changes. The shutter status can change because of an explicit, implicit or manual operation depending on how the shutter is operated.

Event Param LPWFSCDMSHUTTERSTATUSCHANGED lpShutterStatusChanged:

```
typedef struct wfs_cdm_shutter_status_changed
{
    WORD fwPosition;
    WORD fwShutter;
} WFS_CDM_SHUTTERSTATUSCHANGED, *LPWFSCDMSHUTTERSTATUSCHANGED;
```

fwPosition

Specifies one of the CDM output positions whose shutter status has changed as one of the following values:

Value	Meaning
WFS_CDM_POSLEFT	Left output position.
WFS_CDM_POSRIGHT	Right output position.
WFS_CDM_POSCENTER	Center output position.
WFS_CDM_POSTOP	Top output position.
WFS_CDM_POSBOTTOM	Bottom output position.
WFS_CDM_POSFRONT	Front output position.
WFS_CDM_POSREAR	Rear output position.

fwShutter

Specifies the new state of the shutter as one of the following values:

Value	Meaning
WFS_CDM_SHTCLOSED	The shutter is closed.
WFS_CDM_SHTOPEN	The shutter is opened.
WFS_CDM_SHTJAMMED	The shutter is jammed.
WFS_CDM_SHTUNKNOWN	Due to a hardware error or other condition, the state of the shutter cannot be determined.

Comments None.

7. Sub-Dispensing Command Flow

“Sub-dispensing” of bills occur when a WFS_CMD_CDM_DISPENSE execute command is issued and the required number of bills to be dispensed exceeds the CDM hardware limit for bills that can be dispensed with a single “hardware level” dispense command. In this situation, the CDM Service Provider determines the number of “hardware level” dispense commands required and enters what is referred to as a “sub-dispensing” operation until the full amount has been dispensed. Through use of a “sub-dispensing” operation the application is fully removed from “hardware level dependencies” as to how many bills can be dispensed based on hardware vendor design limitations.

The following series of tables illustrate the steps taken on behalf of an end-user, application, XFS Service Provider, and CDM hardware for sub-dispensing operations: All examples below assume the *bPresent* field in the WFS_CMD_CDM_DISPENSE command is set to TRUE.

Sub-Dispensing Is Not Required - Transaction Successful

This table illustrates a successful WFS_CMD_CDM_DISPENSE command where sub-dispensing is not required:

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 40 USD.			
2.		WFS_CMD_CDM_DISPENSE command issued.		
3.			Determines that a single “hardware level” dispense command can be issued for full dispense request.	
4.			“Hardware level” dispense command issued.	
5.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
6.		WFS_CMD_CDM_DISPENSE completes successfully.		
7.	User takes bills.			
8.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	

Sub-Dispensing Is Required - Command Successful

This table illustrates a successful WFS_CMD_CDM_DISPENSE command where sub-dispensing is required:

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 130 USD in 1 USD denominations.			
2.		WFS_CMD_CDM_DISPENSE command issued.		
3.			Three “hardware level” dispense commands are required. CDM hardware is limited to dispensing 50 bills in any single “hardware level” dispense.	
4.			WFS_EXEE_CDM_PARTIAL-DISPENSE event generated.	
5.			“Hardware level” dispense command issued for 50 USD.	
6.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
7.			WFS_SRVE_CDM_SUBDISPENSEOK event generated.	
8.	User takes bills.			
9.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	
10.			“Hardware level” dispense command issued for 50 USD.	
11.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
12.			WFS_SRVE_CDM_SUBDISPENSE_OK event generated.	
13.	User takes bills.			
14.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	
15.			“Hardware level” dispense command issued for 30 USD.	
16.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
17.			WFS_SRVE_CDM_SUBDISPENSEOK event generated.	
18.		WFS_CMD_CDM_DISPENSE completes successfully.		
19.	User takes bills.			
20.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	

Sub-Dispensing Is Required - Command Unsuccessful

This table illustrates an unsuccessful WFS_CMD_CDM_DISPENSE command where sub-dispensing is required and the end-user does not take the bills during the second “hardware level” dispense, resulting in a timeout condition.

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 130 USD in 1 USD denominations.			
2.		WFS_CMD_CDM_DISPENSE command issued.		
3.			Three “hardware level” dispense commands are required. CDM hardware is limited to dispensing 50 bills in any single “hardware level” dispense command.	
4.			WFS_EXEE_CDM_PARTIAL-DISPENSE event generated.	
5.			“Hardware level” dispense command issued for 50 USD.	
6.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented
7.			WFS_SRVE_CDM_SUBDISPENSEOK event generated.	
8.	User takes bills.			
9.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	
10.			“Hardware level” dispense command issued for 50 USD.	
11.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
12.			WFS_SRVE_CDM_SUBDISPENSEOK event generated.	
13.	User does not take bills.			
14.			Timeout occurs waiting on end-user to take bills.	
15.		WFS_CMD_CDM_DISPENSE completes with WFS_ERR_CDM_ITEMSNOT-TAKEN.		

8. Rules for Cash Unit Exchange

The XFS Start and End Exchange commands should be used by applications to supply the latest information with regards to cash unit replenishment state and content. This guarantees a certain amount of control to an application as to which denominations are stored in which position as well as the general physical state of the logical/physical cash units.

If a cash unit is removed from the CDM outside of the Start/End Exchange operations and subsequently reinserted the status of the physical cash unit should be set to WFS_CDM_STATCUMANIP to indicate to the application that the physical cash unit has been removed, reinserted and possibly tampered with. While the cash unit has this status the Service Provider should not attempt to use it as part of a Dispense operation. The WFS_CDM_STATCUMANIP status should not change until the next Start/End Exchange operation is performed, even if the cash unit is replaced in its original position.

If all the physical cash units belonging to a logical cash unit are manipulated the parent logical cash unit that the physical cash units belong to should also have its status set to WFS_CDM_STATCUMANIP.

When a cash unit is removed and/or replaced outside of the Start/End Exchange operations the original logical cash unit information such as the values, currency and counts should be preserved in the Cash Unit Info structure reported to the application for accounting purposes until the next Start/End Exchange operations, even if the cash unit physically contains a different denomination.

9. Events Associated with Cash Unit Status Changes

The following instances illustrate which events will be posted when the cash unit statuses change. In all cases *bHardwareSensor* = TRUE, *ulMaximum* = 0 and *ulMinimum* = 0.

9.1 One Physical Cash Unit Goes LOW

The following table describes a dispense transaction case where the status of a physical cash unit only changes from WFS_CDM_STATCUOK to WFS_CDM_STATCULOW.

- *Logical CU 1 consists of Physical CU 1 and Physical CU 2*

	Action	Status/Event
1.		Logical CU 1: WFS_CDM_STATCUOK - Physical CU 1: WFS_CDM_STATCUOK - Physical CU 2: WFS_CDM_STATCUOK
2.	A user withdraws items.	
3.	The device dispenses and presents the items from Physical CU 1, whose status changes to low.	
4.	The status of Logical CU 1 does not change.	Logical CU 1: WFS_CDM_STATCUOK - Physical CU 1: WFS_CDM_STATCULOW - Physical CU 2: WFS_CDM_STATCUOK WFS_SRVE_CDM_CASHUNITINFOCHANGED

9.2 Last Physical Cash Unit Goes LOW

The following table describes a dispense transaction case where the status of a logical cash unit changes from WFS_CDM_STATCUOK to WFS_CDM_STATCULOW.

- Logical CU 1 consists of Physical CU 1 and Physical CU 2

	<u>Action</u>	<u>Status/Event</u>
<u>1.</u>		Logical CU 1: <u>WFS_CDM_STATCUOK</u> - Physical CU 1: <u>WFS_CDM_STATCULOW</u> - Physical CU 2: <u>WFS_CDM_STATCUOK</u>
<u>2.</u>	<u>A user withdraws items.</u>	
<u>3.</u>	<u>The device dispenses and presents the items from Physical CU 2, whose status changes to low.</u>	
<u>4.</u>	<u>As a result, the status of Logical CU 1 changes to low.</u>	Logical CU 1: <u>WFS_CDM_STATCULOW</u> - Physical CU 1: <u>WFS_CDM_STATCULOW</u> - Physical CU 2: <u>WFS_CDM_STATCULOW</u> <u>WFS_SRVE_CDM_CASHUNITINFOCHANGED</u> <u>WFS_USRE_CDM_CASHUNITTHRESHOLD</u>

9.3 One Physical Cash Unit Goes INOP

The following table describes a dispense transaction case where the status of a logical cash unit changes from WFS_CDM_STATCUOK to WFS_CDM_STATCULOW as the result of a physical cash unit failure.

- Logical CU 1 consists of Physical CU 1 and Physical CU 2
- The device has ability to continue transaction when a problem occurs in a physical cash unit.

	<u>Action</u>	<u>Status/Event</u>
<u>1.</u>		<u>Logical CU 1: WFS_CDM_STATCUOK</u> <u>- Physical CU 1: WFS_CDM_STATCUOK</u> <u>- Physical CU 2: WFS_CDM_STATCULOW</u>
<u>2.</u>	<u>A user withdraws items.</u>	
<u>3.</u>	<u>The device tries to dispense the items from Physical CU 1; however, a problem occurs in the cash unit, whose status changes to inoperative.</u>	
<u>4.</u>	<u>The device complements the items by dispensing from Physical CU 2.</u>	
<u>5.</u>	<u>As a result, the status of Logical CU 1 changes to low.</u>	<u>Logical CU 1: WFS_CDM_STATCULOW</u> <u>- Physical CU 1: WFS_CDM_STATCUINOP</u> <u>- Physical CU 2: WFS_CDM_STATCULOW</u> <u>WFS_EXEE_CDM_CASHUNITERROR</u> <u>WFS_SRVE_CDM_CASHUNITINFOCHANGED</u> <u>WFS_USRE_CDM_CASHUNITTHRESHOLD</u>

9.4 Last Physical Cash Unit Goes EMPTY

The following table describes a dispense transaction case where the status of a logical cash unit changes from WFS_CDM_STATCULOW to WFS_CDM_STATCUEMPTY.

- *Logical CU 1 consists of Physical CU 1 and Physical CU 2*

	<u>Action</u>	<u>Status/Event</u>
1.		Logical CU 1: WFS_CDM_STATCULOW - Physical CU 1: WFS_CDM_STATCUEMPTY - Physical CU 2: WFS_CDM_STATCULOW
2.	<u>A user withdraws items.</u>	
3.	<u>The device dispenses and presents the items from Physical CU 2, whose status changes to empty.</u>	
4.	<u>As a result, the status of Logical CU 1 changes to empty.</u>	Logical CU 1: WFS_CDM_STATCUEMPTY - Physical CU 1: WFS_CDM_STATCUEMPTY - Physical CU 2: WFS_CDM_STATCUEMPTY WFS_SRVE_CDM_CASHUNITINFOCHANGED

10. Multiple Dispense Command Flow

The Multiple Dispense feature occurs when a `WFS_CMD_CDM_DISPENSE` execute command is issued multiple times to place items on the stacker. Adding to the stacked items with a second or third dispense may be required where the initially picked Cash Unit fails to fulfill the full dispense request. The application can choose to add to the stacker from another Cash Unit to fulfill the request. Additionally this feature covers the requirement to dispense multiple currencies with a mix number other than `WFS_CDM_INDIVIDUAL`. Multiple currencies can be picked separately with the bunch of items assembled on the stacker before presentation to the customer.

Applications can refer to `WFSCDMCAPS.fwMoveItems` to determine if the Service Provider supports the feature. If a Service Provider supports this feature but an application does not wish to use it, the application should check `WFSCDMSTATUS.fwIntermediateStacker` to determine whether items on the stacker need to be purged prior to a dispense.

Multiple Dispense Example ‘Out of Notes’

In the following example `WFSCDMCAPS.fwMoveItems` reports `WFS_CDM_TOSTACKER`. The CDM has 2 logical Cash Units. Cash Unit 1 has 20USD. Cash Unit 2 has 10USD. Cash Unit 1 has only 2 notes left. This table illustrates multiple `WFS_CMD_CDM_DISPENSE` commands to fulfill a dispense request.

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 60 USD.	<code>WFS_CMD_CDM_DISPENSE</code> <code>usMixNumber =</code> <code>WFS_CDM_INDIVIDUAL</code> <code>bPresent = FALSE</code> Request USD20x3 from Cash Unit 1.		2 of 3 items picked and stacked.
2.			<code>WFS_EXEE_CDM_INCOMPLETEDISPENSE</code> event. <code>lpDenomination</code> output records that 2x20USD were stacked.	
3.			<code>WFS_CMD_CDM_DISPENSE</code> completes <code>WFS_ERR_CDM_NOTDISPENSABLE</code>	
4.		The application decides that the dispense can be fulfilled and calculates the 20USD shortfall can be made up from the 10USD Cash Unit. <code>WFS_CMD_CDM_DISPENSE</code> <code>usMixNumber =</code> <code>WFS_CDM_INDIVIDUAL</code> <code>bPresent = FALSE</code> Request USD10x2 from Cash Unit 2.		2 of 2 notes picked and stacked together with the items already stacked.
5.			<code>WFS_CMD_CDM_DISPENSE</code> completes <code>WFS_SUCCESS</code> <code>lpDenomination</code> output records that 2x10USD were stacked.	
6.		Call <code>WFS_CMD_CDM_PRESENT</code>	<code>WFS_SRVE_CDM_SHUTTERSTATUS-CHANGED(WFS_CDM_SHTOPEN)</code> event generated	Items presented.
7.			<code>WFS_CMD_CDM_PRESENT</code> completes <code>WFS_SUCCESS</code>	
8.	User takes bills.		<code>WFS_SRVE_CDM_ITEMSTAKEN</code> event generated. <code>WFS_SRVE_CDM_SHUTTERSTATUS-CHANGED(WFS_CDM_SHTCLOSED)</code> event generated	

<u>Step</u>	<u>End-User</u>	<u>Application</u>	<u>XFS SP</u>	<u>CDM Hardware</u>

Multiple Dispense Example ‘Multiple Currency with Vendor Mix’

In the following example WFSCDMCAPS.fvMoveItems reports WFS_CDM_TOSTACKER.
The CDM has 2 logical Cash Units with good supply of notes in each. Cash Unit 1 has 20CHF, Cash Unit 2 has 20EUR.

This table illustrates multiple WFS_CMD_CDM_DISPENSE commands to fulfill a dispense request of EUR and CHF notes with vendor defined mix number. WFSCDMMIXTYPE.usMixNumber = 1.

<u>Step</u>	<u>End-User</u>	<u>Application</u>	<u>XFS SP</u>	<u>CDM Hardware</u>
1.	User wants to dispense 100 EUR and 100 CHF.	Application will split the dispense stacking all money before a single present. <u>WFS_CMD_CDM_DISPENSE</u> <u>usMixNumber = 1</u> <u>bPresent = FALSE</u> <u>Request 100 EUR.</u>		100 EUR picked and stacked.
2.			<u>WFS_CMD_CDM_DISPENSE</u> completes <u>WFS_SUCCESS</u> <u>lpDenomination</u> output records that 5x20EUR were stacked.	
3.		<u>WFS_CMD_CDM_DISPENSE</u> <u>usMixNumber =</u> <u>WFS_CDM_INDIVIDUAL</u> <u>bPresent = FALSE</u> <u>Request 100 CHF.</u>		100 CHF picked and stacked.
4.			<u>WFS_CMD_CDM_DISPENSE</u> completes <u>WFS_SUCCESS</u> <u>lpDenomination</u> output records that 5x20CHF were stacked.	
5.		<u>Call WFS_CMD_CDM_PRESENT</u>	<u>WFS_SRVE_CDM_SHUTTERSTATUS</u> <u>CHANGED(WFS_CDM_SHTOPEN)</u> event generated	Items presented.
6.			<u>WFS_CMD_CDM_PRESENT</u> completes <u>WFS_SUCCESS</u>	
7.	User takes bills.		<u>WFS_SRVE_CDM_ITEMSTAKEN</u> event generated. <u>WFS_SRVE_CDM_SHUTTERSTATUS</u> <u>CHANGED(WFS_CDM_SHTCLOSED)</u> event generated	

9.11. C - Header file

```

/*****
*
* xfscdm.h      XFS - Cash Dispenser (CDM) definitions
*
*              Version 3.2030   (March 02-201119 2015)
*
*****/

#ifndef __INC_XFSCDM__H
#define __INC_XFSCDM__H

#ifdef __cplusplus
extern "C" {
#endif

#include <xfsap.h>

/* be aware of alignment */
#pragma pack (push, 1)

/* values of WFS_CDMCAPS.wClass */

#define WFS_SERVICE_CLASS_CDM (3)
#define WFS_SERVICE_CLASS_VERSION_CDM 0x14030x1E03 /* Version 3.2030 */
/*
#define WFS_SERVICE_CLASS_NAME_CDM "CDM"

#define CDM_SERVICE_OFFSET (WFS_SERVICE_CLASS_CDM * 100)

/* CDM Info Commands */

#define WFS_INF_CDM_STATUS (CDM_SERVICE_OFFSET + 1)
#define WFS_INF_CDM_CAPABILITIES (CDM_SERVICE_OFFSET + 2)
#define WFS_INF_CDM_CASH_UNIT_INFO (CDM_SERVICE_OFFSET + 3)
#define WFS_INF_CDM_TELLER_INFO (CDM_SERVICE_OFFSET + 4)
#define WFS_INF_CDM_CURRENCY_EXP (CDM_SERVICE_OFFSET + 6)
#define WFS_INF_CDM_MIX_TYPES (CDM_SERVICE_OFFSET + 7)
#define WFS_INF_CDM_MIX_TABLE (CDM_SERVICE_OFFSET + 8)
#define WFS_INF_CDM_PRESENT_STATUS (CDM_SERVICE_OFFSET + 9)
#define WFS_INF_CDM_GET_ITEM_INFO (CDM_SERVICE_OFFSET + 10)
#define WFS_INF_CDM_GET_BLACKLIST (CDM_SERVICE_OFFSET + 11)
#define WFS_INF_CDM_GET_ALL_ITEMS_INFO (CDM_SERVICE_OFFSET + 12)

/* CDM Execute Commands */

#define WFS_CMD_CDM_DENOMINATE (CDM_SERVICE_OFFSET + 1)
#define WFS_CMD_CDM_DISPENSE (CDM_SERVICE_OFFSET + 2)
#define WFS_CMD_CDM_PRESENT (CDM_SERVICE_OFFSET + 3)
#define WFS_CMD_CDM_REJECT (CDM_SERVICE_OFFSET + 4)
#define WFS_CMD_CDM_RETRACT (CDM_SERVICE_OFFSET + 5)
#define WFS_CMD_CDM_OPEN_SHUTTER (CDM_SERVICE_OFFSET + 7)
#define WFS_CMD_CDM_CLOSE_SHUTTER (CDM_SERVICE_OFFSET + 8)
#define WFS_CMD_CDM_SET_TELLER_INFO (CDM_SERVICE_OFFSET + 9)
#define WFS_CMD_CDM_SET_CASH_UNIT_INFO (CDM_SERVICE_OFFSET + 10)
#define WFS_CMD_CDM_START_EXCHANGE (CDM_SERVICE_OFFSET + 11)
#define WFS_CMD_CDM_END_EXCHANGE (CDM_SERVICE_OFFSET + 12)
#define WFS_CMD_CDM_OPEN_SAFE_DOOR (CDM_SERVICE_OFFSET + 13)
#define WFS_CMD_CDM_CALIBRATE_CASH_UNIT (CDM_SERVICE_OFFSET + 15)
#define WFS_CMD_CDM_SET_MIX_TABLE (CDM_SERVICE_OFFSET + 20)
#define WFS_CMD_CDM_RESET (CDM_SERVICE_OFFSET + 21)
#define WFS_CMD_CDM_TEST_CASH_UNITS (CDM_SERVICE_OFFSET + 22)
#define WFS_CMD_CDM_COUNT (CDM_SERVICE_OFFSET + 23)
#define WFS_CMD_CDM_SET_GUIDANCE_LIGHT (CDM_SERVICE_OFFSET + 24)
#define WFS_CMD_CDM_POWER_SAVE_CONTROL (CDM_SERVICE_OFFSET + 25)
#define WFS_CMD_CDM_PREPARE_DISPENSE (CDM_SERVICE_OFFSET + 26)
#define WFS_CMD_CDM_SET_BLACKLIST (CDM_SERVICE_OFFSET + 27)

```



```

#define WFS_CMD_CDM_SYNCHRONIZE_COMMAND (CDM_SERVICE_OFFSET + 28)

/* CDM Messages */

#define WFS_SRVE_CDM_SAFEDOOROPEN (CDM_SERVICE_OFFSET + 1)
#define WFS_SRVE_CDM_SAFEDOORCLOSED (CDM_SERVICE_OFFSET + 2)
#define WFS_USRE_CDM_CASHUNITTHRESHOLD (CDM_SERVICE_OFFSET + 3)
#define WFS_SRVE_CDM_CASHUNITINFOCHANGED (CDM_SERVICE_OFFSET + 4)
#define WFS_SRVE_CDM_TELLERINFOCHANGED (CDM_SERVICE_OFFSET + 5)
#define WFS_EXEE_CDM_DELAYEDDISPENSE (CDM_SERVICE_OFFSET + 6)
#define WFS_EXEE_CDM_STARTDISPENSE (CDM_SERVICE_OFFSET + 7)
#define WFS_EXEE_CDM_CASHUNITERROR (CDM_SERVICE_OFFSET + 8)
#define WFS_SRVE_CDM_ITEMSTAKEN (CDM_SERVICE_OFFSET + 9)
#define WFS_EXEE_CDM_PARTIALDISPENSE (CDM_SERVICE_OFFSET + 10)
#define WFS_EXEE_CDM_SUBDISPENSEOK (CDM_SERVICE_OFFSET + 11)
#define WFS_SRVE_CDM_ITEMSPRESENTED (CDM_SERVICE_OFFSET + 13)
#define WFS_SRVE_CDM_COUNTS_CHANGED (CDM_SERVICE_OFFSET + 14)
#define WFS_EXEE_CDM_INCOMPLETEDISPENSE (CDM_SERVICE_OFFSET + 15)
#define WFS_EXEE_CDM_NOTEERROR (CDM_SERVICE_OFFSET + 16)
#define WFS_SRVE_CDM_MEDIADETECTED (CDM_SERVICE_OFFSET + 17)
#define WFS_EXEE_CDM_INPUT_P6 (CDM_SERVICE_OFFSET + 18)
#define WFS_SRVE_CDM_DEVICEPOSITION (CDM_SERVICE_OFFSET + 19)
#define WFS_SRVE_CDM_POWER_SAVE_CHANGE (CDM_SERVICE_OFFSET + 20)
#define WFS_EXEE_CDM_INFO_AVAILABLE (CDM_SERVICE_OFFSET + 21)
#define WFS_EXEE_CDM_INCOMPLETERETRACT (CDM_SERVICE_OFFSET + 22)
#define WFS_SRVE_CDM_SHUTTERSTATUSCHANGED (CDM_SERVICE_OFFSET + 23)

/* values of WFSCDMSTATUS.fwDevice */

#define WFS_CDM_DEVONLINE WFS_STAT_DEVONLINE
#define WFS_CDM_DEVOFFLINE WFS_STAT_DEVOFFLINE
#define WFS_CDM_DEVPOWEROFF WFS_STAT_DEVPOWEROFF
#define WFS_CDM_DEVNODEVICE WFS_STAT_DEVNODEVICE
#define WFS_CDM_DEVHWERROR WFS_STAT_DEVHWERROR
#define WFS_CDM_DEVUSERERROR WFS_STAT_DEVUSERERROR
#define WFS_CDM_DEVBUSY WFS_STAT_DEVBUSY
#define WFS_CDM_DEVFRAUDATTEMPT WFS_STAT_DEVFRAUDATTEMPT
#define WFS_CDM_DEVPOTENTIALFRAUD WFS_STAT_DEVPOTENTIALFRAUD

/* values of WFSCDMSTATUS.fwSafeDoor */

#define WFS_CDM_DOORNOTSUPPORTED (1)
#define WFS_CDM_DOOROPEN (2)
#define WFS_CDM_DOORCLOSED (3)
#define WFS_CDM_DOORUNKNOWN (5)

/* values of WFSCDMSTATUS.fwDispenser */

#define WFS_CDM_DISPOK (0)
#define WFS_CDM_DISPCUSTATE (1)
#define WFS_CDM_DISPCUSTOP (2)
#define WFS_CDM_DISPCUUNKNOWN (3)

/* values of WFSCDMSTATUS.fwIntermediateStacker */

#define WFS_CDM_ISEMPY (0)
#define WFS_CDM_ISNOTEMPTY (1)
#define WFS_CDM_ISNOTEMPTYCUST (2)
#define WFS_CDM_ISNOTEMPTYUNK (3)
#define WFS_CDM_ISUNKNOWN (4)
#define WFS_CDM_ISNOTSUPPORTED (5)

/* Size and max index of dwGuidLights array */

#define WFS_CDM_GUIDLIGHTS_SIZE (32)
#define WFS_CDM_GUIDLIGHTS_MAX (WFS_CDM_GUIDLIGHTS_SIZE - 1)

/* Indices of WFSCDMSTATUS.dwGuidLights [...]

```

```

        WFSCDMCAPS.dwGuidLights [...] */

#define      WFS_CDM_GUIDANCE_POSOUTNULL          (0)
#define      WFS_CDM_GUIDANCE_POSOUTLEFT         (1)
#define      WFS_CDM_GUIDANCE_POSOUTRIGHT        (2)
#define      WFS_CDM_GUIDANCE_POSOUTCENTER       (3)
#define      WFS_CDM_GUIDANCE_POSOUTTOP          (4)
#define      WFS_CDM_GUIDANCE_POSOUTBOTTOM       (5)
#define      WFS_CDM_GUIDANCE_POSOUTFRONT        (6)
#define      WFS_CDM_GUIDANCE_POSOUTREAR         (7)

/* Values of WFSCDMSTATUS.dwGuidLights [...]
   WFSCDMCAPS.dwGuidLights [...] */

#define      WFS_CDM_GUIDANCE_OFF                 (0x00000001)
#define      WFS_CDM_GUIDANCE_SLOW_FLASH          (0x00000004)
#define      WFS_CDM_GUIDANCE_MEDIUM_FLASH        (0x00000008)
#define      WFS_CDM_GUIDANCE_QUICK_FLASH         (0x00000010)
#define      WFS_CDM_GUIDANCE_CONTINUOUS          (0x00000080)
#define      WFS_CDM_GUIDANCE_RED                 (0x00000100)
#define      WFS_CDM_GUIDANCE_GREEN               (0x00000200)
#define      WFS_CDM_GUIDANCE_YELLOW              (0x00000400)
#define      WFS_CDM_GUIDANCE_BLUE                (0x00000800)
#define      WFS_CDM_GUIDANCE_CYAN               (0x00001000)
#define      WFS_CDM_GUIDANCE_MAGENTA            (0x00002000)
#define      WFS_CDM_GUIDANCE_WHITE              (0x00004000)
| #define      WFS_CDM_GUIDANCE_EXIT              (0x00200000)

/* Values of WFSCDMSTATUS.dwGuidLights [...]
   WFSCDMCAPS.dwGuidLights [...] */

#define      WFS_CDM_GUIDANCE_NOT_AVAILABLE       (0x0000)

/* values of WFSCDMSTATUS.wDevicePosition
   WFSCDMDEVICEPOSITION.wPosition */

#define      WFS_CDM_DEVICEINPOSITION            (0)
#define      WFS_CDM_DEVICENOTINPOSITION         (1)
#define      WFS_CDM_DEVICEPOSUNKNOWN            (2)
#define      WFS_CDM_DEVICEPOSNOTSUPP            (3)

/* values of WFSCDMOUTPOS.fwShutter */

#define      WFS_CDM_SHTCLOSED                   (0)
#define      WFS_CDM_SHTOPEN                     (1)
#define      WFS_CDM_SHTJAMMED                   (2)
#define      WFS_CDM_SHTUNKNOWN                  (3)
#define      WFS_CDM_SHTNOTSUPPORTED             (4)

/* values of WFSCDMOUTPOS.fwPositionStatus */

#define      WFS_CDM_PSEMPY                      (0)
#define      WFS_CDM_PSNOTEMPTY                  (1)
#define      WFS_CDM_PSUNKNOWN                   (2)
#define      WFS_CDM_PSNOTSUPPORTED              (3)

/* values of WFSCDMOUTPOS.fwTransport */

#define      WFS_CDM_TPOK                        (0)
#define      WFS_CDM_TPINOP                      (1)
#define      WFS_CDM_TPUNKNOWN                   (2)
#define      WFS_CDM_TPNOTSUPPORTED              (3)

/* values of WFSCDMOUTPOS.fwTransportStatus */

#define      WFS_CDM_TPSTATEMPY                  (0)
#define      WFS_CDM_TPSTATNOTEMPTY              (1)
#define      WFS_CDM_TPSTATNOTEMPTYCUST          (2)
#define      WFS_CDM_TPSTATNOTEMPTY_UNK         (3)
#define      WFS_CDM_TPSTATNOTSUPPORTED          (4)

```

```

/* values of WFSCDMOUTPOS.fwJammedShutterPosition */

#define WFS_CDM_SHUTTERPOS_NOTSUPPORTED (0)
#define WFS_CDM_SHUTTERPOS_NOTJAMMED (1)
#define WFS_CDM_SHUTTERPOS_OPEN (2)
#define WFS_CDM_SHUTTERPOS_PARTIALLY_OPEN (3)
#define WFS_CDM_SHUTTERPOS_CLOSED (4)
#define WFS_CDM_SHUTTERPOS_UNKNOWN (5)

/* values of WFSCDMCAPS.fwType */

#define WFS_CDM_TELLERBILL (0)
#define WFS_CDM_SELFSERVICEBILL (1)
#define WFS_CDM_TELLERCOIN (2)
#define WFS_CDM_SELFSERVICECOIN (3)

/* values of WFSCDMCAPS.fwRetractAreas,
   WFSCDMRETRACT.usRetractArea */

#define WFS_CDM_RA_RETRACT (0x0001)
#define WFS_CDM_RA_TRANSPORT (0x0002)
#define WFS_CDM_RA_STACKER (0x0004)
#define WFS_CDM_RA_REJECT (0x0008)
#define WFS_CDM_RA_NOTSUPP (0x0010)
#define WFS_CDM_RA_ITEMCASSETTE (0x0020)

/* values of WFSCDMCAPS.fwRetractTransportActions,
   WFSCDMCAPS.fwRetractStackerActions */

#define WFS_CDM_PRESENT (0x0001)
#define WFS_CDM_RETRACT (0x0002)
#define WFS_CDM_REJECT (0x0004)
#define WFS_CDM_NOTSUPP (0x0008)
#define WFS_CDM_ITEMCASSETTE (0x0010)

/* values of WFSCDMCAPS.fwMoveItems */

#define WFS_CDM_FROMCU (0x0001)
#define WFS_CDM_TOCU (0x0002)
#define WFS_CDM_TOTRANSPORT (0x0004)
#define WFS_CDM_TOSTACKER (0x0008)

/* values of WFSCDMCASHUNIT.usType */

#define WFS_CDM_TYPENA (1)
#define WFS_CDM_TYPEREJECTCASSETTE (2)
#define WFS_CDM_TYPEBILLCASSETTE (3)
#define WFS_CDM_TYPECOINCYLINDER (4)
#define WFS_CDM_TYPECOINDISPENSER (5)
#define WFS_CDM_TYPERETRACTCASSETTE (6)
#define WFS_CDM_TYPECOUPON (7)
#define WFS_CDM_TYPEDOCUMENT (8)
#define WFS_CDM_TYPEREPCONTAINER (11)
#define WFS_CDM_TYPERECYCLING (12)

/* values of WFSCDMCASHUNIT.usStatus */

#define WFS_CDM_STATCUOK (0)
#define WFS_CDM_STATCUFULL (1)
#define WFS_CDM_STATCUHIGH (2)
#define WFS_CDM_STATCULOW (3)
#define WFS_CDM_STATCUEMPTY (4)
#define WFS_CDM_STATCUINOP (5)
#define WFS_CDM_STATCUMISSING (6)
#define WFS_CDM_STATCUNOVAL (7)
#define WFS_CDM_STATCUNOREF (8)
#define WFS_CDM_STATCUMANIP (9)

/* values of WFSCDMMIXTYPE.usMixType */

```

```

#define      WFS_CDM_MIXALGORITHM                (1)
#define      WFS_CDM_MIXTABLE                    (2)

/* values of WFSCDMMIXTYPE.usMixNumber */

#define      WFS_CDM_INDIVIDUAL                  (0)

/* values of WFSCDMMIXTYPE.usSubType (predefined mix algorithms) */

#define      WFS_CDM_MIX_MINIMUM_NUMBER_OF_BILLS (1)
#define      WFS_CDM_MIX_EQUAL_EMPTYING_OF_CASH_UNITS (2)
#define      WFS_CDM_MIX_MAXIMUM_NUMBER_OF_CASH_UNITS (3)

/* values of WFSCDMPRESENTSTATUS.wPresentState */

#define      WFS_CDM_PRESENTED                   (1)
#define      WFS_CDM_NOTPRESENTED                (2)
#define      WFS_CDM_UNKNOWN                     (3)

/* values of WFSCDMDISPENSE.fwPosition,
   WFSCDMCAPS.fwPositions,
   WFSCDMOUTPOS.fwPosition,
   WFSCDMTELLERDETAILS.fwOutputPosition,
   WFSCDMPHYSICALCU.fwPosition */

#define      WFS_CDM_POSNULL                     (0x0000)
#define      WFS_CDM_POSLEFT                     (0x0001)
#define      WFS_CDM_POSRIGHT                   (0x0002)
#define      WFS_CDM_POSCENTER                  (0x0004)
#define      WFS_CDM_POSTOP                     (0x0040)
#define      WFS_CDM_POSBOTTOM                  (0x0080)
#define      WFS_CDM_POSFRONT                   (0x0800)
#define      WFS_CDM_POSREAR                    (0x1000)

/* additional values of WFSCDMPHYSICALCU.fwPosition */
#define      WFS_CDM_POSREJECT                   (0x0100)

/* values of WFSCDMTELLERDETAILS.ulInputPosition */

#define      WFS_CDM_POSINLEFT                  (0x0001)
#define      WFS_CDM_POSINRIGHT                 (0x0002)
#define      WFS_CDM_POSINCENTER                (0x0004)
#define      WFS_CDM_POSINTOP                   (0x0008)
#define      WFS_CDM_POSINBOTTOM                (0x0010)
#define      WFS_CDM_POSINFRONT                 (0x0020)
#define      WFS_CDM_POSINREAR                  (0x0040)

/* values of fwExchangeType */

#define      WFS_CDM_EXBYHAND                    (0x0001)
#define      WFS_CDM_EXTOCASSETTES              (0x0002)

/* values of WFSCDMTELLERUPDATE.usAction */

#define      WFS_CDM_CREATE_TELLER              (1)
#define      WFS_CDM_MODIFY_TELLER              (2)
#define      WFS_CDM_DELETE_TELLER              (3)

/* values of WFSCDMCUERROR.wFailure */

#define      WFS_CDM_CASHUNITEMPTY              (1)
#define      WFS_CDM_CASHUNITERROR              (2)
#define      WFS_CDM_CASHUNITFULL              (4)
#define      WFS_CDM_CASHUNITLOCKED             (5)
#define      WFS_CDM_CASHUNITINVALID            (6)
#define      WFS_CDM_CASHUNITCONFIG             (7)
#define      WFS_CDM_CASHUNITNOTCONF            (8)

/* values of lpusReason in WFS_EXEE_CDM_NOTERROR */

```

```

#define WFS_CDM_DOUBLENOTEDETECTED (1)
#define WFS_CDM_LONGNOTEDETECTED (2)
#define WFS_CDM_SKEWEDNOTE (3)
#define WFS_CDM_INCORRECTCOUNT (4)
#define WFS_CDM_NOTESTOOCLOSE (5)
#define WFS_CDM_OTHERNOTEERROR (6)
#define WFS_CDM_SHORTNOTEDETECTED (7)

/* values of WFSCDMPREPAREDISPENSE.wAction */

#define WFS_CDM_START (1)
#define WFS_CDM_STOP (2)

/* values of WFSCDMSTATUS.wAntiFraudModule */

#define WFS_CDM_AFMNOTSUPP (0)
#define WFS_CDM_AFMOK (1)
#define WFS_CDM_AFMINOP (2)
#define WFS_CDM_AFMDEVICEDETECTED (3)
#define WFS_CDM_AFMUNKNOWN (4)

/* values of WFSCDMGETITEMINFO.usLevel,
   WFSCDMITEMINFOSUMMARY.usLevel,
   WFSCDMGETALLITEMSINFO.usLevel,
   WFSCDMITEMINFOALL.usLevel */

#define WFS_CDM_LEVEL_1 (1)
#define WFS_CDM_LEVEL_2 (2)
#define WFS_CDM_LEVEL_3 (3)
#define WFS_CDM_LEVEL_4 (4)

/* values of WFSCDMITEMINFOALL.usLevel */

#define WFS_CDM_LEVEL_ALL (0)

/* values for WFSCDMGETITEMINFO.dwItemInfoType */

#define WFS_CDM_ITEM_SERIALNUMBER (0x00000001)
#define WFS_CDM_ITEM_SIGNATURE (0x00000002)
#define WFS_CDM_ITEM_IMAGEFILE (0x00000004)

/* values of lpusReason in WFS_EXEE_CDM_INCOMPLETERETRACT */

#define WFS_CDM_IRRETRACTFAILURE (1)
#define WFS_CDM_IRRETRACTAREAFULL (2)
#define WFS_CDM_IRFOREIGNITEMSDETECTED (3)
#define WFS_CDM_IRINVALIDBUNCH (4)

/* values for WFSCDMITEMINFOALL.wOnBlacklist */

#define WFS_CDM_ONBLACKLIST (0x0001)
#define WFS_CDM_NOTONBLACKLIST (0x0002)
#define WFS_CDM_BLACKLISTUNKNOWN (0x0003)

/* values for WFSCDMITEMINFOALL.wItemLocation */

#define WFS_CDM_LOCATION_DEVICE (0x0001)
#define WFS_CDM_LOCATION_CASHUNIT (0x0002)
#define WFS_CDM_LOCATION_CUSTOMER (0x0003)
#define WFS_CDM_LOCATION_UNKNOWN (0x0004)

/* XFS_CDM Errors */

#define WFS_ERR_CDM_INVALIDCURRENCY (- (CDM_SERVICE_OFFSET + 0))
#define WFS_ERR_CDM_INVALIDTELLERID (- (CDM_SERVICE_OFFSET + 1))
#define WFS_ERR_CDM_CASHUNITERROR (- (CDM_SERVICE_OFFSET + 2))
#define WFS_ERR_CDM_INVALIDDENOMINATION (- (CDM_SERVICE_OFFSET + 3))
#define WFS_ERR_CDM_INVALIDMIXNUMBER (- (CDM_SERVICE_OFFSET + 4))
#define WFS_ERR_CDM_NOCURRENCYMIX (- (CDM_SERVICE_OFFSET + 5))

```

```

#define WFS_ERR_CDM_NOTDISPENSABLE          (- (CDM_SERVICE_OFFSET + 6))
#define WFS_ERR_CDM_TOOMANYITEMS            (- (CDM_SERVICE_OFFSET + 7))
#define WFS_ERR_CDM_UNSUPPOSITION           (- (CDM_SERVICE_OFFSET + 8))
#define WFS_ERR_CDM_SAFE_DOOR_OPEN          (- (CDM_SERVICE_OFFSET + 10))
#define WFS_ERR_CDM_SHUTTER_NOT_OPEN        (- (CDM_SERVICE_OFFSET + 12))
#define WFS_ERR_CDM_SHUTTER_OPEN            (- (CDM_SERVICE_OFFSET + 13))
#define WFS_ERR_CDM_SHUTTER_CLOSED          (- (CDM_SERVICE_OFFSET + 14))
#define WFS_ERR_CDM_INVALID_DCASH_UNIT      (- (CDM_SERVICE_OFFSET + 15))
#define WFS_ERR_CDM_NO_ITEMS                (- (CDM_SERVICE_OFFSET + 16))
#define WFS_ERR_CDM_EXCHANGE_ACTIVE          (- (CDM_SERVICE_OFFSET + 17))
#define WFS_ERR_CDM_NO_EXCHANGE_ACTIVE       (- (CDM_SERVICE_OFFSET + 18))
#define WFS_ERR_CDM_SHUTTER_NOT_CLOSED      (- (CDM_SERVICE_OFFSET + 19))
#define WFS_ERR_CDM_PREROR_NO_ITEMS         (- (CDM_SERVICE_OFFSET + 20))
#define WFS_ERR_CDM_PREROR_ITEMS            (- (CDM_SERVICE_OFFSET + 21))
#define WFS_ERR_CDM_PREROR_UNKNOWN          (- (CDM_SERVICE_OFFSET + 22))
#define WFS_ERR_CDM_ITEM_STAKEN              (- (CDM_SERVICE_OFFSET + 23))
#define WFS_ERR_CDM_INVALID_MIXTABLE        (- (CDM_SERVICE_OFFSET + 27))
#define WFS_ERR_CDM_OUTPUT_POS_NOT_EMPTY    (- (CDM_SERVICE_OFFSET + 28))
#define WFS_ERR_CDM_INVALID_RETRACT_POS     (- (CDM_SERVICE_OFFSET + 29))
#define WFS_ERR_CDM_NOT_RETRACT_AREA        (- (CDM_SERVICE_OFFSET + 30))
#define WFS_ERR_CDM_NO_CASH_BOX_PRESENT     (- (CDM_SERVICE_OFFSET + 33))
#define WFS_ERR_CDM_AMOUNT_NOT_IN_MIXTABLE  (- (CDM_SERVICE_OFFSET + 34))
#define WFS_ERR_CDM_ITEMS_NOT_TAKEN         (- (CDM_SERVICE_OFFSET + 35))
#define WFS_ERR_CDM_ITEMS_LEFT              (- (CDM_SERVICE_OFFSET + 36))
#define WFS_ERR_CDM_INVALID_PORT            (- (CDM_SERVICE_OFFSET + 37))
#define WFS_ERR_CDM_POWER_SAVE_TOO_SHORT    (- (CDM_SERVICE_OFFSET + 38))
#define WFS_ERR_CDM_POWER_SAVE_MEDIA_PRESENT (- (CDM_SERVICE_OFFSET + 39))
#define WFS_ERR_CDM_POSITION_NOT_EMPTY      (- (CDM_SERVICE_OFFSET + 40))
#define WFS_ERR_CDM_INCOMPLETE_RETRACT      (- (CDM_SERVICE_OFFSET + 41))
#define WFS_ERR_CDM_COMMAND_UNSUPP          (- (CDM_SERVICE_OFFSET + 42))
#define WFS_ERR_CDM_SYNCHRONIZE_UNSUPP      (- (CDM_SERVICE_OFFSET + 43))

```

```

/*=====*/
/* CDM Info Command Structures */
/*=====*/

```

```

typedef struct _wfs_cdm_position
{
    WORD          fwPosition;
    WORD          fwShutter;
    WORD          fwPositionStatus;
    WORD          fwTransport;
    WORD          fwTransportStatus;
    WORD          fwJammedShutterPosition;

```

```

} WFS_CDM_OUTPOS, *LPWFS_CDM_OUTPOS;

```

```

typedef struct _wfs_cdm_status
{
    WORD          fwDevice;
    WORD          fwSafeDoor;
    WORD          fwDispenser;
    WORD          fwIntermediateStacker;
    LPWFS_CDM_OUTPOS *lppPositions;
    LPSTR          lpszExtra;
    DWORD          dwGuidLights[WFS_CDM_GUIDLIGHTS_SIZE];
    WORD          wDevicePosition;
    USHORT         usPowerSaveRecoveryTime;
    WORD          wAntiFraudModule;
} WFS_CDM_STATUS, *LPWFS_CDM_STATUS;

```

```

typedef struct _wfs_cdm_caps
{
    WORD          wClass;
    WORD          fwType;
    WORD          wMaxDispenseItems;
    BOOL          bCompound;
    BOOL          bShutter;
    BOOL          bShutterControl;
    WORD          fwRetractAreas;

```

```

WORD                fwRetractTransportActions;
WORD                fwRetractStackerActions;
BOOL               bSafeDoor;
BOOL               bCashBox;
BOOL               bIntermediateStacker;
BOOL               bItemsTakenSensor;
WORD               fwPositions;
WORD               fwMoveItems;
WORD               fwExchangeType;
LPSTR              lpszExtra;
DWORD              dwGuidLights[WFS_CDM_GUIDLIGHTS_SIZE];
BOOL               bPowerSaveControl;
BOOL               bPrepareDispense;
BOOL               bAntiFraudModule;
DWORD             dwItemInfoTypes;
BOOL             bBlacklist;
LPDWORD           lpdwSynchronizableCommands;
} WFS_CDMCAPS, *LPWFS_CDMCAPS;

```

```

typedef struct _wfs_cdm_physicalcu
{
    LPSTR              lpPhysicalPositionName;
    CHAR               cUnitID[5];
    ULONG              ulInitialCount;
    ULONG              ulCount;
    ULONG              ulRejectCount;
    ULONG              ulMaximum;
    USHORT             usPStatus;
    BOOL               bHardwareSensor;
    ULONG              ulDispensedCount;
    ULONG              ulPresentedCount;
    ULONG              ulRetractedCount;
} WFS_CDMPHCU, *LPWFS_CDMPHCU;

```

```

typedef struct _wfs_cdm_cashunit
{
    USHORT             usNumber;
    USHORT             usType;
    LPSTR              lpszCashUnitName;
    CHAR               cUnitID[5];
    CHAR               cCurrencyID[3];
    ULONG              ulValues;
    ULONG              ulInitialCount;
    ULONG              ulCount;
    ULONG              ulRejectCount;
    ULONG              ulMinimum;
    ULONG              ulMaximum;
    BOOL               bAppLock;
    USHORT             usStatus;
    USHORT             usNumPhysicalCUs;
    LPWFS_CDMPHCU      *lppPhysical;
    ULONG              ulDispensedCount;
    ULONG              ulPresentedCount;
    ULONG              ulRetractedCount;
} WFS_CDMCASHUNIT, *LPWFS_CDMCASHUNIT;

```

```

typedef struct _wfs_cdm_cu_info
{
    USHORT             usTellerID;
    USHORT             usCount;
    LPWFS_CDMCASHUNIT *lppList;
} WFS_CDMCUINFO, *LPWFS_CDMCUINFO;

```

```

typedef struct _wfs_cdm_teller_info
{
    USHORT             usTellerID;
    CHAR               cCurrencyID[3];
} WFS_CDMTELLERINFO, *LPWFS_CDMTELLERINFO;

```

```

typedef struct _wfs_cdm_teller_totals

```

```

{
    char CHAR          cCurrencyID[3];
    ULONG              ulItemsReceived;
    ULONG              ulItemsDispensed;
    ULONG              ulCoinsReceived;
    ULONG              ulCoinsDispensed;
    ULONG              ulCashBoxReceived;
    ULONG              ulCashBoxDispensed;
} WFSCDMTELLERTOTALS, *LPWFSCDMTELLERTOTALS;

typedef struct _wfs_cdm_teller_details
{
    USHORT              usTellerID;
    ULONG              ulInputPosition;
    WORD               fwOutputPosition;
    LPWFSCDMTELLERTOTALS *lppTellerTotals;
} WFSCDMTELLERDETAILS, *LPWFSCDMTELLERDETAILS;

typedef struct _wfs_cdm_currency_exp
{
    CHAR                cCurrencyID[3];
    SHORT              sExponent;
} WFSCDMCURRENCYEXP, *LPWFSCDMCURRENCYEXP;

typedef struct _wfs_cdm_mix_type
{
    USHORT              usMixNumber;
    USHORT              usMixType;
    USHORT              usSubType;
    LPSTR              lpszName;
} WFSCDMMIXTYPE, *LPWFSCDMMIXTYPE;

typedef struct _wfs_cdm_mix_row
{
    ULONG              ulAmount;
    LPUSHORT           lpusMixture;
} WFSCDMMIXROW, *LPWFSCDMMIXROW;

typedef struct _wfs_cdm_mix_table
{
    USHORT              usMixNumber;
    LPSTR              lpszName;
    USHORT              usRows;
    USHORT              usCols;
    LPULONG            lpulMixHeader;
    LPWFSCDMMIXROW     *lppMixRows;
} WFSCDMMIXTABLE, *LPWFSCDMMIXTABLE;

typedef struct _wfs_cdm_denomination
{
    CHAR                cCurrencyID[3];
    ULONG              ulAmount;
    USHORT              usCount;
    LPULONG            lpulValues;
    ULONG              ulCashBox;
} WFSCDMDENOMINATION, *LPWFSCDMDENOMINATION;

typedef struct _wfs_cdm_present_status
{
    LPWFSCDMDENOMINATION lpDenomination;
    WORD                wPresentState;
    LPSTR              lpszExtra;
} WFSCDMPRESENTSTATUS, *LPWFSCDMPRESENTSTATUS;

typedef struct _wfs_cdm_signature
{
    ULONG              ulLength;
    LPVOID             lpData;
} WFSCDMSIGNATURE, *LPWFSCDMSIGNATURE;

```



```

typedef struct _wfs_cdm_get_item_info
{
    USHORT          usLevel;
    USHORT          usIndex;
    DWORD           dwItemInfoType;
} WFS_CDM_GET_ITEM_INFO, *LPWFS_CDM_GET_ITEM_INFO;

typedef struct _wfs_cdm_item_info
{
    CHAR            cCurrencyID[3];
    ULONG           ulValue;
    USHORT          usRelease;
    LPWSTR          lpszSerialNumber;
    LPWFSCDMSIGNATURE lpSignature;
    LPSTR           lpszImageFileName;
} WFS_CDM_ITEM_INFO, *LPWFS_CDM_ITEM_INFO;

typedef struct _wfs_cdm_get_all_items_info
{
    USHORT          usLevel;
} WFS_CDM_GET_ALL_ITEMS_INFO, *LPWFS_CDM_GET_ALL_ITEMS_INFO;

typedef struct _wfs_cdm_item_info_all
{
    USHORT          usLevel;
    CHAR            cCurrencyID[3];
    ULONG           ulValue;
    USHORT          usRelease;
    LPWSTR          lpszSerialNumber;
    LPSTR           lpszImageFileName;
    WORD            wOnBlacklist;
    WORD            wItemLocation;
    USHORT          usNumber;
} WFS_CDM_ITEM_INFO_ALL, *LPWFS_CDM_ITEM_INFO_ALL;

typedef struct _wfs_cdm_all_items_info
{
    USHORT          usCount;
    LPWFS_CDM_ITEM_INFO_ALL *lppItemsList;
} WFS_CDM_ALL_ITEMS_INFO, *LPWFS_CDM_ALL_ITEMS_INFO;

/*=====*/
/* CDM Execute Command Structures */
/*=====*/

typedef struct _wfs_cdm_denominate
{
    USHORT          usTellerID;
    USHORT          usMixNumber;
    LPWFSCDMDENOMINATION lpDenomination;
} WFS_CDM_DENOMINATE, *LPWFS_CDM_DENOMINATE;

typedef struct _wfs_cdm_dispense
{
    USHORT          usTellerID;
    USHORT          usMixNumber;
    WORD            fwPosition;
    BOOL            bPresent;
    LPWFSCDMDENOMINATION lpDenomination;
} WFS_CDM_DISPENSE, *LPWFS_CDM_DISPENSE;

typedef struct _wfs_cdm_physical_cu
{
    BOOL            bEmptyAll;
    WORD            fwPosition;
    LPSTR           lpPhysicalPositionName;
} WFS_CDM_PHYSICAL_CU, *LPWFS_CDM_PHYSICAL_CU;

```

```

typedef struct _wfs_cdm_counted_phys_cu
{
    LPSTR                lpPhysicalPositionName;
    CHAR                 cUnitId[5];
    ULONG                ulDispensed;
    ULONG                ulCounted;
    USHORT               usPStatus;
} WFSCDMCOUNTEDPHYSKU, *LPWFSCDMCOUNTEDPHYSKU;

typedef struct _wfs_cdm_count
{
    USHORT               usNumPhysicalCUs;
    LPWFSCDMCOUNTEDPHYSKU *lppCountedPhysCUs;
} WFSCDMCOUNT, *LPWFSCDMCOUNT;

typedef struct _wfs_cdm_retract
{
    WORD                 fwOutputPosition;
    USHORT               usRetractArea;
    USHORT               usIndex;
} WFSCDMRETRACT, *LPWFSCDMRETRACT;

typedef struct _wfs_cdm_item_number
{
    CHAR                 cCurrencyID[3];
    ULONG                ulValues;
    USHORT               usRelease;
    ULONG                ulCount;
    USHORT               usNumber;
} WFSCDMITEMNUMBER, *LPWFSCDMITEMNUMBER;

typedef struct _wfs_cdm_item_number_list
{
    USHORT               usNumOfItemNumbers;
    LPWFSCDMITEMNUMBER *lppItemNumber;
} WFSCDMITEMNUMBERLIST, *LPWFSCDMITEMNUMBERLIST;

typedef struct _wfs_cdm_teller_update
{
    USHORT               usAction;
    LPWFSCDMTELLERDETAILS lpTellerDetails;
} WFSCDMTELLERUPDATE, *LPWFSCDMTELLERUPDATE;

typedef struct _wfs_cdm_start_ex
{
    WORD                 fwExchangeType;
    USHORT               usTellerID;
    USHORT               usCount;
    LPUSHORT             lpusCUNumList;
} WFSCDMSTARTEX, *LPWFSCDMSTARTEX;

typedef struct _wfs_cdm_itemposition
{
    USHORT               usNumber;
    LPWFSCDMRETRACT      lpRetractArea;
    WORD                 fwOutputPosition;
} WFSCDMITEMPOSITION, *LPWFSCDMITEMPOSITION;

typedef struct _wfs_cdm_calibrate
{
    USHORT               usNumber;
    USHORT               usNumOfBills;
    LPWFSCDMITEMPOSITION *lpPosition;
} WFSCDMCALIBRATE, *LPWFSCDMCALIBRATE;

typedef struct _wfs_cdm_set_guidlight
{
    WORD                 wGuidLight;
    DWORD                dwCommand;
}

```

```

} WFS_CDMSETGUIDLIGHT, *LPWFS_CDMSETGUIDLIGHT;

typedef struct _wfs_cdm_power_save_control
{
    USHORT                usMaxPowerSaveRecoveryTime;
} WFS_CDMPOWERSAVECONTROL, *LPWFS_CDMPOWERSAVECONTROL;

typedef struct _wfs_cdm_prepare_dispende
{
    WORD                wAction;
} WFS_CDMPREPAREDISPENSE, *LPWFS_CDMPREPAREDISPENSE;

typedef struct wfs_cdm_blacklist_element
{
    LPWSTR                lpszSerialNumber;
    CHAR                cCurrencyID[3];
    ULONG                ulValue;
} WFS_CDMBLACKLISTELEMENT, *LPWFS_CDMBLACKLISTELEMENT;

typedef struct wfs_cdm_blacklist
{
    LPWSTR                lpszVersion;
    USHORT                usCount;
    LPWFS_CDMBLACKLISTELEMENT *lppBlacklistElements;
} WFS_CDMBLACKLIST, *LPWFS_CDMBLACKLIST;

typedef struct wfs_cdm_synchronize_command
{
    DWORD                dwCommand;
    LPVOID                lpCmdData;
} WFS_CDMSYNCHRONIZECOMMAND, *LPWFS_CDMSYNCHRONIZECOMMAND;

/*=====*/
/* CDM Message Structures */
/*=====*/

typedef struct _wfs_cdm_cu_error
{
    WORD                wFailure;
    LPWFS_CDMCASHUNIT    lpCashUnit;
} WFS_CDMCUERROR, *LPWFS_CDMCUERROR;

typedef struct _wfs_cdm_counts_changed
{
    USHORT                usCount;
    LPUSHORT                lpusCUNumList;
} WFS_CDMCOUNTSCHANGED, *LPWFS_CDMCOUNTSCHANGED;

typedef struct _wfs_cdm_device_position
{
    WORD                wPosition;
} WFS_CDMDEVICEPOSITION, *LPWFS_CDMDEVICEPOSITION;

typedef struct _wfs_cdm_power_save_change
{
    USHORT                usPowerSaveRecoveryTime;
} WFS_CDMPOWERSAVECHANGE, *LPWFS_CDMPOWERSAVECHANGE;

typedef struct wfs_cdm_item_info_summary
{
    USHORT                usLevel;
    USHORT                usNumOfItems;
} WFS_CDMITEMINFOSUMMARY, *LPWFS_CDMITEMINFOSUMMARY;

typedef struct wfs_cdm_incomplete_retract
{
    WFS_CDMITEMNUMBERLIST lpItemNumberList;
    USHORT                usReason;
} WFS_CDMINCOMPLETERETRACT, *LPWFS_CDMINCOMPLETERETRACT;

```

```
typedef struct wfs_cdm_shutter_status_changed  
{  
    WORD fwPosition;  
    WORD fwShutter;  
} WFS_CDM_SHUTTER_STATUS_CHANGED, *LPWFS_CDM_SHUTTER_STATUS_CHANGED;  
  
/* restore alignment */  
#pragma pack (pop)  
  
#ifdef __cplusplus  
} /*extern "C"*/  
#endif  
  
#endif /* __INC_XFSCDM__H */
```