

**CEN**

**CWA 16926-64**

**WORKSHOP**

February 2020

**AGREEMENT**

---

ICS 35.200; 35.240.15; 35.240.40

English version

**Extensions for Financial Services (XFS) interface  
specification - Release 3.40 - Part 64: Cash Dispenser  
(CDM) Device Class Interface - Migration from Version 3.30  
(CWA 16926) to Version 3.40 (this CWA) - Programmer's  
Reference**

This CEN Workshop Agreement has been drafted and approved by a Workshop of representatives of interested parties, the constitution of which is indicated in the foreword of this Workshop Agreement.

The formal process followed by the Workshop in the development of this Workshop Agreement has been endorsed by the National Members of CEN but neither the National Members of CEN nor the CEN-CENELEC Management Centre can be held accountable for the technical content of this CEN Workshop Agreement or possible conflicts with standards or legislation.

This CEN Workshop Agreement can in no way be held as being an official standard developed by CEN and its Members.

This CEN Workshop Agreement is publicly available as a reference document from the CEN Members National Standard Bodies.

CEN members are the national standards bodies of Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Republic of North Macedonia, Romania, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey and United Kingdom.



EUROPEAN COMMITTEE FOR STANDARDIZATION  
COMITÉ EUROPÉEN DE NORMALISATION  
EUROPÄISCHES KOMITEE FÜR NORMUNG

**CEN-CENELEC Management Centre: Rue de la Science 23, B-1040 Brussels**

---

## Table of Contents

---

European Foreword.....	4
<b>1. Migration Information.....</b>	<b>8</b>
<b>2. Cash Dispensers .....</b>	<b>9</b>
<b>3. References .....</b>	<b>10</b>
<b>4. Note Classification .....</b>	<b>11</b>
<b>5. Info Commands .....</b>	<b>12</b>
5.1 WFS_INF_CDM_STATUS.....	12
5.2 WFS_INF_CDM_CAPABILITIES .....	17
5.3 WFS_INF_CDM_CASH_UNIT_INFO.....	22
5.4 WFS_INF_CDM_TELLER_INFO .....	29
5.5 WFS_INF_CDM_CURRENCY_EXP .....	31
5.6 WFS_INF_CDM_MIX_TYPES.....	32
5.7 WFS_INF_CDM_MIX_TABLE.....	33
5.8 WFS_INF_CDM_PRESENT_STATUS.....	34
5.9 WFS_INF_CDM_GET_ITEM_INFO .....	36
5.10 WFS_INF_CDM_GET_BLACKLIST .....	38
5.11 WFS_INF_CDM_GET_ALL_ITEMS_INFO .....	39
5.12 WFS_INF_CDM_GET_CLASSIFICATION_LIST .....	42
<b>6. Execute Commands .....</b>	<b>44</b>
6.1 WFS_CMD_CDM_DENOMINATE .....	44
6.2 WFS_CMD_CDM_DISPENSE .....	47
6.3 WFS_CMD_CDM_COUNT .....	51
6.4 WFS_CMD_CDM_PRESENT.....	54
6.5 WFS_CMD_CDM_REJECT .....	56
6.6 WFS_CMD_CDM_RETRACT .....	57
6.7 WFS_CMD_CDM_OPEN_SHUTTER .....	60
6.8 WFS_CMD_CDM_CLOSE_SHUTTER .....	61
6.9 WFS_CMD_CDM_SET_TELLER_INFO.....	62
6.10 WFS_CMD_CDM_SET_CASH_UNIT_INFO .....	63
6.11 WFS_CMD_CDM_START_EXCHANGE.....	65
6.12 WFS_CMD_CDM_END_EXCHANGE.....	67
6.13 WFS_CMD_CDM_OPEN_SAFE_DOOR.....	69
6.14 WFS_CMD_CDM_CALIBRATE_CASH_UNIT .....	70
6.15 WFS_CMD_CDM_SET_MIX_TABLE .....	72
6.16 WFS_CMD_CDM_RESET.....	73
6.17 WFS_CMD_CDM_TEST_CASH_UNITS .....	76

6.18	WFS_CMD_CDM_SET_GUIDANCE_LIGHT .....	78
6.19	WFS_CMD_CDM_POWER_SAVE_CONTROL .....	80
6.20	WFS_CMD_CDM_PREPARE_DISPENSE .....	81
6.21	WFS_CMD_CDM_SET_BLACKLIST .....	82
6.22	WFS_CMD_CDM_SYNCHRONIZE_COMMAND .....	83
6.23	WFS_CMD_CDM_SET_CLASSIFICATION_LIST .....	84
<b>7.</b>	<b>Events .....</b>	<b>85</b>
7.1	WFS_SRVE_CDM_SAFEDOOROPEN .....	85
7.2	WFS_SRVE_CDM_SAFEDOORCLOSED.....	86
7.3	WFS_USRE_CDM_CASHUNITTHRESHOLD.....	87
7.4	WFS_SRVE_CDM_CASHUNITINFOCHANGED .....	88
7.5	WFS_SRVE_CDM_TELLERINFOCHANGED .....	89
7.6	WFS_EXEE_CDM_DELAYEDDISPENSE.....	90
7.7	WFS_EXEE_CDM_STARTDISPENSE .....	91
7.8	WFS_EXEE_CDM_CASHUNITERROR.....	92
7.9	WFS_SRVE_CDM_ITEMSTAKEN.....	93
7.10	WFS_SRVE_CDM_COUNTS_CHANGED.....	94
7.11	WFS_EXEE_CDM_PARTIALDISPENSE .....	95
7.12	WFS_EXEE_CDM_SUBDISPENSEOK.....	96
7.13	WFS_EXEE_CDM_INCOMPLETEDISPENSE .....	97
7.14	WFS_EXEE_CDM_NOTEERROR .....	98
7.15	WFS_SRVE_CDM_ITEMSPRESENTED.....	99
7.16	WFS_SRVE_CDM_MEDIADETECTED .....	100
7.17	WFS_EXEE_CDM_INPUT_P6.....	101
7.18	WFS_SRVE_CDM_DEVICEPOSITION .....	102
7.19	WFS_SRVE_CDM_POWER_SAVE_CHANGE.....	103
7.20	WFS_EXEE_CDM_INFO_AVAILABLE.....	104
7.21	WFS_EXEE_CDM_INCOMPLETERETRACT .....	105
7.22	WFS_SRVE_CDM_SHUTTERSTATUSCHANGED .....	106
<b>8.</b>	<b>Sub-Dispensing Command Flow.....</b>	<b>107</b>
<b>9.</b>	<b>Rules for Cash Unit Exchange .....</b>	<b>110</b>
<b>10.</b>	<b>Events Associated with Cash Unit Status Changes .....</b>	<b>111</b>
10.1	One Physical Cash Unit Goes LOW .....	111
10.2	Last Physical Cash Unit Goes LOW.....	112
10.3	One Physical Cash Unit Goes INOP.....	113
10.4	Last Physical Cash Unit Goes EMPTY.....	114
<b>11.</b>	<b>Multiple Dispense Command Flow.....</b>	<b>115</b>
<b>12.</b>	<b>C - Header file .....</b>	<b>117</b>

## **European Foreword**

---

This CEN Workshop Agreement has been developed in accordance with the CEN-CENELEC Guide 29 “CEN/CENELEC Workshop Agreements – The way to rapid consensus” and with the relevant provisions of CEN/CENELEC Internal Regulations – Part 2. It was approved by a Workshop of representatives of interested parties on 2019-10-08, the constitution of which was supported by CEN following several public calls for participation, the first of which was made on 1998-06-24. However, this CEN Workshop Agreement does not necessarily include all relevant stakeholders.

The final text of this CEN Workshop Agreement was provided to CEN for publication on 2019-12-12.

The following organizations and individuals developed and approved this CEN Workshop Agreement:

- ATM Japan LTD
- AURIGA SPA
- BANK OF AMERICA
- CASHWAY TECHNOLOGY
- CHINAL ELECTRONIC FINANCIAL EQUIPMENT SYSTEM CO.
- CIMA SPA
- CLEAR2PAY SCOTLAND LIMITED
- DIEBOLD NIXDORF
- EASTERN COMMUNICATIONS CO. LTD – EASTCOM
- FINANZ INFORMATIK
- FUJITSU FRONTTECH LIMITED
- FUJITSU TECHNOLOGY
- GLORY LTD
- GRG BANKING EQUIPMENT HK CO LTD
- HESS CASH SYSTEMS GMBH & CO. KG
- HITACHI OMRON TS CORP.
- HYOSUNG TNS INC
- JIANGSU GUOQUANG ELECTRONIC INFORMATION TECHNOLOGY
- KAL
- KEBA AG
- NCR FSG
- NEC CORPORATION
- OKI ELECTRIC INDUSTRY SHENZHEN

- OKI ELECTRONIC INDUSTRY CO
- PERTO S/A
- REINER GMBH & CO KG
- SALZBURGER BANKEN SOFTWARE
- SIGMA SPA
- TEB
- ZIJIN FULCRUM TECHNOLOGY CO

It is possible that some elements of this CEN/CWA may be subject to patent rights. The CEN-CENELEC policy on patent rights is set out in CEN-CENELEC Guide 8 “Guidelines for Implementation of the Common IPR Policy on Patents (and other statutory intellectual property rights based on inventions)”. CEN shall not be held responsible for identifying any or all such patent rights.

The Workshop participants have made every effort to ensure the reliability and accuracy of the technical and non-technical content of CWA 16926-64, but this does not guarantee, either explicitly or implicitly, its correctness. Users of CWA 16926-64 should be aware that neither the Workshop participants, nor CEN can be held liable for damages or losses of any kind whatsoever which may arise from its application. Users of CWA 16926-64 do so on their own responsibility and at their own risk.

The CWA is published as a multi-part document, consisting of:

Part 1: Application Programming Interface (API) - Service Provider Interface (SPI) - Programmer's Reference

Part 2: Service Classes Definition - Programmer's Reference

Part 3: Printer and Scanning Device Class Interface - Programmer's Reference

Part 4: Identification Card Device Class Interface - Programmer's Reference

Part 5: Cash Dispenser Device Class Interface - Programmer's Reference

Part 6: PIN Keypad Device Class Interface - Programmer's Reference

Part 7: Check Reader/Scanner Device Class Interface - Programmer's Reference

Part 8: Depository Device Class Interface - Programmer's Reference

Part 9: Text Terminal Unit Device Class Interface - Programmer's Reference

Part 10: Sensors and Indicators Unit Device Class Interface - Programmer's Reference

Part 11: Vendor Dependent Mode Device Class Interface - Programmer's Reference

Part 12: Camera Device Class Interface - Programmer's Reference

Part 13: Alarm Device Class Interface - Programmer's Reference

Part 14: Card Embossing Unit Device Class Interface - Programmer's Reference

Part 15: Cash-In Module Device Class Interface - Programmer's Reference

Part 16: Card Dispenser Device Class Interface - Programmer's Reference

Part 17: Barcode Reader Device Class Interface - Programmer's Reference

Part 18: Item Processing Module Device Class Interface - Programmer's Reference

Part 19: Biometrics Device Class Interface - Programmer's Reference

Parts 20 - 28: Reserved for future use.

Parts 29 through 47 constitute an optional addendum to this CWA. They define the integration between the SNMP standard and the set of status and statistical information exported by the Service Providers.

Part 29: XFS MIB Architecture and SNMP Extensions - Programmer's Reference

- Part 30: XFS MIB Device Specific Definitions - Printer Device Class
- Part 31: XFS MIB Device Specific Definitions - Identification Card Device Class
- Part 32: XFS MIB Device Specific Definitions - Cash Dispenser Device Class
- Part 33: XFS MIB Device Specific Definitions - PIN Keypad Device Class
- Part 34: XFS MIB Device Specific Definitions - Check Reader/Scanner Device Class
- Part 35: XFS MIB Device Specific Definitions - Depository Device Class
- Part 36: XFS MIB Device Specific Definitions - Text Terminal Unit Device Class
- Part 37: XFS MIB Device Specific Definitions - Sensors and Indicators Unit Device Class
- Part 38: XFS MIB Device Specific Definitions - Camera Device Class
- Part 39: XFS MIB Device Specific Definitions - Alarm Device Class
- Part 40: XFS MIB Device Specific Definitions - Card Embossing Unit Class
- Part 41: XFS MIB Device Specific Definitions - Cash-In Module Device Class
- Part 42: Reserved for future use.
- Part 43: XFS MIB Device Specific Definitions - Vendor Dependent Mode Device Class
- Part 44: XFS MIB Application Management
- Part 45: XFS MIB Device Specific Definitions - Card Dispenser Device Class
- Part 46: XFS MIB Device Specific Definitions - Barcode Reader Device Class
- Part 47: XFS MIB Device Specific Definitions - Item Processing Module Device Class
- Part 48: XFS MIB Device Specific Definitions - Biometrics Device Class
- Parts 49 - 60 are reserved for future use.
- Part 61: Application Programming Interface (API) - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Service Provider Interface (SPI) - Programmer's Reference
- Part 62: Printer and Scanning Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 63: Identification Card Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 64: Cash Dispenser Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 65: PIN Keypad Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 66: Check Reader/Scanner Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 67: Depository Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 68: Text Terminal Unit Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 69: Sensors and Indicators Unit Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 70: Vendor Dependent Mode Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 71: Camera Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 72: Alarm Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference
- Part 73: Card Embossing Unit Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40

(this CWA) - Programmer's Reference

Part 74: Cash-In Module Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference

Part 75: Card Dispenser Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference

Part 76: Barcode Reader Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference

Part 77: Item Processing Module Device Class Interface - Migration from Version 3.30 (CWA 16926) to Version 3.40 (this CWA) - Programmer's Reference

In addition to these Programmer's Reference specifications, the reader of this CWA is also referred to a complementary document, called Release Notes. The Release Notes contain clarifications and explanations on the CWA specifications, which are not requiring functional changes. The current version of the Release Notes is available online from: [https://www.cen.eu/work/Sectors/Digital\\_society/Pages/WSXFS.aspx](https://www.cen.eu/work/Sectors/Digital_society/Pages/WSXFS.aspx).

The information in this document represents the Workshop's current views on the issues discussed as of the date of publication. It is provided for informational purposes only and is subject to change without notice. CEN makes no warranty, express or implied, with respect to this document.

## 1. Migration Information

---

XFS 3.40 has been designed to minimize backwards compatibility issues. This document highlights the changes made to the CDM device class between version 3.30 and 3.40, by highlighting the additions and deletions to the text.

## 2. Cash Dispensers

---

This specification describes the functionality of an XFS compliant Cash Dispenser Module (CDM) Service Provider. It defines the service-specific commands that can be issued to the Service Provider using the **WFSGetInfo**, **WFSAsyncGetInfo**, **WFSExecute** and **WFSAsyncExecute** functions.

Persistent values are maintained through power failures, open sessions, close session and system resets.

This specification covers the dispensing of items. An “item” is defined as any media that can be dispensed and includes coupons, documents, bills and coins. However, if coins and bills are both to be dispensed separate Service Providers must be implemented for each.

All currency parameters in this specification are expressed as a quantity of minimum dispense units, as defined in the description of the **WFS\_INF\_CDM\_CURRENCY\_EXP** command.

There are two types of CDM: Self-Service CDM and Teller CDM. A Self-Service CDM operates in an automated environment, while a Teller CDM has an operator present. The functionality provided by the following commands is only applicable to a Teller CDM:

**WFS\_CMD\_CDM\_SET\_TELLER\_INFO**  
**WFS\_INF\_CDM\_TELLER\_INFO**

It is possible for the CDM to be part of a compound device with the Cash-In Module (CIM). This CIM\CDM combination is referred to throughout this specification as a “Cash Recycler”. For details of the CIM interface see [Ref. 3].

If the device is a Cash Recycler then, if cash unit exchanges are required on both interfaces, the exchanges cannot be performed concurrently. An exchange on one interface must be complete (the **WFS\_CMD\_CDM\_END\_EXCHANGE** must have completed) before an exchange can start on the other interface. The **WFS\_ERR\_CDM\_EXCHANGEACTIVE** error code will be returned if the correct sequence is not adhered to.

The CIM interface can be used for all exchange operations on recycle devices, and the CIM interface should be used if the device has recycle units of multiple currencies and/or denominations (including multiple note identifiers associated with the same denomination).

The event **WFS\_SRVE\_CDM\_COUNTS\_CHANGED** will be posted if an operation on the CIM interface affects the cash unit counts which are available through the CDM interface.

The following commands on the CIM interface may affect the CDM counts:

**WFS\_CMD\_CIM\_CASH\_IN**  
**WFS\_CMD\_CIM\_CASH\_IN\_END**  
**WFS\_CMD\_CIM\_CASH\_IN\_ROLLBACK**  
**WFS\_CMD\_CIM\_RETRACT**  
**WFS\_CMD\_CIM\_SET\_CASH\_IN\_UNIT\_INFO**  
**WFS\_CMD\_CIM\_END\_EXCHANGE**  
**WFS\_CMD\_CIM\_RESET**  
**WFS\_CMD\_CIM\_REPLENISH**  
**WFS\_CMD\_CIM\_CASH\_UNIT\_COUNT**

### 3. References

---

---

1. <a href="#">XFS Application Programming Interface (API)/Service Provider Interface (SPI), Programmer's Reference, Revision 3.40</a>
--

2. <a href="http://www.iso.org">ISO 4217 at http://www.iso.org</a>
--

3. <a href="#">XFS Cash-In Module Device Class Interface, Programmer's Reference, Revision 3.40</a>
---

## 4. Note Classification

Notes are classified by the XFS CDM specification according to the following ~~applies when a blacklist of items definitions:~~

1. ~~Level 1 – Note is supported via the WFS\_INF\_CDM\_GET\_BLACKLIST and WFS\_CMD\_CDM\_SET\_BLACKLIST command. If a blacklisted item not recognized.~~
2. ~~Level 2 – Recognized counterfeit note.~~
3. ~~Level 3 – Suspected counterfeit note.~~
4. ~~Level 4 – Recognized note that is detected the identified as genuine. This includes notes which are fit or unfit for recycling.~~

~~This definition allows support for legislative note handling standards that may exist in various countries and economic regions. Local requirements or device will classify the item as a capability may dictate that notes are not classified as level 2 banknote and will handle the item level 3 and therefore counterfeit or suspect notes would be classified as level 1; the P6 string reported by WFS\_INF\_CIM\_CAPABILITIES *lpszExtra* reports whether notes are classified into all 4 levels.~~

~~The above classification levels can be used to support note handling functionality which includes:~~

1. ~~The ability to remove counterfeit notes from circulation.~~
2. ~~Reporting of unrecognized, recognized counterfeit and suspected counterfeit notes.~~
3. ~~Creating and reporting of note signatures in order to allow back-tracing of notes.~~

~~A note's classification can be changed based on the note's serial number, currency and value by specifying a blacklist or classification list. A blacklist reclassifies a matching note as level 2, whereas a classification list can be used to re-classify a matching note to a lower level, including classifying a genuine note as unfit for dispensing. Once reclassified, the note will be automatically handled according to the local country specific note handling standard or legislation. A Any reclassification will result in the normal events and behavior, for example a WFS\_EXEE\_CDM\_INPUT\_P6\_INFO\_AVAILABLE event will be sent if a blacklisted banknote reflect the note's reclassification. Reclassification can be used to make dynamic changes to note handling procedures without a software upgrade, enabling functionality such as taking older notes out of circulation or handling of counterfeit notes on a local basis.~~

~~Reclassification cannot be used to change a note's classification to a higher level, for example, a note recognized as counterfeit by the device cannot be reclassified as genuine. In addition, it is detected not possible to re-classify a level 2 note as level 1. No particular use case has been identified for reclassifying Level 3 and 4 notes as level 1, but there is no reason to restrict this reclassification.~~

~~The Blacklist~~ Blacklists can be specified using `WFS_CMD_CDM_SET_BLACKLIST` and retrieved using `WFS_INF_CDM_GET_BLACKLIST`. Classification lists can be specified using `WFS_CMD_CDM_SET_CLASSIFICATION_LIST` and retrieved using `WFS_INF_CDM_GET_CLASSIFICATION_LIST`. A classification list is a superset of the blacklist; any items specified as level 2 in the classification list are considered part of the blacklist. However, it is not recommended that both sets of commands are used by a single application, as it may lead to overlap and confusion.

The blacklist or classification list functionality can use a mask to specify serial numbers. The mask is defined as follows: A '?' character (0x003F) is ~~used to represent a~~ wildcard ~~for~~ used to match a single Unicode character, and a '\*' character (0x002A) is ~~used to represent a~~ wildcard ~~for a single~~ used to match one or ~~multiple~~ more Unicode ~~character~~ characters.

For example, "S8H9??16?4" would represent a match for the serial numbers "S8H9231654" and "S8H9761684". A mask of "HD90\*2" would be used in order to match serial numbers that begin with "HD90" and end with "2", for example "HD9028882", "HD9083276112". Note that the ~~blacklist~~ mask can only use one asterisk, and if a real character is required then it must be preceded by a backslash, for example: '\\ for a backslash, '\\\*' for an asterisk or '\\?' for a question mark.

Note that this flexibility means that it is possible to overlap definitions, for example "HD90\*" and "HD902\*" would both match on the serial number HD9028882."

## 3.5. Info Commands

### 3.15.1 WFS\_INF\_CDM\_STATUS

**Description** This command is used to obtain the status of the CDM. It may also return vendor-specific status information.

**Input Param** None.

**Output Param** LPWFSCDMSTATUS lpStatus;

```
typedef struct _wfs_cdm_status
{
    WORD                fwDevice;
    WORD                fwSafeDoor;
    WORD                fwDispenser;
    WORD                fwIntermediateStacker;
    LPWFSCDMOUTPOS     *lppPositions;
    LPSTR               lpszExtra;
    DWORD              dwGuidLights[WFS_CDM_GUIDLIGHTS_SIZE];
    WORD                wDevicePosition;
    USHORT             usPowerSaveRecoveryTime;
    WORD                wAntiFraudModule;
} WFS_CDM_STATUS, *LPWFSCDMSTATUS;
```

#### *fwDevice*

Supplies the state of the CDM. However, an *fwDevice* status of WFS\_CDM\_DEVONLINE does not necessarily imply that dispensing can take place: the value of the *fwDispenser* field must be taken into account and - for some vendors - the state of the safe door (*fwSafeDoor*) may also be relevant. The state of the CDM will have one of the following values:

Value	Meaning
WFS_CDM_DEVONLINE	The device is online. This is returned when the dispenser is present and operational.
WFS_CDM_DEVOFFLINE	The device is offline (e.g. the operator has taken the device offline by turning a switch).
WFS_CDM_DEVPOWEROFF	The device is powered off or physically not connected.
WFS_CDM_DEVNODEVICE	The device is not intended to be there, e.g. this type of self service machine does not contain such a device or it is internally not configured.
WFS_CDM_DEVHWERROR	The device is inoperable due to a hardware error.
WFS_CDM_DEVUSERERROR	The device is present but a person is preventing proper device operation.
WFS_CDM_DEVBUSY	The device is busy and unable to process an execute command at this time.
WFS_CDM_DEVFRAUDATTEMPT	The device is present but is inoperable because it has detected a fraud attempt.
WFS_CDM_DEVPOTENTIALFRAUD	The device has detected a potential fraud attempt and is capable of remaining in service. In this case the application should make the decision as to whether to take the device offline.

#### *fwSafeDoor*

Supplies the state of the safe door as one of the following values:

Value	Meaning
WFS_CDM_DOORNOTSUPPORTED	Physical device has no safe door or safe door state reporting is not supported.
WFS_CDM_DOOROPEN	Safe door is open.
WFS_CDM_DOORCLOSED	Safe door is closed.

WFS\_CDM\_DOORUNKNOWN Due to a hardware error or other condition, the state of the safe door cannot be determined.

*fwDispenser*

Supplies the state of the dispenser's logical cash units as one of the following values:

Value	Meaning
WFS_CDM_DISPOK	All cash units present are in a good state.
WFS_CDM_DISPCUSTATE	One or more of the cash units is in a low, empty, inoperative or manipulated condition. Items can still be dispensed from at least one of the cash units.
WFS_CDM_DISPCUSTOP	Due to a cash unit failure dispensing is impossible. No items can be dispensed because all of the cash units are in an empty, inoperative or manipulated condition. This state may also occur when a reject/retract cash unit is full or no reject/retract cash unit is present, or when an application lock is set on every cash unit <a href="#">which can be locked</a> .
WFS_CDM_DISPCUUNKNOWN	Due to a hardware error or other condition, the state of the cash units cannot be determined.

*fwIntermediateStacker*

Supplies the state of the intermediate stacker. These bills are typically present on the intermediate stacker as a result of a retract operation or because a dispense has been performed without a subsequent present. Possible values for this field are:

Value	Meaning
WFS_CDM_ISEMPY	The intermediate stacker is empty.
WFS_CDM_ISNOTEMPTY	The intermediate stacker is not empty. The items have not been in customer access.
WFS_CDM_ISNOTEMPTYCUST	The intermediate stacker is not empty. The items have been in customer access. If the device is a recycler then the items on the intermediate stacker may be there as a result of a previous cash-in operation.
WFS_CDM_ISNOTEMPTYUNK	The intermediate stacker is not empty. It is not known if the items have been in customer access.
WFS_CDM_ISUNKNOWN	Due to a hardware error or other condition, the state of the intermediate stacker cannot be determined.
WFS_CDM_ISNOTSUPPORTED	The physical device has no intermediate stacker.

*lppPositions*

Pointer to a NULL-terminated array of pointers to WFSCDMOUTPOS structures. There is one structure for each position to which items can be dispensed or presented:

```
typedef struct _wfs_cdm_position
{
    WORD fwPosition;
    WORD fwShutter;
    WORD fwPositionStatus;
    WORD fwTransport;
    WORD fwTransportStatus;
    WORD fwJammedShutterPosition;
} WFSCDMOUTPOS, *LPWFSCDMOUTPOS;
```

*fwPosition*

Supplies the output position as one of the following values:

Value	Meaning
WFS_CDM_POSLEFT	Left output position.

WFS_CDM_POSRIGHT	Right output position.
WFS_CDM_POSCENTER	Center output position.
WFS_CDM_POSTOP	Top output position.
WFS_CDM_POSBOTTOM	Bottom output position.
WFS_CDM_POSFRONT	Front output position.
WFS_CDM_POSREAR	Rear output position.

*fwShutter*

Supplies the state of the shutter as one of the following values:

Value	Meaning
WFS_CDM_SHTCLOSED	The shutter is operational and is closed.
WFS_CDM_SHTOPEN	The shutter is operational and is open.
WFS_CDM_SHTJAMMED	The shutter is jammed and is not operational. The field <i>fwJammedShutterPosition</i> provides the positional state of the shutter.
WFS_CDM_SHTUNKNOWN	Due to a hardware error or other condition, the state of the shutter cannot be determined.
WFS_CDM_SHTNOTSUPPORTED	The physical device has no shutter or shutter state reporting is not supported.

*fwPositionStatus*

Returns information regarding items which may be at the output position. If the device is a recycler it is possible that the output position will not be empty due to a previous cash-in operation. The possible values of this field are:

Value	Meaning
WFS_CDM_PSEMPY	The output position is empty.
WFS_CDM_PSNOTEMPTY	The output position is not empty.
WFS_CDM_PSUNKNOWN	Due to a hardware error or other condition, the state of the output position cannot be determined.
WFS_CDM_PSNOTSUPPORTED	The device is not capable of reporting whether or not items are at the output position.

*fwTransport*

Supplies the state of the transport mechanism as one of the following values. [The transport is defined as any area leading to or from the position:](#)

Value	Meaning
WFS_CDM_TPOK	The transport is in a good state.
WFS_CDM_TPINOP	The transport is inoperative due to a hardware failure or media jam.
WFS_CDM_TPUNKNOWN	Due to a hardware error or other condition the state of the transport cannot be determined.
WFS_CDM_TPNOTSUPPORTED	The physical device has no transport or transport state reporting is not supported.

*fwTransportStatus*

Returns information regarding items which may be on the transport. If the device is a recycler device it is possible that the transport will not be empty due to a previous cash-in operation. The possible values of this field are:

Value	Meaning
WFS_CDM_TPSTATEMPTY	The transport is empty.
WFS_CDM_TPSTATNOTEMPTY	The transport is not empty.
WFS_CDM_TPSTATNOTEMPTYCUST	Items which a customer has had access to are on the transport.
WFS_CDM_TPSTATNOTEMPTY_UNK	Due to a hardware error or other condition it is not known whether there are items on the transport.

WFS\_CDM\_TPSTATNOTSUPPORTED The device is not capable of reporting whether items are on the transport.

*fwJammedShutterPosition*

Returns information regarding the position of the jammed shutter. The possible values of this field are:

Value	Meaning
WFS_CDM_SHUTTERPOS_NOTSUPPORTED	The physical device has no shutter or the reporting of the position of a jammed shutter is not supported.
WFS_CDM_SHUTTERPOS_NOTJAMMED	The shutter is not jammed.
WFS_CDM_SHUTTERPOS_OPEN	The shutter is jammed, but fully open.
WFS_CDM_SHUTTERPOS_PARTIALLY_OPEN	The shutter is jammed, but partially open.
WFS_CDM_SHUTTERPOS_CLOSED	The shutter is jammed, but fully closed.
WFS_CDM_SHUTTERPOS_UNKNOWN	The position of the shutter is unknown.

*lpszExtra*

Pointer to a list of vendor-specific, or any other extended, information. The information is returned as a series of “key=value” strings so that it is easily extensible by Service Providers. Each string is null-terminated, with the final string terminating with two null characters. An empty list may be indicated by either a NULL pointer or a pointer to two consecutive null characters.

*dwGuidLights [...]*

Specifies the state of the guidance light indicators. The elements of this array can be accessed by using the predefined index values specified for the *dwGuidLights [ ]* field in the capabilities. Vendor specific guidance lights are defined starting from the end of the array. The maximum guidance light index is WFS\_CDM\_GUIDLIGHTS\_MAX.

Specifies the state of the guidance light indicator as WFS\_CDM\_GUIDANCE\_NOT\_AVAILABLE, WFS\_CDM\_GUIDANCE\_OFF or a combination of the following flags consisting of one type B, optionally one type C and optionally [one](#) type D.

Value	Meaning	Type
WFS_CDM_GUIDANCE_NOT_AVAILABLE	The status is not available.	A
WFS_CDM_GUIDANCE_OFF	The light is turned off.	A
WFS_CDM_GUIDANCE_SLOW_FLASH	The light is blinking slowly.	B
WFS_CDM_GUIDANCE_MEDIUM_FLASH	The light is blinking medium frequency.	B
WFS_CDM_GUIDANCE_QUICK_FLASH	The light is blinking quickly.	B
WFS_CDM_GUIDANCE_CONTINUOUS	The light is turned on continuous (steady).	B
WFS_CDM_GUIDANCE_RED	The light is red.	C
WFS_CDM_GUIDANCE_GREEN	The light is green.	C
WFS_CDM_GUIDANCE_YELLOW	The light is yellow.	C
WFS_CDM_GUIDANCE_BLUE	The light is blue.	C
WFS_CDM_GUIDANCE_CYAN	The light is cyan.	C
WFS_CDM_GUIDANCE_MAGENTA	The light is magenta.	C
WFS_CDM_GUIDANCE_WHITE	The light is white.	C
<a href="#">WFS_CDM_GUIDANCE_ENTRY</a>	<a href="#">The light is in the entry state.</a>	<a href="#">D</a>
WFS_CDM_GUIDANCE_EXIT	The light is in the exit state.	D

*wDevicePosition*

Specifies the device position. The device position value is independent of the *fwDevice* value, e.g. when the device position is reported as WFS\_CDM\_DEVICENOTINPOSITION, *fwDevice* can have any of the values defined above (including WFS\_CDM\_DEVONLINE or WFS\_CDM\_DEVOFFLINE). If the device is not in its normal operating position (i.e. WFS\_CDM\_DEVICEINPOSITION) then media may not be presented through the normal customer interface. This value is one of the following values:

Value	Meaning
WFS_CDM_DEVICEINPOSITION	The device is in its normal operating position, or is fixed in place and cannot be moved.
WFS_CDM_DEVICENOTINPOSITION	The device has been removed from its normal operating position.
WFS_CDM_DEVICEPOSUNKNOWN	Due to a hardware error or other condition, the position of the device cannot be determined.
WFS_CDM_DEVICEPOSNOTSUPP	The physical device does not have the capability of detecting the position.

*usPowerSaveRecoveryTime*

Specifies the actual number of seconds required by the device to resume its normal operational state from the current power saving mode. This value is zero if either the power saving mode has not been activated or no power save control is supported.

*wAntiFraudModule*

Specifies the state of the anti-fraud module as one of the following values:

Value	Meaning
WFS_CDM_AFMNOTSUPP	No anti-fraud module is available.
WFS_CDM_AFMOK	Anti-fraud module is in a good state and no foreign device is detected.
WFS_CDM_AFMINOP	Anti-fraud module is inoperable.
WFS_CDM_AFMDEVICEDETECTED	Anti-fraud module detected the presence of a foreign device.
WFS_CDM_AFMUNKNOWN	The state of the anti-fraud module cannot be determined.

**Error Codes** Only the generic error codes defined in [Ref. 1] can be generated by this command.

**Comments** Applications which rely on the *lpszExtra* field may not be device or vendor-independent.

In the case where communication with the device has been lost, the *fwDevice* field will report WFS\_CDM\_DEVPOWEROFF when the device has been removed or WFS\_CDM\_DEVHWERROR if the communications are unexpectedly lost. All other fields should contain a value based on the following rules and priority:

1. Report the value as unknown.
2. Report the value as a general h/w error.
3. Report the value as the last known value.

### 3.25.2 WFS\_INF\_CDM\_CAPABILITIES

**Description** This command retrieves the capabilities of the CDM. It may also return vendor specific capability information. The intermediate stacker and the transport are treated as separate areas. Some devices may have the capability to move items from the cash units to the intermediate stacker while there are items on the transport. Similarly some devices may be able to retract items to the transport or the cash units while there are items on the intermediate stacker.

**Input Param** None.

**Output Param** LPWFSCDMCAPS lpCaps;

```
typedef struct _wfs_cdm_caps
{
    WORD                wClass;
    WORD                fwType;
    WORD                wMaxDispenseItems;
    BOOL                bCompound;
    BOOL                bShutter;
    BOOL                bShutterControl;
    WORD                fwRetractAreas;
    WORD                fwRetractTransportActions;
    WORD                fwRetractStackerActions;
    BOOL                bSafeDoor;
    BOOL                bCashBox;
    BOOL                bIntermediateStacker;
    BOOL                bItemsTakenSensor;
    WORD                fwPositions;
    WORD                fwMoveItems;
    WORD                fwExchangeType;
    LPSTR               lpszExtra;
    DWORD               dwGuidLights[WFS_CDM_GUIDLIGHTS_SIZE];
    BOOL                bPowerSaveControl;
    BOOL                bPrepareDispense;
    BOOL                bAntiFraudModule;
    DWORD               dwItemInfoTypes;
    BOOL                bBlacklist;
    LPDWORD             lpdwSynchronizableCommands;
    BOOL                bClassificationList;
} WFS_CDMCAPS, *LPWFSCDMCAPS;
```

*wClass*  
Specifies the logical service class as WFS\_SERVICE\_CLASS\_CDM.

*fwType*  
Supplies the type of CDM as one of the following values:

Value	Meaning
WFS_CDM_TELLERBILL	The CDM is a Teller Bill Dispenser.
WFS_CDM_SELFSEVICEBILL	The CDM is a Self-Service Bill Dispenser.
WFS_CDM_TELLERCOIN	The CDM is a Teller Coin Dispenser.
WFS_CDM_SELFSEVICECOIN	The CDM is a Self-Service Coin Dispenser.

*wMaxDispenseItems*  
Supplies the maximum number of items that can be dispensed in a single dispense operation. If no limit applies this value will be zero - in this case, if an attempt is made to dispense more items than the hardware limitations will allow, the Service Provider will implement the dispense as a series of sub-dispense operations (see section Sub-Dispensing Command Flow).

*bCompound*  
Specifies whether the CDM is part of a compound device. If the CDM is part of a compound device with a CIM then this combination can be referred to as a recycler. In this case, no information on cash-in cash units will be supplied via the CDM interface. The CDM interface will however supply information on shared retract or reject cash units and recycle cash units.

*bShutter*  
Specifies whether or not the commands WFS\_CMD\_CDM\_OPEN\_SHUTTER and WFS\_CMD\_CDM\_CLOSE\_SHUTTER are supported.

*bShutterControl*

If set to TRUE the shutter is controlled implicitly by the Service Provider. If set to FALSE the shutter must be controlled explicitly by the application using the WFS\_CMD\_CDM\_OPEN\_SHUTTER and the WFS\_CMD\_CDM\_CLOSE\_SHUTTER commands. This field is always set to TRUE if the device has no shutter. This field applies to all shutters and all output positions.

*fwRetractAreas*

Specifies the area to which items may be retracted. If the device does not have a retract capability this field will be WFS\_CDM\_RA\_NOTSUPP. Otherwise this field will be set to a combination of the following flags:

Value	Meaning
WFS_CDM_RA_RETRACT	The items may be retracted to a retract cash unit.
WFS_CDM_RA_TRANSPORT	The items may be retracted to the transport.
WFS_CDM_RA_STACKER	The items may be retracted to the intermediate stacker.
WFS_CDM_RA_REJECT	The items may be retracted to a reject cash unit.
WFS_CDM_RA_ITEMCASSETTE	The items may be retracted to the item cassettes, i.e. cassettes that can be dispensed from.

*fwRetractTransportActions*

Specifies the actions which may be performed on items which have been retracted to the transport. If the device does not have the capability to retract items to ~~or~~[the transport or move items](#) from the transport this value will be WFS\_CDM\_NOTSUPP. This field will be a combination of the following flags:

Value	Meaning
WFS_CDM_PRESENT	The items may be presented.
WFS_CDM_RETRACT	The items may be <del>retracted</del> <a href="#">moved</a> to a retract cash unit.
WFS_CDM_REJECT	The items may be <del>retracted</del> <a href="#">moved</a> to a reject bin.
WFS_CDM_ITEMCASSETTE	The items may be <del>retracted</del> <a href="#">moved</a> to the item cassettes, i.e. cassettes that can be dispensed from.

*fwRetractStackerActions*

Specifies the actions which may be performed on items which have been retracted to the stacker. If the device does not have the capability to retract items to ~~or~~[the stacker or move items](#) from the stacker this value will be WFS\_CDM\_NOTSUPP. Otherwise it will be a combination of the following flags:

Value	Meaning
WFS_CDM_PRESENT	The items may be presented.
WFS_CDM_RETRACT	The items may be <del>retracted</del> <a href="#">moved</a> to a retract cash unit.
WFS_CDM_REJECT	The items may be <del>retracted</del> <a href="#">moved</a> to a reject bin.
WFS_CDM_ITEMCASSETTE	The items may be <del>retracted</del> <a href="#">moved</a> to the item cassettes, i.e. cassettes that can be dispensed from.

*bSafeDoor*

Specifies whether or not the WFS\_CMD\_CDM\_OPEN\_SAFE\_DOOR command is supported.

*bCashBox*

This field is only applicable to CDM types WFS\_CDM\_TELLERBILL and WFS\_CDM\_TELLERCOIN. It specifies whether or not tellers have been assigned a cash box.

*bIntermediateStacker*

Specifies whether or not the CDM supports stacking items to an intermediate position before the items are moved to the exit position. If this value is TRUE, the field *bPresent* of the WFS\_CMD\_CDM\_DISPENSE command can be set to FALSE.

*bItemsTakenSensor*

Specifies whether the CDM can detect when items at the exit position are taken by the user. If set to TRUE the Service Provider generates an accompanying WFS\_SRVE\_CDM\_ITEMSTAKEN event. If set to FALSE this event is not generated. This field applies to all output positions.

*fwPositions*

Specifies the CDM output positions which are available as a combination of the following flags:

Value	Meaning
WFS_CDM_POSLEFT	The CDM has a left output position.
WFS_CDM_POSRIGHT	The CDM has a right output position.
WFS_CDM_POSCENTER	The CDM has a center output position.
WFS_CDM_POSTOP	The CDM has a top output position.
WFS_CDM_POSBOTTOM	The CDM has a bottom output position.
WFS_CDM_POSFRONT	The CDM has a front output position.
WFS_CDM_POSREAR	The CDM has a rear output position.

*fwMoveItems*

Specifies the CDM move item options which are available as a combination of the following flags:

Value	Meaning
WFS_CDM_FROMCU	The CDM can dispense items from the cash units to the intermediate stacker while there are items on the transport.
WFS_CDM_TOCU	The CDM can retract items to the cash units while there are items on the intermediate stacker.
WFS_CDM_TOTRANSPORT	The CDM can retract items to the transport while there are items on the intermediate stacker.
WFS_CDM_TOSTACKER	The CDM can dispense items from the cash units to the intermediate stacker while there are already items on the intermediate stacker that have not been in customer access. Items remaining on the stacker from a previous dispense may first need to be rejected explicitly by the application if they are not to be presented.

*fwExchangeType*

Specifies the type of cash unit exchange operations supported by the CDM as a combination of the following flags:

Value	Meaning
WFS_CDM_EXBYHAND	The CDM supports manual replenishment either by filling the cash unit by hand or by replacing the cash unit.
WFS_CDM_EXTOCASSETTES	The CDM supports moving items from the replenishment cash unit to another cash unit.

*lpszExtra*

Pointer to a list of vendor-specific, or any other extended, information. The information is returned as a series of “*key=value*” strings so that it is easily extensible by Service Providers. Each string is null-terminated, with the final string terminating with two null characters. An empty list may be indicated by either a NULL pointer or a pointer to two consecutive null characters.

*dwGuidLights [...]*

Specifies which guidance lights are available. A number of guidance light positions are defined below. Vendor specific guidance lights are defined starting from the end of the array. The maximum guidance light index is WFS\_CDM\_GUIDLIGHTS\_MAX.

In addition to supporting specific flash rates and colors, some guidance lights also have the capability to show directional movement representing “~~exit~~”-entry” and “exit”. The “entry” state gives the impression of leading a user to place media into the device. The “exit” state gives the impression of ejection from a device to a user and would be used for retrieving media from the device.

The elements of this array are specified as a combination of the following flags and indicate all of the possible flash rates (type B) colors (type C) and directions (type D) that the guidance light indicator is capable of handling. If the guidance light indicator only supports one color then no value of type C is returned. If the guidance light indicator does not support direction then no value of type D is returned. A value of WFS\_CDM\_GUIDANCE\_NOT\_AVAILABLE indicates that the device has no guidance light indicator or the device controls the light directly with no application control possible.

Value	Meaning	Type
WFS_CDM_GUIDANCE_NOT_AVAILABLE	There is no guidance light control available at this position.	A
WFS_CDM_GUIDANCE_OFF	The light can be off.	B
WFS_CDM_GUIDANCE_SLOW_FLASH	The light can blink slowly.	B
WFS_CDM_GUIDANCE_MEDIUM_FLASH	The light can blink medium frequency.	B
WFS_CDM_GUIDANCE_QUICK_FLASH	The light can blink quickly.	B
WFS_CDM_GUIDANCE_CONTINUOUS	The light can be continuous (steady).	B
WFS_CDM_GUIDANCE_RED	The light can be red.	C
WFS_CDM_GUIDANCE_GREEN	The light can be green.	C
WFS_CDM_GUIDANCE_YELLOW	The light can be yellow.	C
WFS_CDM_GUIDANCE_BLUE	The light can be blue.	C
WFS_CDM_GUIDANCE_CYAN	The light can be cyan.	C
WFS_CDM_GUIDANCE_MAGENTA	The light can be magenta.	C
WFS_CDM_GUIDANCE_WHITE	The light can be white.	C
<a href="#">WFS_CDM_GUIDANCE_ENTRY</a>	<a href="#">The light is in the entry state.</a>	D
WFS_CDM_GUIDANCE_EXIT	The light can be in the exit state.	D

Each array index represents an output position in the CDM. The elements are accessed using the following definitions for the index value:

Value	Meaning
WFS_CDM_GUIDANCE_POSOUTNULL	The default output position.
WFS_CDM_GUIDANCE_POSOUTLEFT	Left output position.
WFS_CDM_GUIDANCE_POSOUTRIGHT	Right output position.
WFS_CDM_GUIDANCE_POSOUTCENTER	Center output position.
WFS_CDM_GUIDANCE_POSOUTTOP	Top output position.
WFS_CDM_GUIDANCE_POSOUTBOTTOM	Bottom output position.
WFS_CDM_GUIDANCE_POSOUTFRONT	Front output position.
WFS_CDM_GUIDANCE_POSOUTREAR	Rear output position.

*bPowerSaveControl*

Specifies whether power saving control is available. This can either be TRUE if available or FALSE if not available.

*bPrepareDispense*

On some hardware it can take a significant amount of time for the dispenser to get ready to dispense media. On this type of hardware the WFS\_CMD\_CDM\_PREPARE\_DISPENSE command can be used to improve transaction performance. This flag indicates if the hardware requires the application to use the WFS\_CMD\_CDM\_PREPARE\_DISPENSE command to maximize transaction performance. If this flag is TRUE then the WFS\_CMD\_CDM\_PREPARE\_DISPENSE command is supported and can be used to improve transaction performance. If this flag is FALSE then the WFS\_CMD\_CDM\_PREPARE\_DISPENSE command is not supported.

*bAntiFraudModule*

Specifies whether the anti-fraud module is available. This can either be TRUE if available or FALSE if not available.

*dwItemInfoTypes*

Specifies the types of information that can be retrieved through the WFS\_INF\_CDM\_GET\_ITEM\_INFO command as a combination of the following flags:

Value	Meaning
WFS_CDM_ITEM_SERIALNUMBER	Serial Number of the item.
WFS_CDM_ITEM_SIGNATURE	Signature of the item.
WFS_CDM_ITEM_IMAGEFILE	Image file of the item.

*bBlacklist*

Specifies whether the device has the capability to maintain a blacklist of serial numbers as well as supporting the associated operations. This can either be TRUE if the device has the capability or FALSE if it does not.

*lpdwSynchronizableCommands*

Pointer to a zero-terminated list of DWORDs which contains the execute command IDs that can be synchronized. If no execute command can be synchronized then this parameter will be NULL.

[\*bClassificationList\*](#)

[Specifies whether the device has the capability to maintain a classification list of serial numbers as well as supporting the associated operations. This can either be TRUE if the device has the capability or FALSE if it does not.](#)

**Error Codes** Only the generic error codes defined in [Ref. 1] can be generated by this command.

**Comments** Applications which rely on the *lpzExtra* field may not be device or vendor-independent.

### 3-35.3 WFS\_INF\_CDM\_CASH\_UNIT\_INFO

---

**Description** This command is used to obtain information regarding the status and contents of the cash units in the CDM.

Where a logical cash unit is configured but there is no corresponding physical cash unit currently present in the device, information about the missing cash unit will still be returned in the *lpplList* field of the output parameter. The status of the cash unit will be reported as WFS\_CDM\_STATCUMISSING.

It is possible that one logical cash unit may be associated with more than one physical cash unit. In this case, the number of cash unit structures returned in *lpCashUnitInfo* will reflect the number of logical cash units in the CDM. That is, if a system contains four physical cash units but two of these are treated as one logical cash unit, *lpCashUnitInfo* will contain information about the three logical cash units and a *usCount* of 3. Information about the physical cash unit(s) associated with a logical cash unit is contained in the WFS\_CDM\_CASHUNIT structure representing the logical cash unit.

It is also possible that multiple logical cash units may be associated with one physical cash unit. This should only occur if the physical cash unit is capable of handling this situation, i.e. if it can store multiple denominations and report meaningful count and replenishment information for each denomination or if it can store retracted and rejected items as separate logical units and report meaningful count and replenishment information for each of them. In this case the information returned in *lpCashUnitInfo* will again reflect the number of logical cash units in the CDM.

#### Logical Types

A cash unit may have a logical type. A logical type is based on the value of the following fields of the WFS\_CDM\_CASHUNIT structure:

*lpCashUnitName*

*usType*

*cCurrencyID*

*ulValues*

A logical type of cash unit may be associated with more than one physical cash unit. The logical type is distinct from the logical number (*usNumber*), i.e. *usNumber* does not refer to the logical cassette type.

#### Counts

Item counts are typically based on software counts and therefore may not represent the actual number of items in the cash unit. Persistent values are maintained through power failures, open sessions, close session and system resets. If a cash unit is shared between the CDM and CIM device class, then CDM operations will result in count changes in the CIM cash unit structure and vice versa. All counts are reported consistently on both interfaces at all times.

On cash units that dispense items, if *ulCount* (on logical and physical cash units) reaches zero it will not decrement further but will remain at zero. When *ulCount* reaches zero no further dispense or denominate operations will be possible using that cash unit, unless the Service Provider provides a configuration option to continue using cash units when *ulCount* reaches zero. The default setting for any such configuration parameter must be to stop using the cash unit when this value reaches zero. If the Service Provider is configured such that the cash unit can still be used when *ulCount* reaches zero then WFS\_CDM\_STATCUEMPTY should not be generated when *ulCount* reaches zero, rather it should be generated when all physical cash units associated with the logical cash unit are physically empty. On recyclers, the Service Provider should not be configured to keep using the cash unit when *ulCount* is zero if the value in *ulCount* is used by any part of the application, as it may not be accurate. However, if the Service Provider is configured to keep using the cash unit when *ulCount* reaches zero, then the number of notes in the cash unit can be determined relative to *ulInitialCount* using *ulDispensedCount*, *ulRetractedCount* and the CIM *ulCashInCount*, e.g. Number of Notes =  $ulInitialCount - ulDispensedCount + ulRetractedCount + CIM::ulCashInCount$ .

On cash units that dispense items, *ulCount* on logical cash units is decremented when items are in customer access or successfully rejected. Therefore, items which are dispensed from the cash unit then removed from the device for other reasons (such as manual jam clearance) may mean that

[ulCount on logical cash units no longer reflects the number of items in the cash unit. The count of items in the cash unit should therefore be determined from other counts, e.g., ulCount on physical cash units or Number of Notes = ulInitialCount – ulDispensedCount + ulRetractedCount + CIM::ulCashInCount \(if applicable\).](#)

### Exchanges

If a physical cash unit is inserted (including removal followed by a reinsertion) when the device is not in the exchange state the *usStatus* of the physical cash unit will be set to `WFS_CDM_STATCUMANIP` and the values of the physical cash unit prior to its' removal will be returned in any subsequent `WFS_INF_CDM_CASH_UNIT_INFO` command. The physical cash unit will not be used in any operation. The application must perform an exchange operation specifying the new values for the physical cash unit in order to recover the situation.

On recycling and retract units the counts and status are consistently reported on both the CDM and CIM interfaces. When a value is changed through an exchange on one interface it is also changed on the other.

### Recyclers

The CDM interface does not report cash-in only cash units but does report cash units which are shared with the CIM, i.e. recycling cash units (`WFS_CDM_TYPERECYCLING`) and reject/retract cash units (`WFS_CDM_TYPEREJECTCASSETTE / WFS_CDM_TYPERETRACTCASSETTE`). The CIM interface reports all cash units of all types, including those that can only be used by commands on the CDM interface.

**Input Param** None.

**Output Param** `LPWFSCDMCUINFO lpCashUnitInfo;`

```
typedef struct _wfs_cdm_cu_info
{
    USHORT          usTellerID;
    USHORT          usCount;
    LPWFSCDMCASHUNIT *lppList;
} WFS_CDMCUINFO, *LPWFSCDMCUINFO;
```

#### *usTellerID*

This field is not used in this command and is always zero.

#### *usCount*

Specifies the number of cash unit structures returned.

#### *lppList*

Pointer to an array of pointers to `WFS_CDMCASHUNIT` structures:

```
typedef struct _wfs_cdm_cashunit
{
    USHORT          usNumber;
    USHORT          usType;
    LPSTR           lpszCashUnitName;
    CHAR            cUnitID[5];
    CHAR            cCurrencyID[3];
    ULONG          ulValues;
    ULONG          ulInitialCount;
    ULONG          ulCount;
    ULONG          ulRejectCount;
    ULONG          ulMinimum;
    ULONG          ulMaximum;
    BOOL            bAppLock;
    USHORT          usStatus;
    USHORT          usNumPhysicalCUs;
    LPWFSCDMPHCU   *lppPhysical;
    ULONG          ulDispensedCount;
    ULONG          ulPresentedCount;
    ULONG          ulRetractedCount;
} WFS_CDMCASHUNIT, *LPWFSCDMCASHUNIT;
```

*usNumber*

Index number of the cash unit structure. Each structure has a unique logical number starting with a value of one (1) for the first structure, and incrementing by one for each subsequent structure.

*usType*

Type of cash unit. Possible values are:

Value	Meaning
WFS_CDM_TYPPENA	Not applicable. Typically means cash unit is missing.
WFS_CDM_TYPEREJECTCASSETTE	Reject cash unit. This type will also indicate a combined reject/retract cash unit.
WFS_CDM_TYPEBILLCASSETTE	Cash unit containing bills.
WFS_CDM_TYPECOINCYLINDER	Coin cylinder.
WFS_CDM_TYPECOINDISPENSER	Coin dispenser as a whole unit.
WFS_CDM_TYPERETRACTCASSETTE	Retract cash unit.
WFS_CDM_TYPECOUPON	Cash unit containing coupons or advertising material.
WFS_CDM_TYPEREDOCUMENT	Cash unit containing documents.
WFS_CDM_TYPEREPCONTAINER	Replenishment container. A cash unit can be refilled from a replenishment container.
WFS_CDM_TYPERECYCLING	Recycling cash unit. This unit is only present when the device is a compound device with a CIM.

*lpzCashUnitName*

A name which helps to identify the logical type of the cash unit. This is especially useful in the case of cash units of type WFS\_CDM\_TYPEREDOCUMENT where different documents can have the same currency and value. For example, travelers checks and bank checks may have the same currency and value but still need to be identifiable as different types of document. Where this value is not relevant (e.g. in bill cash units) the pointer will be NULL. This value is persistent.

*cUnitID*

The Cash Unit Identifier.

*cCurrencyID*

A three character array storing the ISO format [Ref. 2] Currency ID. This value will be an array of three ASCII 0x20h characters for cash units which contain items of more than one currency type or items to which currency is not applicable. If the *usStatus* field for this cash unit is WFS\_CDM\_STATCUNOVAL it is the responsibility of the application to assign a value to this field. This value is persistent.

*ulValues*

Supplies the value of a single item in the cash unit. This value is expressed in minimum dispense units (see section WFS\_INF\_CDM\_CURRENCY\_EXP). If the *cCurrencyID* field for this cash unit is an array of three ASCII 0x20h characters, then this field will contain zero. If the *usStatus* field for this cash unit is WFS\_CDM\_STATCUNOVAL it is the responsibility of the application to assign a value to this field. This value is persistent.

*ulInitialCount*

Initial number of items contained in the cash unit. This value is persistent.

*ulCount*

The meaning of this count depends on the type of cash unit. This value is persistent.

For all cash units except retract cash units (*usType* is not WFS\_CDM\_TYPERETRACTCASSETTE) this value specifies the number of items inside all the physical cash units associated with this cash unit.

For all dispensing cash units (*usType* is WFS\_CDM\_TYPEBILLCASSETTE, WFS\_CDM\_TYPECOINCYLINDER, WFS\_CDM\_TYPECOINDISPENSER, WFS\_CDM\_TYPECOUPON, WFS\_CDM\_TYPEREJECTCASSETTE or WFS\_CDM\_TYPEREJECTCASSETTE), this value includes any items from the physical cash units not yet presented to the customer. This count is only decremented when the items are either known to be in customer access or successfully rejected.

If the cash unit is usable from the CIM interface (*usType* is WFS\_CDM\_TYPEREJECTCASSETTE, WFS\_CDM\_TYPEREJECTCASSETTE or WFS\_CDM\_TYPEREJECTCASSETTE) then this value will be incremented as a result of a cash-in operation.

Note that for a reject cash unit (*usType* is WFS\_CDM\_TYPEREJECTCASSETTE), this value is unreliable, since the typical reason for dumping items to the reject cash unit is a suspected count failure.

For a retract cash unit (*usType* is WFS\_CDM\_TYPEREJECTCASSETTE) this value specifies the number of retract operations (CDM commands, CIM commands and error recoveries) which result in items entering the cash unit.

*ulRejectCount*

The number of items dispensed from this cash unit which have been rejected, are in ~~the reject bin~~ a cash unit other than this cash unit, and which have not been accessible to a customer. This value may be unreliable, since ~~the~~ typical reason for ~~dumping~~ rejecting items ~~to the reject cash unit~~ is a suspected pick failure. Other reasons for rejecting items may include incorrect note denominations, classifications not valid for dispensing, or where the transaction has been cancelled and WFS\_CMD\_CDM\_REJECT has been called. For reject and retract cash units (*usType* is WFS\_CDM\_TYPEREJECTCASSETTE or WFS\_CDM\_TYPEREJECTCASSETTE) this field does not apply and will be reported as zero. This value is persistent.

*ulMinimum*

This field is not applicable to retract and reject cash units. For all other cash units, when *ulCount* reaches this value the threshold event WFS\_USRE\_CDM\_CASHUNITTHRESHOLD (WFS\_CDM\_STATCULOW) will be generated. If this value is non-zero then hardware sensors in the device do not trigger threshold events. If this value is zero then hardware sensors will trigger threshold events if *bHardwareSensor* is TRUE. This value is persistent.

*ulMaximum*

This field is only applicable to retract and reject cash units. When *ulCount* reaches this value the threshold event WFS\_USRE\_CDM\_CASHUNITTHRESHOLD (WFS\_CDM\_STATCUHIGH) will be generated. If this value is non-zero then hardware sensors in the device do not trigger threshold events. If this value is zero then hardware sensors will trigger threshold events if *bHardwareSensor* is TRUE. This value is persistent.

*bAppLock*

~~This field does not apply to reject or retract cash units.~~ If this value is TRUE items cannot be dispensed from or deposited into the cash unit. If this value is TRUE and the application attempts to dispense from the cash unit a WFS\_EXEE\_CDM\_CASHUNITERROR event will be generated and a WFS\_ERR\_CDM\_CASHUNITERROR code will be returned. This value is persistent.

*usStatus*

Supplies the status of the cash unit as one of the following values:

Value	Meaning
WFS_CDM_STATCUOK	The cash unit is in a good state.
WFS_CDM_STATCUFULL	The cash unit is full. This value only applies to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPEREJECTCASSETTE.

WFS_CDM_STATCUHIGH	The cash unit is almost full (i.e. reached or exceeded the threshold defined by <i>ulMaximum</i> ). This value only applies to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE.
WFS_CDM_STATCULOW	The cash unit is almost empty (i.e. reached or below the threshold defined by <i>ulMinimum</i> ). This value does not apply to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE.
WFS_CDM_STATCUEMPTY	The cash unit is empty, or insufficient items in the cash unit are preventing further dispense operations. <a href="#">This value does not apply to cash units where <i>usType</i> is WFS_CDM_TYPEREJECTCASSETTE or WFS_CDM_TYPERETRACTCASSETTE.</a> <a href="#">Note that this status is available to all cash unit types, which is a change from previous versions of this specification, therefore service providers may wish to make this a configurable option.</a>
WFS_CDM_STATCUINOP	The cash unit is inoperative.
WFS_CDM_STATCUMISSING	The cash unit is missing.
WFS_CDM_STATCUNOVAL	The values of the specified cash unit are not available.
WFS_CDM_STATCUNOREF	There is no reference value available for the notes in this cash unit. The cash unit has not been calibrated.
WFS_CDM_STATCUMANIP	The cash unit has been inserted (including removal followed by a reinsertion) when the device was not in the exchange state. This cash unit cannot be dispensed from.

*ulDispensedCount*

The number of items dispensed from all the physical cash units associated with this cash unit. This count is incremented when the items are removed from any of the associated physical cash units. This count includes any items that were rejected during the dispense operation- [and are no longer in this cash unit.](#) This field is always zero for cash units with a *usType* of WFS\_CDM\_TYPEREJECTCASSETTE or WFS\_CDM\_TYPERETRACTCASSETTE. This value is persistent.

*ulPresentedCount*

The number of items from all the physical cash units associated with this cash unit that have been presented to the customer. This count is incremented when the items are presented to the customer. If it is unknown if a customer has been presented with the items, then this count is not updated. This field is always zero for cash units with a *usType* of WFS\_CDM\_TYPEREJECTCASSETTE or WFS\_CDM\_TYPERETRACTCASSETTE. This value is persistent.

*ulRetractedCount*

The number of items that have been accessible to a customer and retracted into all the physical cash units associated with this cash unit. This value is persistent.

*usNumPhysicalCUs*

The number of physical cash unit structures returned in the following *lppPhysical* array. This number must be at least 1.

*lpPhysical*

Pointer to an array of pointers to WFSCDMPHCU structures:

```
typedef struct _wfs_cdm_physicalcu
{
    LPSTR                lpPhysicalPositionName;
    CHAR                 cUnitID[5];
    ULONG                ulInitialCount;
    ULONG                ulCount;
    ULONG                ulRejectCount;
    ULONG                ulMaximum;
    USHORT              usPStatus;
    BOOL                 bHardwareSensor;
    ULONG                ulDispensedCount;
    ULONG                ulPresentedCount;
    ULONG                ulRetractedCount;
} WFSCDMPHCU, *LPWFSCDMPHCU;
```

*lpPhysicalPositionName*

A name identifying the physical location of the cash unit within the CDM. This field can be used by CDMs which are compound with a CIM to identify shared cash units.

*cUnitID*

A 5 character array uniquely identifying the physical cash unit.

*ulInitialCount*

Initial number of items contained in the cash unit. This value is persistent.

*ulCount*

As defined by the logical *ulCount* description but applies to a single physical cash unit, but with the following exceptions:

This count does not include items dispensed but not yet presented.

On cash units belonging to logical cash units with *usType* set to `WFS_CDM_TYPERETRACTCASSETTE` the physical count represents the number of items, unless the device cannot count items during a retract, in which case this count will be zero.

This value is persistent.

*ulRejectCount*

As defined by the logical *ulRejectCount* description but applies to a single physical cash unit. This value is persistent.

*ulMaximum*

The maximum number of items the cash unit can hold. This is only for informational purposes. No threshold event `WFS_USRE_CDM_CASHUNITTHRESHOLD` will be generated. This value is persistent.

*usPStatus*

Supplies the status of the physical cash unit as one of the following values:

Value	Meaning
<code>WFS_CDM_STATCUOK</code>	The cash unit is in a good state.
<code>WFS_CDM_STATCUFULL</code>	The cash unit is full. This value only applies to cash units where <i>usType</i> is <code>WFS_CDM_TYPEREJECTCASSETTE</code> or <code>WFS_CDM_TYPERETRACTCASSETTE</code> .
<code>WFS_CDM_STATCUHIGH</code>	The cash unit is almost full (reached or exceeded threshold defined by <i>ulMaximum</i> ). This value only applies to cash units where <i>usType</i> is <code>WFS_CDM_TYPEREJECTCASSETTE</code> or <code>WFS_CDM_TYPERETRACTCASSETTE</code> .

WFS_CDM_STATCULOW	The cash unit is almost empty. This value does not apply to cash units where <i>usType</i> is WFS_CDM_TYPE-REJECTCASSETTE or WFS_CDM_TYPERETRACT-CASSETTE.
WFS_CDM_STATCUEMPTY	The cash unit is empty, or insufficient items in the cash unit are preventing further dispense operations. <del>This value does not apply to cash units where <i>usType</i> is WFS_CDM_TYPE-REJECTCASSETTE or WFS_CDM_TYPERETRACT-CASSETTE</del> <u>Note that this status is available to all cash unit types, which is a change from previous versions of this specification, therefore service providers may wish to make this a configurable option.</u>
WFS_CDM_STATCUINOP	The cash unit is inoperative.
WFS_CDM_STATCUMISSING	The cash unit is missing. The cash unit has been removed and is physically not present in the machine.
WFS_CDM_STATCUNOVAL	The values of the specified cash unit are not available.
WFS_CDM_STATCUNOREF	There is no reference value available for the notes in this cash unit. The cash unit has not been calibrated.
WFS_CDM_STATCUMANIP	The cash unit has been inserted (including removal followed by a reinsertion) when the device was not in the exchange state. This cash unit cannot be dispensed from.

*bHardwareSensor*

Specifies whether or not threshold events can be generated based on hardware sensors in the device. If this value is TRUE for any of the physical cash units related to a logical cash unit then threshold events may be generated based on hardware sensors as opposed to logical counts.

*ulDispensedCount*

As defined by the logical *ulDispensedCount* description but applies to a single physical cash unit. This value is zero if the h/w does not support physical counts. This value is persistent.

*ulPresentedCount*

As defined by the logical *ulPresentedCount* description but applies to a single physical cash unit. This value is zero if the h/w does not support physical counts. This value is persistent.

*ulRetractedCount*

As defined by the logical *ulRetractedCount* description but applies to a single physical cash unit. This value is zero if the h/w does not support physical counts. This value is persistent.

**Error Codes** Only the generic error codes defined in [Ref. 1] can be generated by this command.

**Comments** None.

### 3.45.4 WFS\_INF\_CDM\_TELLER\_INFO

**Description** This command only applies to Teller CDMs. It allows the application to obtain counts for each currency assigned to the teller. These counts represent the total amount of currency dispensed by the teller in all transactions.

This command also enables the application to obtain the position assigned to each teller. If the input parameter is NULL, this command will return information for all tellers and all currencies. The teller information is persistent.

**Input Param** LPWFSCDMTELLERINFO lpTellerInfo;

```
typedef struct _wfs_cdm_teller_info
{
    USHORT                usTellerID;
    CHAR                  cCurrencyID[3];
} WFS_CDM_TELLERINFO, *LPWFSCDMTELLERINFO;
```

*usTellerID*

Identification of the teller. If the value of *usTellerID* is not valid the error WFS\_ERR\_CDM\_INVALIDTELLERID is reported.

*cCurrencyID*

Three character ISO format currency identifier [Ref 2].

This field can be an array of three ASCII 0x20 characters. In this case information on all currencies will be returned.

**Output Param** LPWFSCDMTELLERDETAILS \*lppTellerDetails;

Pointer to a NULL-terminated array of pointers to WFS\_CDM\_TELLERDETAILS structures.

```
typedef struct _wfs_cdm_teller_details
{
    USHORT                usTellerID;
    ULONG                ulInputPosition;
    WORD                 fwOutputPosition;
    LPWFSCDMTELLERTOTALS *lppTellerTotals;
} WFS_CDM_TELLERDETAILS, *LPWFSCDMTELLERDETAILS;
```

*usTellerID*

Identification of the teller.

*ulInputPosition*

The input position assigned to the teller for cash entry. This is only for compatibility except when the device is a compound device. The value is specified by one of the following values:

Value	Meaning
WFS_CDM_POSNULL	No position is assigned to the teller.
WFS_CDM_POSINLEFT	Left position is assigned to the teller.
WFS_CDM_POSINRIGHT	Right position is assigned to the teller.
WFS_CDM_POSINCENTER	Center position is assigned to the teller.
WFS_CDM_POSINTOP	Top position is assigned to the teller.
WFS_CDM_POSINBOTTOM	Bottom position is assigned to the teller.
WFS_CDM_POSINFRONT	Front position is assigned to the teller.
WFS_CDM_POSINREAR	Rear position is assigned to the teller.

*fwOutputPosition*

The output position from which cash is presented to the teller. The value is specified by one of the following values:

Value	Meaning
WFS_CDM_POSNULL	No position is assigned to the teller.
WFS_CDM_POSLEFT	Left position is assigned to the teller.
WFS_CDM_POSRIGHT	Right position is assigned to the teller.
WFS_CDM_POSCENTER	Center position is assigned to the teller.
WFS_CDM_POSTOP	Top position is assigned to the teller.
WFS_CDM_POSBOTTOM	Bottom position is assigned to the teller.
WFS_CDM_POSFRONT	Front position is assigned to the teller.

WFS\_CDM\_POSREAR

Rear position is assigned to the teller.

*lppTellerTotals*

Pointer to a NULL-terminated array of pointers to WFS\_CDM\_TELLERTOTALS structures.

```
typedef struct _wfs_cdm_teller_totals
{
    CHAR                cCurrencyID[3];
    ULONG               ulItemsReceived;
    ULONG               ulItemsDispensed;
    ULONG               ulCoinsReceived;
    ULONG               ulCoinsDispensed;
    ULONG               ulCashBoxReceived;
    ULONG               ulCashBoxDispensed;
} WFS_CDM_TELLERTOTALS, *LPWFS_CDM_TELLERTOTALS;
```

*cCurrencyID*

Three character ISO format currency identifier [Ref. 2].

*ulItemsReceived*

The total amount of items (other than coins) of the specified currency accepted. The amount is expressed in minimum dispense units (see section WFS\_INF\_CDM\_CURRENCY\_EXP).

*ulItemsDispensed*

The total amount of items (other than coins) of the specified currency dispensed. The amount is expressed in minimum dispense units (see section WFS\_INF\_CDM\_CURRENCY\_EXP).

*ulCoinsReceived*

The total amount of coin currency accepted. The amount is expressed in minimum dispense units (see section WFS\_INF\_CDM\_CURRENCY\_EXP).

*ulCoinsDispensed*

The total amount of coin currency dispensed. The amount is expressed in minimum dispense units (see section WFS\_INF\_CDM\_CURRENCY\_EXP).

*ulCashBoxReceived*

The total amount of cash box currency accepted. The amount is expressed in minimum dispense units (see section WFS\_INF\_CDM\_CURRENCY\_EXP).

*ulCashBoxDispensed*

The total amount of cash box currency dispensed. The amount is expressed in minimum dispense units (see section WFS\_INF\_CDM\_CURRENCY\_EXP).

**Error Codes**

In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDCURRENCY	Specified currency not currently available.
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID.

**Comments**

None.

### 3-55.5 WFS\_INF\_CDM\_CURRENCY\_EXP

---

**Description** This command returns each exponent assigned to each currency known to the Service Provider.

**Input Param** None.

**Output Param** LPWFSCDMCURRENCYEXP \*lppCurrencyExp;

Pointer to a NULL-terminated array of pointers to WFSCDMCURRENCYEXP structures:

```
typedef struct _wfs_cdm_currency_exp
{
    CHAR                cCurrencyID[3];
    SHORT               sExponent;
} WFSCDMCURRENCYEXP, *LPWFSCDMCURRENCYEXP;
```

*cCurrencyID*

Currency identifier in ISO 4217 format [Ref 2].

*sExponent*

Currency exponent in ISO 4217 format [Ref. 2].

**Error Codes** Only the generic error codes defined in [Ref. 1] can be generated by this command.

**Comments** For each currency ISO 4217 defines the currency identifier (a three character code) and a currency unit (e.g. European Euro, Japanese Yen). In the interface defined by this specification, every money amount is specified in terms of multiples of the minimum dispense unit, which is equal to the currency unit times ten to the power of the currency exponent. Thus an amount parameter relates to the actual cash amount as follows:

$\langle \text{cash\_amount} \rangle = \langle \text{money\_amount\_parameter} \rangle * 10^{\langle \text{sExponent} \rangle}$

Example #1 - Euro

Currency identifier is 'EUR'

Currency unit is 1 Euro (= 100 Cent)

A Service Provider is developed for an ATM that can dispense coins down to one Cent. The currency exponent (*sExponent*) is set to -2 (minus two), so the minimum dispense unit is one Cent ( $1 * 10^{-2}$  Euro); all amounts at the XFS interface are in Cent. Thus a money amount parameter of 10050 is 100 Euro and 50 Cent.

Example #2 - Japan

Currency identifier is 'JPY'

Currency unit is 1 Japanese Yen

A Service Provider is required to dispense a minimum amount of 1000 Yen. The currency exponent (*sExponent*) is set to +3 (plus three), so the minimum dispense unit is 1000 Yen; all amounts at the XFS interface are in multiples of 1000 Yen. Thus an amount parameter of 15 is 15000 Yen.

### 3-65.6 WFS\_INF\_CDM\_MIX\_TYPES

**Description** This command is used to obtain a list of supported mix algorithms and available house mix tables.

**Input Param** None.

**Output Param** LPWFSCDMMIXTYPE \*lppMixTypes;

Pointer to a NULL-terminated array of pointers to WFS\_CDM\_MIX\_TYPE structures:

```
typedef struct _wfs_cdm_mix_type
{
    USHORT          usMixNumber;
    USHORT          usMixType;
    USHORT          usSubType;
    LPSTR           lpszName;
} WFS_CDM_MIX_TYPE, *LPWFSCDMMIXTYPE;
```

*usMixNumber*

Number identifying the mix algorithm or the house mix table. This number can be passed to the WFS\_INF\_CDM\_MIX\_TABLE, WFS\_CMD\_CDM\_DISPENSE and WFS\_CMD\_CDM\_DENOMINATE commands.

*usMixType*

Specifies whether the mix type is an algorithm or a house mix table. Possible values are:

Value	Meaning
WFS_CDM_MIXALGORITHM	Mix algorithm.
WFS_CDM_MIXTABLE	Mix table.

*usSubType*

Contains a vendor-defined number that identifies the type of algorithm. Individual vendor-defined mix algorithms are defined above hexadecimal 7FFF. Mix algorithms which are provided by the Service Provider are in the range hexadecimal 8000 - 8FFF. Application defined mix algorithms start at hexadecimal 9000. All numbers below 8000 hexadecimal are reserved. If *usMixType* is WFS\_CDM\_MIXTABLE, this value will be zero. Predefined values are:

Value	Meaning
WFS_CDM_MIX_MINIMUM_NUMBER_OF_BILLS	Select a mix requiring the minimum possible number of items.
WFS_CDM_MIX_EQUAL_EMPTYING_OF_CASH_UNITS	The denomination is selected based upon criteria which ensure that over the course of its operation the CDM cash units will empty as far as possible at the same rate and will therefore go LOW and then EMPTY at approximately the same time.
WFS_CDM_MIX_MAXIMUM_NUMBER_OF_CASH_UNITS	The denomination will be selected based upon criteria which ensures the maximum number of different logical cash units are used.

*lpszName*

Points to the name of the table/algorithm used.

**Error Codes** Only the generic error codes defined in [Ref. 1] can be generated by this command.

**Comments** None.

### 3.75.7 WFS\_INF\_CDM\_MIX\_TABLE

**Description** This command is used to obtain the house mix table specified by the supplied mix number.

**Input Param** LPUSHORT lpusMixNumber;

*lpusMixNumber*

Pointer to the number of the requested house mix table.

**Output Param** LPWFSCDMMIXTABLE lpMixTable;

```
typedef struct _wfs_cdm_mix_table
{
    USHORT                usMixNumber;
    LPSTR                 lpszName;
    USHORT                usRows;
    USHORT                usCols;
    LPULONG               lpulMixHeader;
    LPWFSCDMMIXROW       *lppMixRows;
} WFS_CDMMIXTABLE, *LPWFSCDMMIXTABLE;
```

*usMixNumber*

Number identifying the house mix table.

*lpszName*

Points to the name of the house mix table.

*usRows*

Number of rows in the house mix table. There is at least one row for each distinct total amount to be denominated. If there is more than one row for an amount the first row is taken that is dispensable according to the current status of the cash units.

*usCols*

Number of columns in the house mix table. There is one column for each distinct item value included in the mix.

*lpulMixHeader*

Pointer to an array of length *usCols* of unsigned longs; each element defines the value of the item corresponding to its respective column (see section WFS\_INF\_CDM\_CURRENCY\_EXP).

*lppMixRows*

Pointer to an array (of length *usRows*) of pointers to WFS\_CDMMIXROW structures:

```
typedef struct _wfs_cdm_mix_row
{
    ULONG                ulAmount;
    LPUSHORT             lpusMixture;
} WFS_CDMMIXROW, *LPWFSCDMMIXROW;
```

*ulAmount*

Amount denominated by this mix row (see section WFS\_INF\_CDM\_CURRENCY\_EXP).

*lpusMixture*

Pointer to a mix row, an array of length *usCols* of USHORTs; each element defines the quantity of each item denomination in the mix used in the denomination of *ulAmount*.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDMIXNUMBER	The <i>lpusMixNumber</i> parameter does not correspond to a defined mix table.

**Comments** None.

### 3-85.8 WFS\_INF\_CDM\_PRESENT\_STATUS

**Description** This command is used to obtain the status of the most recent attempt to dispense and/or present items to the customer- [from a specified output position](#). The items may have been dispensed and/or presented as a result of the WFS\_CMD\_CDM\_PRESENT or WFS\_CMD\_CDM\_DISPENSE command. This status is not updated as a result of any other command that can dispense/present items.

This value is persistent and is valid until the next time an attempt is made to present or dispense items to the customer.

The denominations reported by this command may not accurately reflect the operation if the cash units have been re-configured (e.g. if the values associated with a cash unit are changed, or new cash units are configured).

**Input Param** LPWORD lpfwPosition;

*lpfwPosition*

Pointer to the [required](#) output position-~~the items were presented or dispensed to~~ as one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The <del>items were presented according to the</del> default configuration.
WFS_CDM_POSLEFT	The <del>items were presented to the</del> left output position.
WFS_CDM_POSRIGHT	The <del>items were presented to the</del> right output position.
WFS_CDM_POSCENTER	The <del>items were presented to the</del> center output position.
WFS_CDM_POSTOP	The <del>items were presented to the</del> top output position.
WFS_CDM_POSBOTTOM	The <del>items were presented to the</del> bottom output position.
WFS_CDM_POSFRONT	The <del>items were presented to the</del> front output position.
WFS_CDM_POSREAR	The <del>items were presented to the</del> rear output position.

**Output Param** LPWFSCDMPRESENTSTATUS lpPresentStatus;

```
typedef struct _wfs_cdm_present_status
{
    LPWFSCDMDENOMINATION    lpDenomination;
    WORD                    wPresentState;
    LPSTR                    lpszExtra;
} WFS_CDM_PRESENTSTATUS, *LPWFSCDMPRESENTSTATUS;
```

*lpDenomination*

Pointer to a WFS\_CDM\_DENOMINATION structure which contains the amount dispensed [from the specified output position](#) and the number of items dispensed from each cash unit. For a description of the WFS\_CDM\_DENOMINATION structure see the definition of the command WFS\_CMD\_CDM\_DENOMINATE. Where the capability *fwMoveItems* reports WFS\_CMD\_TOSTACKER this value is cumulative across a series of WFS\_CMD\_CDM\_DISPENSE calls that add additional items to the stacker.

Where mixed currencies were dispensed the *ulAmount* field in the returned denomination structure will be zero and the *cCurrencyID* field will be set to three ASCII 0x20 characters.

*wPresentState*

Supplies the status of the last dispense or present operation. Possible values are:

Value	Meaning
WFS_CDM_PRESENTED	The items were presented. This status is set as soon as the customer has access to the items.

WFS\_CDM\_NOTPRESENTED

The customer has not had access to the items.

WFS\_CDM\_UNKNOWN

It is not known if the customer had access to the items.

*lpzExtra*

Pointer to a list of vendor-specific, or any other extended, information. The information is returned as a series of “*key=value*” strings so that it is easily extensible by Service Providers. Each string is null-terminated, with the final string terminating with two null characters. An empty list may be indicated by either a NULL pointer or a pointer to two consecutive null characters.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_UNSUPPOSITION	The specified output position is not supported.

**Comments** None.

### 3.95.9 WFS\_INF\_CDM\_GET\_ITEM\_INFO

**Description** This command is used to get information about ~~the number of level 1 / level 2 / level 3 / level 4 notes dispensed and the number of level 2 / level 3 / level 4 signatures created~~ a single detected item. This information is available from the point where the first WFS\_EXEE\_CDM\_INFO\_AVAILABLE event is generated until one of the following CDM commands is executed:

WFS\_CMD\_CDM\_DISPENSE, WFS\_CMD\_CDM\_COUNT, WFS\_CMD\_CDM\_PRESENT, WFS\_CMD\_CDM\_RETRACT, WFS\_CMD\_CDM\_REJECT, WFS\_CMD\_CDM\_OPEN\_SHUTTER, WFS\_CMD\_CDM\_CLOSE\_SHUTTER, WFS\_CMD\_CDM\_RESET, WFS\_CMD\_CDM\_START\_EXCHANGE, WFS\_CMD\_CDM\_END\_EXCHANGE, WFS\_CMD\_CDM\_CALIBRATE\_CASH\_UNIT, WFS\_CMD\_CDM\_TEST\_CASH\_UNITS.

Additionally for a recycler, the following CIM commands will also invalidate the information:

WFS\_CMD\_CIM\_CASH\_IN\_START, WFS\_CMD\_CIM\_CASH\_IN, WFS\_CMD\_CIM\_CASH\_IN\_ROLLBACK, WFS\_CMD\_CIM\_CASH\_IN\_END, WFS\_CMD\_CIM\_RETRACT, WFS\_CMD\_CIM\_RESET, WFS\_CMD\_CIM\_START\_EXCHANGE, WFS\_CMD\_CIM\_END\_EXCHANGE, WFS\_CMD\_CIM\_CREATE\_P6\_SIGNATURE, WFS\_CMD\_CIM\_REPLENISH, WFS\_CMD\_CIM\_CASH\_UNIT\_COUNT.

This command is used to retrieve the required information on an individual item basis. Applications should loop retrieving the information for each index and for each level reported with the WFS\_EXEE\_CDM\_INFO\_AVAILABLE event.

**Input Param** LPWFSCDMGETITEMINFO lpGetItemInfo;

```
typedef struct _wfs_cdm_get_item_info
{
    USHORT          usLevel;
    USHORT          usIndex;
    DWORD           dwItemInfoType;
} WFS_CDM_GET_ITEM_INFO, *LPWFSCDMGETITEMINFO;
```

*usLevel*

Defines the note level. Possible values are:

Value	Meaning
WFS_CDM_LEVEL_1	Information for level 1 notes. Only an image file can be retrieved for level 1 notes.
WFS_CDM_LEVEL_2	Information for level 2 notes. On systems that do not <a href="#">support note handling standards</a> <a href="#">classify notes as level 2</a> this value cannot be used and WFS_ERR_INVALID_DATA will be returned.
WFS_CDM_LEVEL_3	Information for level 3 notes. On systems that do not <a href="#">support note handling standards</a> <a href="#">classify notes as level 3</a> this value cannot be used and WFS_ERR_INVALID_DATA will be returned.
WFS_CDM_LEVEL_4	Information for level 4 notes. <del>This value is also used to retrieve item information on systems that do not support note handling standards.</del>

*usIndex*

Specifies the index for the item information required (zero to *usNumOfItems*-1 as reported in the WFS\_EXEE\_CDM\_INFO\_AVAILABLE event).

*dwItemInfoType*

Specifies the type of information required. This can be a combination of the following flags:

Value	Meaning
WFS_CDM_ITEM_SERIALNUMBER	Serial number of the item.
WFS_CDM_ITEM_SIGNATURE	Signature of the item.
WFS_CDM_ITEM_IMAGEFILE	Image file of the item.

**Output Param** LPWFSCDMITEMINFO lpItemInfo;

The data returned by this command relates to a single item (*usIndex*).

```
typedef struct _wfs_cdm_item_info
{
    CHAR                cCurrencyID[3];
    ULONG               ulValue;
    USHORT              usRelease;
    LPWSTR              lpszSerialNumber;
    LPWFSCDMSIGNATURE  lpSignature;
    LPSTR               lpszImageFileName;
} WFS_CDMITEMINFO, *LPWFSCDMITEMINFO;
```

*cCurrencyID*

Currency ID in ISO 4217 format [Ref. 2]. This value will be an array of three ASCII 0x20h characters for level 1 items.

*ulValue*

The value of a single item expressed in minimum dispense units. This value will be zero for level 1 items.

*usRelease*

The release of the banknote type. The higher this number is, the newer the release. Zero means that there is only one release of that banknote type. This value has not been standardized and therefore a release number of the same banknote will not necessarily have the same value in different systems. This value will be zero for level 1 items.

*lpszSerialNumber*

This field contains the serial number of the item as a Unicode string. A '?' character (0x003F) is used to represent any serial number character that cannot be recognized. If no serial number is available or has not been requested then *lpszSerialNumber* is NULL.

*lpSignature*

This field contains the signature for the item. If no signature is available or has not been requested then this field is NULL.

```
typedef struct _wfs_cdm_signature
{
    ULONG               ulLength;
    LPVOID              lpData;
} WFS_CDMSIGNATURE, *LPWFSCDMSIGNATURE;
```

*ulLength*

Length of the signature in bytes.

*lpData*

Pointer to the returned signature data.

*lpszImageFileName*

Name of the file where the image containing the item's serial number is stored, e.g. "C:\Temp\cash123456.jpg". If the Service Provider does not support this function or the image file has not been requested then *lpszImageFileName* is NULL.

The application is responsible for the use and management of this file. For example, the application can transfer the image files to a directory which is managed by the application.

**Error Codes** Only the generic error codes defined in [Ref. 1] can be generated by this command.

**Comments** The application has to call this command multiple times in a loop where there is multiple information to retrieve. In addition, since the item information is not cumulative and can be replaced by any command that can move notes, it is recommended that applications that are interested in the available information should query for it following the WFS\_EXEE\_CDM\_INFO\_AVAILABLE event but before any other command is executed.

### 3.105.10 WFS\_INF\_CDM\_GET\_BLACKLIST

---

**Description** This command is used to retrieve the entire blacklist information pre-set inside the device or set via the [WFS\\_CMD\\_CDM\\_SET\\_BLACKLIST](#) or [WFS\\_CMD\\_CDM\\_SET\\_CLASSIFICATION\\_LIST](#) command, or [WFS\\_CMD\\_CIM\\_SET\\_BLACKLIST](#) or [WFS\\_CMD\\_CIM\\_SET\\_CLASSIFICATION\\_LIST](#) in the case of a recycler.

**Input Param** None.

**Output Param** LPWFSCDMBLACKLIST lpBlacklist;

```
typedef struct _wfs_cdm_blacklist
{
    LPWSTR                lpszVersion;
    USHORT                usCount;
    LPWFSCDMBLACKLISTELEMENT *lppBlacklistElements;
} WFSCDMBLACKLIST, *LPWFSCDMBLACKLIST;
```

*lpszVersion*

This is an application defined Unicode string that sets the version identifier of the blacklist. This can be set to NULL if it has no version identifier.

*usCount*

Number of pointers to WFSCDMBLACKLISTELEMENT structures returned in *lppBlacklistElements*.

*lppBlacklistElements*

Pointer to an array of pointers to WFSCDMBLACKLISTELEMENT structures.

```
typedef struct _wfs_cdm_blacklist_element
{
    LPWSTR                lpszSerialNumber;
    CHAR                  cCurrencyID[3];
    ULONG                 ulValue;
} WFSCDMBLACKLISTELEMENT, *LPWFSCDMBLACKLISTELEMENT;
```

*lpszSerialNumber*

This Unicode string defines the serial number or a mask of serial numbers of one blacklist item with the defined currency and value. For a definition of the mask see Section [24](#).

*cCurrencyID*

The three character ISO format currency identifier [Ref. 2] of the blacklist element.

*ulValue*

The value of a blacklist element. This field can be zero to represent all values.

**Error Codes** Only the generic error codes defined in [Ref. 1] can be generated by this command.

**Comments** None.

### 3.145.11 WFS\_INF\_CDM\_GET\_ALL\_ITEMS\_INFO

**Description** This command can be used to retrieve all item information available for all levels at once by specifying WFS\_CDM\_LEVEL\_ALL in the *usLevel* parameter. Alternatively this command can be used to retrieve all information for a particular level of banknote. This information is available from the point where the first WFS\_EXEE\_CDM\_INFO\_AVAILABLE event is generated until one of the following CDM commands is executed:

WFS\_CMD\_CDM\_DISPENSE, WFS\_CMD\_CDM\_COUNT, WFS\_CMD\_CDM\_PRESENT,  
WFS\_CMD\_CDM\_RETRACT, WFS\_CMD\_CDM\_REJECT,  
WFS\_CMD\_CDM\_OPEN\_SHUTTER, WFS\_CMD\_CDM\_CLOSE\_SHUTTER,  
WFS\_CMD\_CDM\_RESET, WFS\_CMD\_CDM\_START\_EXCHANGE,  
WFS\_CMD\_CDM\_END\_EXCHANGE, WFS\_CMD\_CDM\_CALIBRATE\_CASH\_UNIT,  
WFS\_CMD\_CDM\_TEST\_CASH\_UNITS.

Additionally for a recycler, the following CIM commands will also invalidate the information:

WFS\_CMD\_CIM\_CASH\_IN\_START, WFS\_CMD\_CIM\_CASH\_IN,  
WFS\_CMD\_CIM\_CASH\_IN\_ROLLBACK, WFS\_CMD\_CIM\_CASH\_IN\_END,  
WFS\_CMD\_CIM\_RETRACT, WFS\_CMD\_CIM\_RESET,  
WFS\_CMD\_CIM\_START\_EXCHANGE, WFS\_CMD\_CIM\_END\_EXCHANGE,  
WFS\_CMD\_CIM\_CREATE\_P6\_SIGNATURE, WFS\_CMD\_CIM\_REPLENISH,  
WFS\_CMD\_CIM\_CASH\_UNIT\_COUNT.

The WFS\_EXEE\_CDM\_INPUT\_P6 event ~~signals that a suspected forgery has been detected and~~ is only generated when level 2 and/or level 3 notes are detected.

**Input Param** LPWFSCDMGETALLITEMSINFO lpGetAllItemsInfo;

```
typedef struct _wfs_cdm_get_all_items_info
{
    USHORT                usLevel;
} WFS_CDM_GET_ALL_ITEMS_INFO, *LPWFSCDMGETALLITEMSINFO;
```

*usLevel*

Defines the note level. Possible values are:

Value	Meaning
WFS_CDM_LEVEL_1	Information for level 1 notes. Only an image file can be retrieved for level 1 notes.
WFS_CDM_LEVEL_2	Information for level 2 notes is to be returned with the <i>lpAllItemsInfo</i> output parameter. <a href="#">On systems that do not classify notes as level 2 this value cannot be used and WFS_ERR_INVALID_DATA will be returned.</a>
WFS_CDM_LEVEL_3	Information for level 3 notes is to be returned with the <i>lpAllItemsInfo</i> output parameter. <a href="#">On systems that do not classify notes as level 3 this value cannot be used and WFS_ERR_INVALID_DATA will be returned.</a>
WFS_CDM_LEVEL_4	Information for level 4 notes is to be returned with the <i>lpAllItemsInfo</i> output parameter. <a href="#">This value is also used to retrieve item information on systems that do not support note handling standards.</a>
WFS_CDM_LEVEL_ALL	Information for all levels all items is to be returned with the <i>lpAllItemsInfo</i> output parameter.

**Output Param** LPWFSCDMALLITEMSINFO lpAllItemsInfo;

```
typedef struct _wfs_cdm_all_items_info
{
    USHORT                usCount;
    LPWFSCDMITEMINFOALL  *lppItemsList;
} WFSCDMALLITEMSINFO, *LPWFSCDMALLITEMSINFO;
```

*usCount*

Number of WFSCDMITEMINFOALL structures returned in *lppItemsList*.

*lppItemsList*

Pointer to an array of pointers to WFSCDMITEMINFOALL structures:

```
typedef struct _wfs_cdm_item_info_all
{
    USHORT                usLevel;
    CHAR                  cCurrencyID[3];
    ULONG                ulValue;
    USHORT                usRelease;
    LPWSTR                lpszSerialNumber;
    LPSTR                 lpszImageFileName;
    WORD                  wOnBlacklist;
    WORD                  wItemLocation;
    USHORT                usNumber;
    WORD                  wOnClassificationList;
    WORD                  wItemDeviceLocation;
} WFSCDMITEMINFOALL, *LPWFSCDMITEMINFOALL;
```

*usLevel*

Defines the note level. Possible values are:

Value	Meaning
WFS_CDM_LEVEL_1	A level 1 banknote.
WFS_CDM_LEVEL_2	A level 2 banknote.
WFS_CDM_LEVEL_3	A level 3 banknote.
WFS_CDM_LEVEL_4	A level 4 banknote.

*cCurrencyID*

Currency ID in ISO 4217 format [Ref. 2]. This value will be an array of three ASCII 0x20h characters for level 1 items.

*ulValue*

The value of a single item expressed in minimum dispense units. This value will be zero for level 1 items.

*usRelease*

The release of the banknote type. The higher this number is, the newer the release. Zero means that there is only one release of that banknote type. This value has not been standardized and therefore a release number of the same banknote will not necessarily have the same value in different systems. This value will be zero for level 1 items.

*lpszSerialNumber*

This field contains the serial number of the item as a Unicode string. A '?' character (0x003F) is used to represent any serial number character that cannot be recognized. If no serial number is available then *lpszSerialNumber* is NULL.

*lpszImageFileName*

Full file path to an image file containing the serial number(s). If no image is available then this field is NULL. [The application is responsible for the use and management of this file. For example, the application can transfer the image files to a directory which is managed by the application.](#)

*wOnBlacklist*

Specifies if the serial number reported in the *lpszSerialNumber* field is on the blacklist. If the blacklist reporting capability is not supported this field will be zero. Otherwise, possible values are:

Value	Meaning
WFS_CDM_ONBLACKLIST	The serial number of the items is on the blacklist.

WFS_CDM_NOTONBLACKLIST	The serial number of the items is not on the blacklist.
WFS_CDM_BLACKLISTUNKNOWN	It is unknown if the serial number of the item is on the blacklist.

*wItemLocation*

Specifies the location of the item as one of the following values:

Value	Meaning
WFS_CDM_LOCATION_DEVICE	The item is inside the device in some position other than a cash unit.
WFS_CDM_LOCATION_CASHUNIT	The item is in a cash unit. The logical cash unit number is defined by <i>usNumber</i> .
WFS_CDM_LOCATION_CUSTOMER	The item has been dispensed to the customer.
WFS_CDM_LOCATION_UNKNOWN	The item location is unknown.

*usNumber*

If *wItemLocation* is WFS\_CDM\_LOCATION\_CASHUNIT this parameter specifies the logical number of the cash unit which received the item. If *wItemLocation* is not WFS\_CDM\_LOCATION\_CASHUNIT then *usNumber* will be zero.

*wOnClassificationList*

Specifies if the serial number reported in the *lpzSerialNumber* field is on the classification list. If the classification list reporting capability is not supported this field will be zero.

Otherwise, possible values are:

Value	Meaning
WFS_CDM_CLASSIFICATIONLIST_ON	The serial number of the items is on the classification list.
WFS_CDM_CLASSIFICATIONLIST_NOTON	The serial number of the items is not on the classification list.
WFS_CDM_CLASSIFICATIONLIST_UNKNOWN	It is unknown if the serial number of the item is on the classification list.

*wItemDeviceLocation*

If *wItemLocation* is WFS\_CDM\_LOCATION\_DEVICE this parameter specifies where the item is in the device. If *wItemLocation* is not WFS\_CDM\_LOCATION\_DEVICE then *wItemDeviceLocation* will be zero:

Value	Meaning
WFS_CDM_DEVLOC_STACKER	The item is in the intermediate stacker.
WFS_CDM_DEVLOC_OUTPUT	The item is at the output position. The items have not been in customer access.
WFS_CDM_DEVLOC_TRANSPORT	The item is at another location in the device.
WFS_CDM_DEVLOC_UNKNOWN	The item is in the device but its location is unknown.

**Error Codes**

Only the generic error codes defined in [Ref. 1] can be generated by this command.

**Comments**

In addition, since the item information is not cumulative and can be replaced by any command that can move notes, it is recommended that applications that are interested in the available information should query for it following the WFS\_EXEE\_CDM\_INFO\_AVAILABLE event but before any other command is executed.

## 5.12 WFS INF CDM GET CLASSIFICATION LIST

**Description** This command is used to retrieve the entire note classification information pre-set inside the device or set via the [WFS\\_CMD\\_CDM\\_SET\\_CLASSIFICATION\\_LIST](#) or [WFS\\_CMD\\_CDM\\_SET\\_BLACKLIST](#) command, or [WFS\\_CMD\\_CIM\\_SET\\_CLASSIFICATION\\_LIST](#) or [WFS\\_CMD\\_CIM\\_SET\\_BLACKLIST](#) in the case of a recycler.

[This extends the functionality provided by the blacklist commands and allows additional flexibility, for example to specify that notes can be taken out of circulation by specifying them as unfit. Any items not returned in this list will be handled according to normal classification rules.](#)

**Input Param** None.

**Output Param** LPWFSCDMCLASSIFICATIONLIST lpClassificationList;

```
typedef struct wfs cdm classification list
{
    LPWSTR lpszVersion;
    USHORT usCount;
    LPWFSCDMCLASSIFICATIONELEMENT *lppClassificationElements;
} WFS_CDM_CLASSIFICATIONLIST, *LPWFSCDMCLASSIFICATIONLIST;
```

*lpszVersion*

This is an application defined Unicode string that sets the version identifier of the classification list. This can be set to NULL if it has no version identifier.

*usCount*

Number of pointers to WFS\_CDM\_CLASSIFICATIONELEMENT structures returned in *lppClassificationElements*.

*lppClassificationElements*

Pointer to an array of pointers to WFS\_CDM\_CLASSIFICATIONELEMENT structures.

```
typedef struct wfs cdm classification element
{
    LPWSTR lpszSerialNumber;
    CHAR cCurrencyID[3];
    ULONG ulValue;
    USHORT usLevel;
    BOOL bUnfit;
} WFS_CDM_CLASSIFICATIONELEMENT, *LPWFSCDMCLASSIFICATIONELEMENT;
```

*lpszSerialNumber*

This Unicode string defines the serial number or a mask of serial numbers of one element with the defined currency and value. For a definition of the mask see Section 4.

*cCurrencyID*

The three character ISO format currency identifier [Ref. 2] of the element.

*ulValue*

The value of the element. This field can be zero to represent all values.

*usLevel*

Specifies the note level. Possible values are:

Value	Meaning
<a href="#">WFS_CDM_LEVEL_1</a>	The element specifies notes to be treated as level 1 notes.
<a href="#">WFS_CDM_LEVEL_2</a>	The element specifies notes to be treated as level 2 notes.
<a href="#">WFS_CDM_LEVEL_3</a>	The element specifies notes to be treated as level 3 notes.
<a href="#">WFS_CDM_LEVEL_4</a>	The element specifies notes to be treated as level 4 notes.

*bUnfit*

Specifies whether the item is to be treated as unfit for dispensing. Applies only where *usLevel* is [WFS\\_CDM\\_LEVEL\\_4](#).

Error Codes Only the generic error codes defined in [Ref. 1] can be generated by this command.

Comments None.

## 4.6. Execute Commands

### 4.16.1 WFS\_CMD\_CDM\_DENOMINATE

**Description** This command provides a denomination. A denomination specifies the number of items which are required from each cash unit in order to satisfy a given amount. The denomination depends upon the currency, the mix algorithm and any partial denomination supplied by the application.

This command can also be used to validate that any denomination supplied by the application can be dispensed.

If items of differing currencies are to be included in the same denomination then the currency field must be an array of three ASCII 0x20h characters, the amount must be zero and the mix number must be WFS\_CDM\_INDIVIDUAL. However, these restrictions do not apply if a single currency is combined with non-currency items, such as coupons.

If the *bCashBox* field of the WFS\_CDMCAPS structure returned by the WFS\_INF\_CDM\_CAPABILITIES command is TRUE then, if the entire denomination cannot be satisfied, a partial denomination will be returned with the remaining amount to be supplied from the teller's cash box.

This command can be used in four different ways:

1. In order to check that it is possible to dispense a given denomination. The input parameters to the command are currency and denomination, with a mix number of WFS\_CDM\_INDIVIDUAL and an amount of zero. If items of differing currencies are to be dispensed then the currency field should be an array of three ASCII 0x20h characters.
2. In order to validate that a given amount matches a given denomination and that it is possible to dispense the denomination. The input parameters to the command should be amount, currency and denomination, with a mix number of WFS\_CDM\_INDIVIDUAL.
3. In order to obtain a denomination of a given amount. The input parameters supplied should be amount, currency and mix number.
4. In order to complete a partial denomination of a given amount. In this case the input parameters to the command should be currency, amount, mix number and either a partially specified denomination or a minimum amount from the cash box. A completed denomination is returned. *ulCashBox* of the denomination structure may be updated as a result of this command.

**Input Param** LPWFSCDMDENOMINATE lpDenominate;

```
typedef struct _wfs_cdm_denominate
{
    USHORT          usTellerID;
    USHORT          usMixNumber;
    LPWFSCDMDENOMINATION lpDenomination;
} WFS_CDMDENOMINATE, *LPWFSCDMDENOMINATE;
```

*usTellerID*

Identification of teller. This field is ignored if the device is a Self-Service CDM.

*usMixNumber*

Mix algorithm or house mix table to be used.

*lpDenomination*

Pointer to a WFS\_CDMDENOMINATION structure, describing the contents of the denomination operation.

```
typedef struct _wfs_cdm_denomination
{
    CHAR          cCurrencyID[3];
    ULONG         ulAmount;
    USHORT       usCount;
    LPULONG       lpulValues;
    ULONG        ulCashBox;
} WFS_CDMDENOMINATION, *LPWFSCDMDENOMINATION;
```

*cCurrencyID*

Identification of currency in ISO format [Ref. 2]. Where the denomination contains multiple currencies this field should be set to three ASCII 0x20 characters.

*ulAmount*

The amount to be denominated or dispensed. Where the denomination contains multiple currencies this value is zero.

*usCount*

The size of the *lpulValues* list. This *usCount* is the same as the *usCount* returned from the last WFS\_INF\_CDM\_CASH\_UNIT\_INFO command or set by the last WFS\_CMD\_CDM\_END\_EXCHANGE command. If this value is not required because a mix algorithm is used then the *usCount* can be set to zero.

If the application passes in an invalid *usCount* the Service Provider should return a WFS\_ERR\_INVALID\_DATA return code.

*lpulValues*

Pointer to an array of ULONGs. This list specifies the number of items to take from each of the cash units. This list corresponds to the array of cash unit structures returned by the last WFS\_INF\_CDM\_CASH\_UNIT\_INFO command or set by the last WFS\_CMD\_CDM\_SET\_CASH\_UNIT\_INFO or WFS\_CMD\_CDM\_END\_EXCHANGE commands. The first value in the array is related to the cash structure with the index number 1.

This array contains a field for each possible cash unit. If a cash unit is not required in the denomination its corresponding field in this array should be set to zero.

If the application does not wish to specify a denomination, it should set the *lpulValues* pointer to NULL.

*ulCashBox*

Only applies to Teller CDM devices. Amount to be paid from the teller's cash box.

**Output Param** LPWFSCDMDENOMINATION lpDenomination;

For a description see the input structure.

Where mixed currencies are being denominated the *ulAmount* field in the returned denomination structure will be zero and the *cCurrencyID* field will be set to three ASCII 0x20 characters.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDCURRENCY	There are no cash units in the CDM of the currency specified in the <i>cCurrencyID</i> field of the input parameter.
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_CASHUNITERROR	There is a problem with a cash unit. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
WFS_ERR_CDM_INVALIDDENOMINATION	The <i>usMixNumber</i> is WFS_CDM_INDIVIDUAL and the sum of the values for <i>ulCashBox</i> and the items specified by <i>lpulValues</i> does not match the non-zero amount specified. This error code is not used when the amount specified is zero.
WFS_ERR_CDM_INVALIDMIXNUMBER	Unknown mix algorithm.
WFS_ERR_CDM_NOCURRENCYMIX	The cash units specified in the denomination were not all of the same currency.

# This document is not an official CEN publication

CWA 16926-64:2020 (E)

WFS_ERR_CDM_NOTDISPENSABLE	The amount is not dispensable by the CDM. <a href="#">This error code is also returned if the <i>usMixNumber</i> is specified as <code>WFS_CDM_INDIVIDUAL</code>, but a cash unit is specified in the <i>lpulValues</i> list which is not a dispensing cash unit, e.g., a <code>retract/reject</code> cash unit.</a>
WFS_ERR_CDM_TOOMANYITEMS	The request requires too many items to be dispensed.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state (see section <code>WFS_CMD_CDM_START_EXCHANGE</code> ).
WFS_ERR_CDM_NOCASHBOXPRESENT	Cash box amount needed, however teller is not assigned a cash box.
WFS_ERR_CDM_AMOUNTNOTINMIXTABLE	A mix table is being used to determine the denomination but the amount specified for the denomination is not in the mix table.

**Events** In addition to the generic event defined in [Ref. 1], the following events can be generated as a result of this command:

<u>Value</u>	<u>Meaning</u>
WFS_EXEE_CDM_CASHUNITERROR	An error occurred while attempting to denominate from the cash unit specified by the event.

**Comments** None.

## 4.26.2 WFS\_CMD\_CDM\_DISPENSE

**Description** This command performs the dispensing of items to the customer. The command provides the same functionality as the WFS\_CMD\_CDM\_DENOMINATE command plus the additional functionality of dispensing the items. If items of differing currencies are to be dispensed then the currency field must be an array of three ASCII 0x20h characters, the amount must be zero and the mix number must be WFS\_CDM\_INDIVIDUAL. However, these restrictions do not apply if a single currency is dispensed with non-currency items, such as coupons.

The WFS\_CMD\_CDM\_DISPENSE command can be used in the following ways:

1. The input parameters to the command are amount, currency and denomination. The mix number is WFS\_CDM\_INDIVIDUAL. In this case, the denomination is checked for validity and, if valid, is dispensed.
2. The input parameters are amount, currency and mix number. In this case the amount is denominated and, if this succeeds, the items are dispensed.
3. If the amount is zero, but the currency and the denomination are supplied with a mix number of WFS\_CDM\_INDIVIDUAL the denomination is checked for validity and, if valid, is dispensed.
4. The command will calculate a partial denomination of a given amount and dispense the complete denomination. In this case the input parameters to the command should be currency, amount, mix number and either a partially specified denomination or a minimum amount from the cash box. The cash box amount may be updated as a result of this command.

When more than one physical cash unit exists for a logical cash unit number, the device selects the actual physical cash unit to use in the dispense operation.

If the *bCashBox* field of the WFS\_CDM\_CAPABILITIES structure returned by the WFS\_INF\_CDM\_CAPABILITIES command is TRUE then, if the entire denomination cannot be satisfied, a partial denomination will be returned with the remaining amount to be supplied from the teller's cash box.

If the device is a Teller CDM, the input field *fwPosition* can be set to WFS\_CDM\_POSNULL. If this is the case the *usTellerID* is used to perform the dispense operation to the assigned teller position.

The field *bPresent* of the WFS\_CDM\_DISPENSE structure determines whether items are actually presented to the user as part of the dispense operation. If this field is set to TRUE then the items will be moved to the exit slot, if it is FALSE the items will be moved to an intermediate stacker. In the second case it will be necessary to use the WFS\_CMD\_CDM\_PRESENT command to present the items to the user. If *bPresent* is set to FALSE then the *fwPosition* field is ignored. If the CDM does not have an intermediate stacker then *bPresent* is ignored.

If *bPresent* is set to TRUE and a shutter exists, then it will be implicitly controlled during the present operation, even if the *bShutterControl* capability is set to FALSE. The shutter will be closed when the user removes the items or the items are retracted.

Note that a level 4 note can be dispensed, but is not necessarily presented to the customer. e.g. a note can be skewed, or can be unfit for dispensing.

**Input Param** LPWFS\_CDM\_DISPENSE lpDispense;

```
typedef struct _wfs_cdm_dispense
{
    USHORT          usTellerID;
    USHORT          usMixNumber;
    WORD            fwPosition;
    BOOL            bPresent;
    LPWFS_CDM_DENOMINATION lpDenomination;
} WFS_CDM_DISPENSE, *LPWFS_CDM_DISPENSE;
```

*usTellerID*

Identifies the teller. This field is ignored if the device is a Self-Service CDM.

*usMixNumber*

Mix algorithm or house mix table to be used to create a denomination of the supplied amount. If the value is WFS\_CDM\_INDIVIDUAL, the denomination supplied in the *lpDenomination* field is validated prior to the dispense operation. If it is found to be invalid no alternative denomination will be calculated.

*fwPosition*

Determines to which side the amount is dispensed. If the device is a Teller CDM this field is ignored and the output position associated with *usTellerID* is used. The value is specified by one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration information is used. This can be either position dependent or teller dependent.
WFS_CDM_POSLEFT	Present items to left side of device.
WFS_CDM_POSRIGHT	Present items to right side of device.
WFS_CDM_POSCENTER	Present items to center output position.
WFS_CDM_POSTOP	Present items to the top output position.
WFS_CDM_POSBOTTOM	Present items to the bottom output position.
WFS_CDM_POSFRONT	Present items to the front output position.
WFS_CDM_POSREAR	Present items to the rear output position.

*bPresent*

If this field is set to TRUE then the items will be moved to the exit slot, if it is FALSE the items will be moved to an intermediate stacker.

*lpDenomination*

Pointer to a WFSCDMDENOMINATION structure, describing the denominations used for the dispense operation. For the WFSCDMDENOMINATION structure specification see the definition of the command WFS\_CMD\_CDM\_DENOMINATE.

**Output Param** LPWFSCDMDENOMINATION *lpDenomination*;

For the WFSCDMDENOMINATION structure specification see the definition of the command WFS\_CMD\_CDM\_DENOMINATE.

The values in this structure report the amount dispensed and the number of items dispensed from each cash unit.

Where mixed currencies are being dispensed the *ulAmount* field in the returned denomination structure will be zero and the *cCurrencyID* field will be set to three ASCII 0x20 characters.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDCURRENCY	There are no cash units in the CDM of the currency specified in the <i>cCurrencyID</i> field of the input parameter.
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_CASHUNITERROR	There is a problem with a cash unit. A WFS_EXEE_CDM_CASHUNITERROR execute event is posted with the details.
WFS_ERR_CDM_INVALIDDENOMINATION	The sum of the values for cash box and cash units was greater than the amount specified.
WFS_ERR_CDM_INVALIDMIXNUMBER	Mix algorithm is not known.
WFS_ERR_CDM_NOCURRENCYMIX	Cash units containing two or more different currencies were selected.
WFS_ERR_CDM_NOTDISPENSABLE	The amount is not dispensable by the CDM. <a href="#">This error code is also returned if the <i>usMixNumber</i> is specified as WFS_CDM_INDIVIDUAL, but a cash unit is specified in the <i>lpulValues</i> list which is not a dispensing cash unit, e.g., a retract/reject cash unit.</a>

WFS_ERR_CDM_TOOMANYITEMS	The request would require too many items to be dispensed. This error is also generated if <i>bPresent</i> is FALSE and sub-dispensing is required.
WFS_ERR_CDM_UNSUPPOSITION	The specified output position is not supported.
WFS_ERR_CDM_SAFEDOOROPEN	The safe door is open. This device requires the safe door to be closed in order to perform this operation.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_NOCASHBOXPRESENT	Cash box amount needed, however teller is not assigned a cash box.
WFS_ERR_CDM_AMOUNTNOTINMIXTABLE	A mix table is being used to determine the denomination but the amount specified for the denomination is not in the mix table.
WFS_ERR_CDM_ITEMSNOTTAKEN	Items have not been taken during a sub-dispense operation. This error occurs if a hardware timeout expires.
WFS_ERR_CDM_ITEMSLEFT	Items have been left in the transport or exit slot as a result of a prior dispense, present or recycler cash-in operation.
WFS_ERR_CDM_SHUTTEROPEN	The Service Provider cannot dispense items with an open output shutter.

If the *bPresent* field of the WFS\_CDM\_DISPENSE structure is TRUE, the following error codes can also be returned:

Value	Meaning
WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter is not open or did not open when it should have. No items presented.
WFS_ERR_CDM_PRERRORNOITEMS	An error occurred while items were being moved to the exit slot - no items are presented.
WFS_ERR_CDM_PRERRORITEMS	An error occurred while items were being moved to the exit slot - at least some of the items have been presented.
WFS_ERR_CDM_PRERRORUNKNOWN	An error occurred while items were being moved to the exit slot - the position of the items is unknown. Intervention may be required to reconcile the cash amount totals.

**Events**

In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.
WFS_EXEE_CDM_DELAYEDDISPENSE	The dispense operation will be delayed by the specified time.
WFS_EXEE_CDM_STARTDISPENSE	Fired when the delayed dispense operation starts.
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error during a dispense operation.
WFS_SRVE_CDM_ITEMSTAKEN	The user has removed the items presented. If the dispense is not a sub-dispense this event occurs after the completion of the dispense command.
WFS_EXEE_CDM_PARTIALDISPENSE	Indicates that the dispense operation is to be divided into several sub-dispense operations.
WFS_EXEE_CDM_SUBDISPENSEOK	A sub-dispense operation was completed successfully.

# This document is not an official CEN publication

CWA 16926-64:2020 (E)

WFS_EXEE_CDM_INCOMPLETEDISPENSE	It has not been possible to dispense the entire denomination but part of the <u>requested</u> denomination <u>has been dispensed, whether is</u> on the intermediate stacker or in customer access. The <del>return</del> error code will be WFS_ERR_CDM_NOTDISPENSABLE.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
WFS_EXEE_CDM_INPUT_P6	Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.
WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	The shutter status has changed.

**Comments**      None.

### 4.36.3 WFS\_CMD\_CDM\_COUNT

**Description** This command empties the specified physical cash unit(s). All items dispensed from the cash unit are counted and moved to the specified output location.

The number of items counted can be different from the number of items dispensed in cases where the CDM has the ability to detect this information. If the CDM cannot differentiate between what is dispensed and what is counted then *ulDispensed* will be the same as *ulCounted*.

Upon successful WFS\_CMD\_CDM\_COUNT command execution the physical cash unit(s) *ulCount* field within the WFSCDMPHCU structure is reset.

**Input Param** LPWFSCDMPHYSICALCU lpPhysicalCU;

```
typedef struct _wfs_cdm_physical_cu
{
    BOOL                bEmptyAll;
    WORD                fwPosition;
    LPSTR               lpPhysicalPositionName;
} WFSCDMPHYSICALCU, *LPWFSCDMPHYSICALCU;
```

*bEmptyAll*

Specifies whether all physical cash units are to be emptied. If this value is TRUE then *lpPhysicalPositionName* is ignored.

*fwPosition*

Specifies the location to which items should be moved. The value is set to one of the following values:

Value	Meaning
WFS_CDM_POSNULL	Output location is determined by Service Provider.
WFS_CDM_POSLEFT	Present items to left side of device.
WFS_CDM_POSRIGHT	Present items to right side of device.
WFS_CDM_POSCENTER	Present items to center output position.
WFS_CDM_POSTOP	Present items to the top output position.
WFS_CDM_POSBOTTOM	Present items to the bottom output position.
WFS_CDM_POSFRONT	Present items to the front output position.
WFS_CDM_POSREAR	Present items to the rear output position.
WFS_CDM_POSREJECT	Reject bin is used as output location.

*lpPhysicalPositionName*

Specifies which physical cash unit to empty and count. This name is the same as the *lpPhysicalPositionName* in the WFSCDMPHCU structure.

**Output Param** LPWFSCDMCOUNT lpCount;

```
typedef struct _wfs_cdm_count
{
    USHORT                usNumPhysicalCUs;
    LPWFSCDMCOUNTEDPHYSU *lppCountedPhysCUs;
} WFSCDMCOUNT, *LPWFSCDMCOUNT;
```

*usNumPhysicalCUs*

This value indicates the number of physical cash unit structures (WFSCDMCOUNTEDPHYSU) returned. This value will always be greater than zero.

*lppCountedPhysCUs*

Pointer to an array of pointers to WFSCDMCOUNTEDPHYSU structures:

```
typedef struct _wfs_cdm_counted_phys_cu
{
    LPSTR                lpPhysicalPositionName;
    CHAR                 cUnitId[5];
    ULONG                ulDispensed;
    ULONG                ulCounted;
    USHORT               usPStatus;
} WFSCDMCOUNTEDPHYSU, *LPWFSCDMCOUNTEDPHYSU;
```

*lpPhysicalPositionName*

Specifies which physical cash unit was emptied and counted. This name is that defined in the *lpPhysicalPositionName* field of the WFSCDMPHCU structure.

*cUnitId*

Cash unit ID. This is the identifier defined in the *cUnitID* field of the WFSCDMPHCU structure.

*ulDispensed*

The number of items that were dispensed during the emptying of the cash unit.

*ulCounted*

The number of items that were counted during the emptying of the cash unit.

*usPStatus*

Supplies the status of the physical cash unit as one of the following values:

Value	Meaning
WFS_CDM_STATCUOK	The cash unit is in a good state.
WFS_CDM_STATCUFULL	The cash unit is full.
WFS_CDM_STATCUHIGH	The cash unit is almost full (reached or exceeded the threshold defined by WFSCDMCASHUNIT. <i>ulMaximum</i> ).
WFS_CDM_STATCULOW	The cash unit is almost empty.
WFS_CDM_STATCUEMPTY	The cash unit is empty.
WFS_CDM_STATCUINOP	The cash unit is inoperative.
WFS_CDM_STATCUMISSING	The cash unit is missing.
WFS_CDM_STATCUNOVAL	The values of the specified cash unit are not available.
WFS_CDM_STATCUNOREF	There is no reference value available for the notes in this cash unit.
WFS_CDM_STATCUMANIP	The cash unit has been inserted (including removal followed by a reinsertion) when the device was not in the exchange state. This cash unit cannot be dispensed from.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A cash unit caused a problem. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_SAFEDOOROPEN	The safe door is open. This device requires the safe door to be closed in order to perform this operation.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error during the count operation.
WFS_SRVE_CDM_ITEMSTAKEN	The items emptied to the output location have been removed by the user.
WFS_SRVE_CDM_ITEMSPRESENTED	Items have been emptied to the output location. These items may need to be removed from the output location before the operation can continue.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
WFS_EXEE_CDM_INPUT_P6	Level 2 and/or level 3 notes have been detected.

WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.
WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	The shutter status has changed.

**Comments**      None.

#### 4.46.4 WFS\_CMD\_CDM\_PRESENT

**Description** This command will move items to the exit position for removal by the user. If a shutter exists, then it will be implicitly controlled during the present operation, even if the *bShutterControl* capability is set to FALSE. The shutter will be closed when the user removes the items or the items are retracted. If *lpfwPosition* points to WFS\_CMD\_POSNULL the position set in the WFS\_CMD\_CDM\_DISPENSE command which caused these items to be dispensed will be used.

When this command successfully completes the items are in customer access.

**Input Param** LPWORD *lpfwPosition*;

*lpfwPosition*

Pointer to the output position where the amount is to be presented. The value is set to one of the following values:

Value	Meaning
WFS_CMD_POSNULL	The default configuration information is used. This can be either position dependent or teller dependent.
WFS_CMD_POSLEFT	Present items to left side of device.
WFS_CMD_POSRIGHT	Present items to right side of device.
WFS_CMD_POSCENTER	Present items to center output position.
WFS_CMD_POSTOP	Present items to the top output position.
WFS_CMD_POSBOTTOM	Present items to the bottom output position.
WFS_CMD_POSFRONT	Present items to the front output position.
WFS_CMD_POSREAR	Present items to the rear output position.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter did not open when it should have. No items presented.
WFS_ERR_CDM_SHUTTEROPEN	The shutter is open when it should be closed. No items presented.
WFS_ERR_CDM_NOITEMS	There are no items on the stacker.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_PRERRORNOITEMS	There was an error during the present operation - no items were presented.
WFS_ERR_CDM_PRERRORITEMS	There was an error during the present operation - at least some of the items were presented.
WFS_ERR_CDM_PRERRORUNKNOWN	There was an error during the present operation - the position of the items is unknown. Intervention may be required to reconcile the cash amount totals.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.
WFS_SRVE_CDM_ITEMSTAKEN	The items have been removed by the user. This event is generated after the completion of the present operation.
WFS_EXEE_CDM_INPUT_P6	Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.

WFS\_SRVE\_CDM\_SHUTTERSTATUSCHANGED

The shutter status has changed.

**Comments**      None.

#### 4.56.5 WFS\_CMD\_CDM\_REJECT

---

**Description** This command will move items from the intermediate stacker and transport them to a reject cash unit (i.e. a cash unit with *usType* WFS\_CDM\_TYPEREJECTCASSETTE). The WFS\_CDM\_CASHUNIT.*ulCount* field of the reject cash unit is incremented by the number of items that were thought to be present at the time of the reject or the number counted by the device during the reject. Note that the reject bin count is unreliable.

**Input Param** None.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A reject cash unit caused a problem. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
WFS_ERR_CDM_NOITEMS	There were no items on the stacker.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A reject bin threshold condition has been reached.
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error during the reject operation.
WFS_EXEE_CDM_INPUT_P6	Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.

**Comments** None.

## 4.66.6 WFS\_CMD\_CDM\_RETRACT

**Description** This command will retract items which may have been in customer access- [from an output position or from internal areas within the CDM](#). Retracted items will be moved to either a retract cash unit, a reject cash unit, item cash units, the transport or the intermediate stacker. After the items are retracted the shutter is closed automatically, even if the *bShutterControl* capability is set to FALSE.

If items are moved to a retract cash unit (i.e. a cash unit with *usType* WFS\_CDM\_TYPERETRACTCASSETTE), then the WFS\_CDM\_CASHUNIT.*ulCount* field of the retract cash unit must be incremented by 1 to specify the number of retracts. If items are moved to any other cash unit (e.g. a cash unit with *usType* WFS\_CDM\_TYPEREJECTCASSETTE) then the WFS\_CDM\_CASHUNIT.*ulCount* field of the cash unit must be incremented by the number of items that were thought to be present at the time the WFS\_CMD\_CDM\_RETRACT command was issued or the number counted by the device during the retract. Note that reject bin counts are unreliable.

[For cash recycler implementations with a note handling standard it is recommended to use the WFS\\_CMD\\_CIM\\_RETRACT command instead of this command.](#)

**Input Param** LPWFS\_CDM\_RETRACT lpRetract;

```
typedef struct _wfs_cdm_retract
{
    WORD                fwOutputPosition;
    USHORT              usRetractArea;
    USHORT              usIndex;
} WFS_CDM_RETRACT, *LPWFS_CDM_RETRACT;
```

### *fwOutputPosition*

Specifies the output position from which to retract the items. The value is set to one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration information should be used.
WFS_CDM_POSLEFT	Retract items from the left output position.
WFS_CDM_POSRIGHT	Retract items from the right output position.
WFS_CDM_POSCENTER	Retract items from the center output position.
WFS_CDM_POSTOP	Retract items from the top output position.
WFS_CDM_POSBOTTOM	Retract items from the bottom output position.
WFS_CDM_POSFRONT	Retract items from the front output position.
WFS_CDM_POSREAR	Retract items from the rear output position.

### *usRetractArea*

This value specifies the area to which the items are to be retracted. Possible values are:

Value	Meaning
WFS_CDM_RA_RETRACT	Retract the items to a retract cash unit.
WFS_CDM_RA_TRANSPORT	Retract the items to the transport.
WFS_CDM_RA_STACKER	Retract the items to the intermediate stacker area.
WFS_CDM_RA_REJECT	Retract the items to a reject cash unit.
WFS_CDM_RA_ITEMCASSETTE	Retract the items to the item cassettes, i.e. cassettes that can be dispensed from.

*usIndex*

If *usRetractArea* is set to WFS\_CDM\_RA\_RETRACT this field defines the position inside the retract cash units into which the cash is to be retracted. *usIndex* starts with a value of one (1) for the first retract position and increments by one for each subsequent position. If there are several logical retract cash units (of type WFS\_CDM\_TYPERETRACTCASSETTE in command WFS\_INF\_CDM\_CASH\_UNIT\_INFO), *usIndex* would be incremented from the first position of the first retract cash unit to the last position of the last retract cash unit defined in WFS\_CDM\_CUINFO. The maximum value of *usIndex* is the sum of WFS\_CDM\_CASHUNIT.ulMaximum of each retract cash unit. If *usRetractArea* is not set to WFS\_CDM\_RA\_RETRACT the value of this field is ignored.

**Output Param** LPWFSCDMITEMNUMBERLIST lpItemNumberList;

Pointer to a WFSCDMITEMNUMBERLIST structure. This parameter will provide details about the items moved with this command or this parameter will be NULL if the device is not capable of identifying the moved items.

```
typedef struct _wfs_cdm_item_number_list
{
    USHORT                usNumOfItemNumbers;
    LPWFSCDMITEMNUMBER   *lppItemNumber;
} WFSCDMITEMNUMBERLIST, *LPWFSCDMITEMNUMBERLIST;
```

*usNumOfItemNumbers*

Number of item types moved during this command, i.e. the number of *lppItemNumber* list elements.

*lppItemNumber*

List of item types moved to the *usRetractArea* during this command. A pointer to an array of pointers to WFSCDMITEMNUMBER structures:

```
typedef struct _wfs_cdm_item_number
{
    CHAR                cCurrencyID[3];
    ULONG               ulValues;
    USHORT              usRelease;
    ULONG               ulCount;
    USHORT              usNumber;
} WFSCDMITEMNUMBER, *LPWFSCDMITEMNUMBER;
```

*cCurrencyID*

A three character array storing the ISO format [Ref. 2] Currency ID; or three ASCII 0x20h characters if the currency of the item is not known.

*ulValues*

The value of a single item expressed in minimum dispense units; or a zero value if the value of the item is not known.

*usRelease*

The release of the item. The higher this number is, the newer the release. Zero means that there is only one release or the release is not known. This value has not been standardized and therefore a release number of the same item will not necessarily have the same value in different systems.

*ulCount*

The count of items of the same type moved to the same destination during the execution of this command.

*usNumber*

The logical number of the cash unit which received items during the execution of this command. This value will be zero if items were moved to the *usRetractArea* WFS\_CDM\_RA\_TRANSPORT or WFS\_CDM\_RA\_STACKER.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A <b>retract</b> cash unit caused a problem. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.

WFS_ERR_CDM_NOITEMS	There were no items to retract.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_SHUTTERNOTCLOSED	The shutter failed to close.
WFS_ERR_CDM_ITEMSTAKEN	Items were present at the output position at the start of the operation, but were removed before the operation was complete - some or all of the items were not retracted.
WFS_ERR_CDM_INVALIDRETRACTPOSITION	The <i>usIndex</i> is not supported.
WFS_ERR_CDM_NOTRETRACTAREA	The retract area specified in <i>usRetractArea</i> is not supported.
WFS_ERR_CDM_UNSUPPOSITION	The output position specified is not supported.
WFS_ERR_CDM_POSITION_NOT_EMPTY	The retract area specified in <i>usRetractArea</i> is not empty so the retract operation is not possible.
WFS_ERR_CDM_INCOMPLETERETRACT	Some or all of the items were not retracted for a reason not covered by other error codes. The detail will be reported with the WFS_EXEE_CDM_INCOMPLETERETRACT event.

**Events**

In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in a retract or reject cash unit.
WFS_EXEE_CDM_CASHUNITERROR	An error occurred while attempting to retract to a <a href="#">retract, reject or item</a> cash unit.
WFS_SRVE_CDM_ITEMSTAKEN	The items presented have been removed by the user.
WFS_EXEE_CDM_INPUT_P6	Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.
WFS_EXEE_CDM_INCOMPLETERETRACT	The retract command has completed with an error and not all of the items have been retracted. The detail of what was actually retracted will be reported with the event data.
WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	The shutter status has changed.

**Comments**      None.

#### 4.76.7 WFS\_CMD\_CDM\_OPEN\_SHUTTER

---

**Description** This command opens the shutter.

**Input Param** LPWORD lpfwPosition;

*lpfwPosition*

Pointer to the output position where the shutter is to be opened. If the application does not need to specify a shutter, this field can be set to NULL or its contents to WFS\_CDM\_POSNULL. The position can be set to one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration information should be used.
WFS_CDM_POSLEFT	Open the shutter at the left output position.
WFS_CDM_POSRIGHT	Open the shutter at the right output position.
WFS_CDM_POSCENTER	Open the shutter at the center output position.
WFS_CDM_POSTOP	Open the shutter at the top output position.
WFS_CDM_POSBOTTOM	Open the shutter at the bottom output position.
WFS_CDM_POSFRONT	Open the shutter at the front output position.
WFS_CDM_POSREAR	Open the shutter at the rear output position.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter failed to open.
WFS_ERR_CDM_SHUTTEROPEN	The shutter was already open.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	The shutter status has changed.

**Comments** None.

#### 4.86.8 WFS\_CMD\_CDM\_CLOSE\_SHUTTER

---

**Description** This command closes the shutter.

**Input Param** LPWORD *lpfwPosition*;

*lpfwPosition*

Pointer to the output position where the shutter is to be closed. If the application does not need to specify a shutter, this field can be set to NULL or its contents to WFS\_CDM\_POSNULL. The position can be set to one of the following values:

Value	Meaning
WFS_CDM_POSNULL	The default configuration information should be used.
WFS_CDM_POSLEFT	Close the shutter at the left output position.
WFS_CDM_POSRIGHT	Close the shutter at the right output position.
WFS_CDM_POSCENTER	Close the shutter at the center output position.
WFS_CDM_POSTOP	Close the shutter at the top output position.
WFS_CDM_POSBOTTOM	Close the shutter at the bottom output position.
WFS_CDM_POSFRONT	Close the shutter at the front output position.
WFS_CDM_POSREAR	Close the shutter at the rear output position.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_SHUTTERCLOSED	The shutter was already closed.
WFS_ERR_CDM_SHUTTERNOTCLOSED	The shutter failed to close.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	The shutter status has changed.

**Comments** None.

#### 4.96.9 WFS\_CMD\_CDM\_SET\_TELLER\_INFO

---

**Description** This command allows the application to set the teller position and initialize counts for each currency assigned to the teller. The values set by this command are persistent. This command only applies to Teller CDMs.

**Input Param** LPWFSCDMTELLERUPDATE lpTellerUpdate;

```
typedef struct _wfs_cdm_teller_update
{
    USHORT usAction;
    LPWFSCDMTELLERDETAILS lpTellerDetails;
} WFS_CDM_TELLER_UPDATE, *LPWFSCDMTELLERUPDATE;
```

*usAction*

The action to be performed specified as one of the following values:

Value	Meaning
WFS_CDM_CREATE_TELLER	A teller is to be added.
WFS_CDM_MODIFY_TELLER	Information about an existing teller is to be modified.
WFS_CDM_DELETE_TELLER	A teller is to be removed.

*lpTellerDetails*

For a specification of the structure WFS\_CDM\_TELLER\_DETAILS please refer to the WFS\_INF\_CDM\_TELLER\_INFO command.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDCURRENCY	The specified currency is not currently available.
WFS_ERR_CDM_INVALIDTELLERID	The teller ID is invalid. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_EXCHANGEACTIVE	The target teller is currently in the middle of an exchange operation.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_SRVE_CDM_TELLERINFOCHANGED	Teller information has been created, modified or deleted.

**Comments** None.

**4.106.10** WFS\_CMD\_CDM\_SET\_CASH\_UNIT\_INFO

**Description** This command is used to adjust information regarding the status and contents of the cash units present in the CDM.

This command generates the service event WFS\_SRVE\_CDM\_CASHUNITINFOCHANGED to inform applications that the information for a cash unit has been changed.

This command can only be used to change software counters, thresholds and the application lock. All other fields in the input structure will be ignored.

The following fields of the WFSCDMCASHUNIT structure may be updated by this command:

- ulInitialCount*
- ulCount*
- ulRejectCount*
- ulMinimum*
- ulMaximum*
- bAppLock*
- ulDispensedCount*
- ulPresentedCount*
- ulRetractedCount*

As may the following fields of the WFSCDMPHCU structure:

- ulInitialCount*
- ulCount*
- ulRejectCount*
- ulDispensedCount*
- ulPresentedCount*
- ulRetractedCount*

Any other changes must be performed via an exchange operation.

If the fields *ulCount* and *ulRejectCount* of *lppPhysical* are set to zero by this command, the application is indicating that it does not wish counts to be maintained for the physical cash units. Counts on the logical cash units will still be maintained and can be used by the application. If the physical counts are set by this command then the logical count will be the sum of the physical counts and any value sent as a logical count will be ignored.

The values set by this command are persistent.

**Input Param** LPWFSCDMCUINFO lpCUInfo;

The WFSCDMCUINFO structure is specified in the documentation of the WFS\_INF\_CDM\_CASH\_UNIT\_INFO command. All cash units should be included not just the cash units whose values are to be changed.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_INVALIDCASHUNIT	Invalid cash unit.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_CASHUNITERROR	A problem occurred with a cash unit. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated as a result of this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.

# This document is not an official CEN publication

CWA 16926-64:2020 (E)

WFS\_SRVE\_CDM\_CASHUNITINFOCHANGED

A cash unit was updated as a result of this command.

WFS\_EXEE\_CDM\_CASHUNITERROR

An error occurred while accessing a cash unit.

**Comments**      None.

#### 4.116.11 WFS\_CMD\_CDM\_START\_EXCHANGE

**Description** This command puts the CDM in an exchange state, i.e. a state in which cash units can be emptied, replenished, removed or replaced. Other than the updates which can be made via the WFS\_CMD\_CDM\_SET\_CASH\_UNIT\_INFO command all changes to a cash unit must take place while the cash unit is in an exchange state.

This command returns current cash unit information in the form described in the documentation of the WFS\_INF\_CDM\_CASH\_UNIT\_INFO command. This command will also initiate any physical processes which may be necessary to make the cash units accessible. Before using this command an application should first have ensured that it has exclusive control of the CDM.

This command may return WFS\_SUCCESS even if WFS\_EXEE\_CDM\_CASHUNITERROR events are generated. If this command returns WFS\_SUCCESS or WFS\_ERR\_CDM\_EXCHANGEACTIVE the CDM is in an exchange state.

While in an exchange state the CDM will process all WFS requests but exclude WFS[Async]Execute commands, except those listed below:

WFS\_CMD\_CDM\_END\_EXCHANGE

WFS\_CMD\_CDM\_SET\_MIX\_TABLE

WFS\_CMD\_CDM\_RESET

Any other WFS[Async]Execute commands will result in the error WFS\_ERR\_CDM\_EXCHANGEACTIVE being generated.

If an error is returned by this command, the WFS\_INF\_CDM\_CASH\_UNIT\_INFO command should be used to determine cash unit information.

If the CDM is part of a compound device together with a CIM (i.e. a cash recycler), exchange operations can either be performed separately on each interface to the compound device, or the entire exchange operation can be done through the CIM interface.

##### **Exchange via CDM and CIM interfaces**

If the exchange is performed separately via the CDM and CIM interfaces then these operations cannot be performed simultaneously. An exchange state must therefore be initiated on each interface in the following sequence:

CDM

(Lock)  
WFS\_CMD\_CDM\_START\_EXCHANGE  
...exchange action...  
WFS\_CMD\_CDM\_END\_EXCHANGE  
(Unlock)

CIM

(Lock)  
WFS\_CMD\_CIM\_START\_EXCHANGE  
...exchange action...  
WFS\_CMD\_CIM\_END\_EXCHANGE  
(Unlock)

In the case of a recycler, the cash-in cash unit counts are set via the CIM interface and the cash-out cash unit counts are set via the CDM interface. Recycling cash units can be set via either interface. However, if the device has recycle units of multiple currencies and/or denominations (or multiple note identifiers associated with the same denomination) then the CIM interface should be used for exchange operations which affect these units. Those fields which are not common to both the CDM and CIM cash units are left unchanged when an exchange (or WFS\_CMD\_XXX\_SET\_CASH\_UNIT\_INFO) is executed on the other interface. For example if the CDM is used to set the current counts then the CIM *lpNoteNumberList* structure is not changed even if the data becomes inconsistent.

##### **Exchange via the CIM Interface**

All cash unit info fields exposed through the CDM interface are also exposed through the CIM interface, so the entire exchange operation for a recycling device can be achieved through the CIM interface.

**Input Param** LPWFSCDMSTARTEX lpStartEx;

```
typedef struct _wfs_cdm_start_ex
{
    WORD                fwExchangeType;
    USHORT              usTellerID;
    USHORT              usCount;
    LPUSHORT            lpusCUNumList;
} WFS_CDMSTARTEX, *LPWFSCDMSTARTEX;
```

*fwExchangeType*

Specifies the type of cash unit exchange operation. This field should be set to one of the following values:

Value	Meaning
WFS_CDM_EXBYHAND	The cash units will be replenished manually either by filling or emptying the cash unit by hand or by replacing the cash unit.
WFS_CDM_EXTOCASSETTES	Items will be moved from the replenishment container to the bill cash units.

*usTellerID*

Identifies the teller. If the device is a Self-Service CDM this field is ignored.

*usCount*

Number of cash units to be exchanged. This is also the size of the array contained in the *lpusCUNumList* field.

*lpusCUNumList*

Pointer to an array of unsigned shorts containing the logical numbers of the cash units to be exchanged. If an invalid logical number is contained in this list, the command will fail with a WFS\_ERR\_CDM\_CASHUNITERROR error.

**Output Param** LPWFSCDMCUINFO lpCUInfo;

The WFS\_CDMCUINFO structure is specified in the documentation of the WFS\_INF\_CDM\_CASH\_UNIT\_INFO command. This is the complete list of cash units not just the cash units that are to be changed.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDTELLERID	Invalid teller ID. This error will never be generated by a Self-Service CDM.
WFS_ERR_CDM_CASHUNITERROR	An error occurred with a cash unit while performing the exchange operation. A WFS_EXEE_CDM_CASHUNITERROR event will be posted with the details.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is already in an exchange state.

**Events** In addition to the generic events defined in [Ref. 1] the following events can be generated by this command:

Value	Meaning
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
WFS_EXEE_CDM_INPUT_P6	Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.

**Comments** None.

**4.126.12 WFS\_CMD\_CDM\_END\_EXCHANGE**

**Description** This command will end the exchange state. If any physical action took place as a result of the WFS\_CMD\_CDM\_START\_EXCHANGE command then this command will cause the cash units to be returned to their normal physical state. Any necessary device testing will also be initiated. The application can also use this command to update cash unit information in the form described in the documentation of the WFS\_INF\_CDM\_CASH\_UNIT\_INFO command.

When *lpCUInfo* is not NULL the input parameters to this command may be ignored if the Service Provider can obtain cash unit information from self-configuring cash units.

If the fields *ulCount* and *ulRejectCount* of *lppPhysical* are set to zero by this command, the application is indicating that it does not wish counts to be maintained for the physical cash units. Counts on the logical cash units will still be maintained and can be used by the application. If the physical counts are set by this command then the logical count will be the sum of the physical counts and any value sent as a logical count will be ignored.

If an error occurs during the execution of this command, the application must issue WFS\_INF\_CDM\_CASH\_UNIT\_INFO to determine the cash unit information.

A WFS\_EXEE\_CDM\_CASHUNITERROR event will be sent for any logical cash unit which cannot be successfully updated. If no cash units could be updated then a WFS\_ERR\_CDM\_CASHUNITERROR code will be returned and WFS\_EXEE\_CDM\_CASHUNITERROR events generated for every logical cash unit that could not be updated.

Even if this command does not return WFS\_SUCCESS the exchange state has ended.

The values set by this command are persistent.

**Input Param** LPWFSCDMCUINFO *lpCUInfo*;

The WFS\_CDMCUINFO structure is specified in the documentation for the WFS\_INF\_CDM\_CASH\_UNIT\_INFO command. This pointer can be NULL if the cash unit information has not changed. If this parameter is not NULL then it must contain the complete list of cash unit structures, not just the ones that have changed. If this parameter is NULL then any cash unit in a manipulated state (i.e. *usPStatus* value of WFS\_CDM\_STATCUMANIP) will remain in this state after the command completes.

The *usStatus* and *usPStatus* values passed in the cash unit structures included within the *lpCUInfo* parameter are ignored and the actual status of the cash units is determined when this command is executed. When *lpCUInfo* is not NULL and this command is successfully executed cash units will no longer be in a manipulated state (i.e. *usPStatus* will no longer be WFS\_CDM\_STATCUMANIP).

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A cash unit problem occurred that meant no cash units could be updated. One or more WFS_EXEE_CDM_CASHUNITERROR events will be sent with the details.
WFS_ERR_CDM_NOEXCHANGEACTIVE	There is no exchange active.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error.
WFS_SRVE_CDM_CASHUNITINFOCHANGED	A cash unit was changed.
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.

# This document is not an official CEN publication

CWA 16926-64:2020 (E)

WFS\_EXEE\_CDM\_INPUT\_P6

Level 2 and/or level 3 notes have been detected.

WFS\_EXEE\_CDM\_INFO\_AVAILABLE

Information is available for items being processed by this operation.

**Comments**      None.

**4.136.13** WFS\_CMD\_CDM\_OPEN\_SAFE\_DOOR

---

**Description** This command unlocks the safe door or starts the time delay count down prior to unlocking the safe door, if the device supports it. The command completes when the door is unlocked or the timer has started.

**Input Param** None.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

**Events** Only the generic events defined in [Ref. 1] can be generated by this command.

**Comments** None.

**4.146.14 WFS\_CMD\_CDM\_CALIBRATE\_CASH\_UNIT**

---

**Description** This command will cause a vendor dependent sequence of hardware events which will calibrate one or more physical cash units associated with a logical cash unit. This is necessary if a new type of bank note is put into the cash unit as the command enables the CDM to obtain the measures of the new bank notes.

If more than one physical cash unit is associated with the cash unit, it is up to the Service Provider to determine whether all the physical cash units need to be calibrated or if it is sufficient to calibrate for one physical unit and load the data into the others.

This command cannot be used to calibrate cash units which have been locked by the application. A WFS\_ERR\_CDM\_CASHUNITERROR code will be returned and a WFS\_EXEE\_CDM\_CASHUNITERROR event generated.

**Input Param** LPWFSCDMCALIBRATE lpCalibrateIn;

```
typedef struct _wfs_cdm_calibrate
{
    USHORT          usNumber;
    USHORT          usNumOfBills;
    LPWFSCDMITEMPOSITION *lpPosition;
} WFS_CDMCALIBRATE, *LPWFSCDMCALIBRATE;
```

*usNumber*  
The logical number of the cash unit.

*usNumOfBills*  
The number of bills to be dispensed during the calibration process.

*lpPosition*  
Specifies where the dispensed items should be moved to. For a description of the WFS\_CDMITEMPOSITION structure see section WFS\_CMD\_CDM\_RESET.

[This parameter is a pointer to a pointer to WFS\\_CDMITEMPOSITION structure.](#)

**Output Param** LPWFSCDMCALIBRATE lpCalibrateOut;

The WFS\_CDMCALIBRATE structure is defined in the Input Param section.

*usNumber*  
The logical number of cash unit which has been calibrated.

*usNumOfBills*  
Number of items that were actually dispensed during the calibration process. This value may be different from that passed in using the input structure if the cash dispenser always dispenses a default number of bills. When bills are presented to an output position this is the count of notes presented to the output position, any other notes rejected during the calibration process are not included in this count as they will be accounted for within the cash unit counts.

*lpPosition*  
Specifies where the items were moved to during the calibration process.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A cash unit caused an error. A WFS_EXEE_CDM_CASHUNITERROR event will be sent with the details.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not valid.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_INVALIDCASHUNIT	The cash unit number specified is not valid.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.

WFS\_SRVE\_CDM\_CASHUNITINFOCHANGED

A cash unit was changed.

WFS\_EXEE\_CDM\_CASHUNITERROR

A cash unit caused an error.

WFS\_SRVE\_CDM\_ITEMSTAKEN

The items were removed.

WFS\_EXEE\_CDM\_NOTEERROR

An item detection error has occurred.

WFS\_EXEE\_CDM\_INPUT\_P6

Level 2 and/or level 3 notes have been detected.

WFS\_EXEE\_CDM\_INFO\_AVAILABLE

Information is available for items being processed by this operation.

**Comments**      None.

**4.156.15** WFS\_CMD\_CDM\_SET\_MIX\_TABLE

---

**Description** This command is used to set up the mix table specified by the mix number. Mix tables are persistent and are available to all applications in the system. An amount can be specified as different denominations within the mix table. If the amount is specified more than once the Service Provider will attempt to denominate or dispense the first amount in the table. If this does not succeed (e.g. because of a cash unit failure) the Service Provider will attempt to denominate or dispense the next amount in the table. The Service Provider can only dispense amounts which are explicitly mentioned in the mix table.

If a mix number passed in already exists then the information is overwritten with the new information.

**Input Param** LPWFSCDMMIXTABLE lpMixTable;

The structure WFSCDMMIXTABLE is defined in the documentation of the command WFS\_INF\_CDM\_MIX\_TABLE.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALIDMIXNUMBER	The supplied <i>usMixNumber</i> is reserved for a predefined mix algorithm.
WFS_ERR_CDM_INVALIDMIXTABLE	The contents of at least one of the defined rows of the mix table is incorrect.

**Events** Only the generic events defined in [Ref. 1] can be generated by this command.

**Comments** None.

## 4.166.16 WFS\_CMD\_CDM\_RESET

**Description** This command is used by the application to perform a hardware reset which will attempt to return the CDM device to a known good state. This command does not over-ride a lock obtained through WFS[Async]Lock on another application or service handle.

The device will attempt to move any items found anywhere within the device to the position specified within the *lpResetIn* parameter. This may not always be possible because of hardware problems.

If items are found inside the device the WFS\_SRVE\_CDM\_MEDIADETECTED event will be generated and will inform the application where the items were actually moved to.

If an exchange state is active then this command will end the exchange state (even if this command does not complete successfully).

On a recycling device this command is not accepted if a cash-in transaction is active and will return a WFS\_ERR\_DEV\_NOT\_READY error.

If items are moved to a retract cash unit (i.e. a cash unit with *usType* WFS\_CDM\_TYPERETRACTCASSETTE), then the WFS\_CDM\_CASHUNIT.*ulCount* field of the retract cash unit must be incremented by 1 to specify the number of operations that changed the count. If items are moved to any other cash unit (e.g. a cash unit with *usType* WFS\_CDM\_TYPEREJECTCASSETTE), then the WFS\_CDM\_CASHUNIT.*ulCount* field of the cash unit must be incremented either by the number of items that were present at the time the WFS\_CMD\_CDM\_RESET command was issued or the number counted by the device during the WFS\_CMD\_CDM\_RESET command. Note that reject bin counts are unreliable.

**Input Param** If the application does not wish to specify a cash unit or position it can set *lpResetIn* to NULL. In this case the Service Provider will determine where to move any items found.

LPWFSCDMITEMPOSITION *lpResetIn*;

```
typedef struct _wfs_cdm_itemposition
{
    USHORT                usNumber;
    LPWFSCDMRETRACT      lpRetractArea;
    WORD                  fwOutputPosition;
} WFS_CDMITEMPOSITION *LPWFSCDMITEMPOSITION;
```

*usNumber*

~~In the case of a single cash unit destination~~ If non-zero, this value specifies the ~~cash unit~~ *usNumber* (as specified by WFS\_INF\_CDM\_CASH\_UNIT\_INFO) of the single cash unit to be used for the storage of any items found, ~~i.e. when~~

~~If~~ items are to be moved to ~~a reject or retract cash unit. In all other cases~~ an output position, this value must be zero, ~~i.e. when~~ *lpRetractArea* must be NULL and *fwOutputPosition* specifies where items are to be moved to ~~item cassettes~~.

~~If this value is zero and items are to be moved to internal areas of the transport, the stacker or an output position device.~~ *lpRetractArea* specifies where items are to be moved to or stored.

*lpRetractArea*

This field is used if items are to be moved to ~~internal areas of the device, including cash units, the intermediate stacker, or the transport,~~ a retract cash unit or to item cassettes. If items are to be moved to a reject cash unit or to an output position then this ~~The~~ field must be NULL.

```
typedef struct _wfs_edm_retract
```

```
{
    WORD                fwOutputPosition;
    USHORT              usRetractArea;
    USHORT              usIndex;
```

~~is only relevant if usNumber is zero. The~~ WFS\_CDMRETRACT, \*LPWFSCDMRETRACT; structure is defined in WFS\_CMD\_CDM\_RETRACT.

*fwOutputPosition*

This value will be ignored, ~~because all items are moved from all positions~~.

*usRetractArea*

This value specifies the area to which description in [WFS\\_CMD\\_CDM\\_RETRACT](#).

*usIndex*

See the [items are to be moved to](#) description in [Possible values are:](#)

Value	Meaning
<a href="#">WFS_CDM_RA_RETRACT</a>	Items will be moved to a retract cash unit. In the case where several cash units of type <a href="#">WFS_CDM_TYPERETRACTCASSETTE</a> exist the <i>usNumber</i> field will define which retract unit the items will be moved to.
<a href="#">WFS_CDM_RA_TRANSPORT</a>	Items will be moved to the transport.
<a href="#">WFS_CMD_CDM_RA_STACKER</a>	Items will be moved to the intermediate stacker area.
<a href="#">WFS_CDM_RA_ITEMCASSETTE</a>	Items will be moved to the item cassettes, i.e. cassettes that can be dispensed from.

*usIndex*

If *usRetractArea* is set to [WFS\\_CDM\\_RA\\_RETRACT](#) this field defines the position inside the retract cash units into which the cash is to be retracted. *usIndex* starts with a value of one (1) for the first retract position and increments by one for each subsequent position. If there are several logical retract cash units (of type [WFS\\_CDM\\_TYPERETRACTCASSETTE](#) in command [WFS\\_INF\\_CDM\\_CASH\\_UNIT\\_INFO](#)), *usIndex* would be incremented from the first position of the first retract cash unit to the last position of the last retract cash unit defined in [WFS\\_CDM\\_CASHUNIT](#). The maximum value of *usIndex* is the sum of the *ulMaximum* of each retract cash unit. If *usRetractArea* is not set to [WFS\\_CDM\\_RA\\_RETRACT](#) the value of this field is ignored.

*fwOutputPosition*

The output position to which items are to be moved. ~~If the~~ [This field is only used if \*usNumber\* is non-zero then this field will be ignored and \*lpRetractArea\* is NULL.](#) The value is specified as one of the following values:

Value	Meaning
<a href="#">WFS_CDM_POSNULL</a>	The default configuration.
<a href="#">WFS_CDM_POSLEFT</a>	The left output position.
<a href="#">WFS_CDM_POSRIGHT</a>	The right output position.
<a href="#">WFS_CDM_POSCENTER</a>	The center output position.
<a href="#">WFS_CDM_POSTOP</a>	The top output position.
<a href="#">WFS_CDM_POSBOTTOM</a>	The bottom output position.
<a href="#">WFS_CDM_POSFRONT</a>	The front output position.
<a href="#">WFS_CDM_POSREAR</a>	The rear output position.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1] the following can be generated by this command:

Value	Meaning
<a href="#">WFS_ERR_CDM_CASHUNITERROR</a>	A cash unit caused an error. One or more <a href="#">WFS_EXEE_CDM_CASHUNITERROR</a> events will be sent with the details.
<a href="#">WFS_ERR_CDM_UNSUPPOSITION</a>	The position specified is not supported.
<a href="#">WFS_ERR_CDM_INVALIDCASHUNIT</a>	The cash unit number specified is not valid.
<a href="#">WFS_ERR_CDM_INVALIDRETRACTPOSITION</a>	<a href="#">The <i>usIndex</i> is not supported.</a>
<a href="#">WFS_ERR_CDM_NOTRETRACTAREA</a>	<a href="#">The retract area specified in <i>usRetractArea</i> is not supported.</a>
<a href="#">WFS_ERR_CDM_POSITION_NOT_EMPTY</a>	The retract area specified in <i>usRetractArea</i> is not empty so the moving of items was not possible.

WFS\_ERR\_CDM\_INCOMPLETERETRACT Some or all of the items were not retracted for a reason not covered by other error codes. The detail will be reported with the WFS\_EXEE\_CDM\_INCOMPLETERETRACT event.

**Events**

In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.
WFS_EXEE_CDM_CASHUNITERROR	A cash unit caused an error.
WFS_SRVE_CDM_MEDIADETECTED	Media has been found in the device.
WFS_SRVE_CDM_ITEMSTAKEN	The items presented have been removed by the user.
WFS_EXEE_CDM_INPUT_P6	Level 2 and/or level 3 notes have been detected.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.
WFS_EXEE_CDM_INCOMPLETERETRACT	The command has completed with an error and not all of the items have been retracted. The detail of what was actually retracted will be reported in the WFS_EXEE_CDM_INCOMPLETERETRACT event data.
WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	The shutter status has changed.

**Comments**

None.

**4.176.17 WFS\_CMD\_CDM\_TEST\_CASH\_UNITS**

**Description** This command is used to test cash units following replenishment. All physical cash units which are testable (i.e. that have a status of WFS\_CDM\_STATCUOK or WFS\_CDM\_STATCULOW and no application lock in the logical cash unit associated with the physical cash unit) are tested. If the hardware is able to do so tests are continued even if an error occurs while testing one of the cash units. The command completes with WFS\_SUCCESS if the Service Provider successfully manages to test all of the testable cash units regardless of the outcome of the test. This is the case if all testable cash units could be tested and a dispense was possible from at least one of the cash units.

A WFS\_EXEE\_CDM\_CASHUNITERROR event will be sent for any logical cash unit which has one or more physical cash units which cannot be tested or which fail the test, even if the logical cash unit has other physical cash units which are successfully tested. If all the cash units could not be tested or no cash units are testable then a WFS\_ERR\_CDM\_CASHUNITERROR code will be returned and WFS\_EXEE\_CDM\_CASHUNITERROR events generated for every logical cash unit that encountered a problem. The operation performed to test the cash units is vendor dependent. Items may be dispensed or transported into a reject bin as a result of this command.

If no cash units are testable then a WFS\_ERR\_CDM\_CASHUNITERROR code will be returned and WFS\_EXEE\_CDM\_CASHUNITERROR events will be generated for every cash unit.

**Input Param** LPWFSCDMITEMPOSITION lpPosition;  
 Specifies where items dispensed as a result of this command should be moved to. For a description of the WFSCDMITEMPOSITION structure see section WFS\_CMD\_CDM\_RESET.  
 If a Service Provider default configuration is to be used this parameter can be NULL.

**Output Param** LPWFSCDMCUINFO lpCUInfo;  
 The WFSCDMCUINFO structure is defined in the documentation of the WFS\_INF\_CDM\_CASH\_UNIT\_INFO command.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_CASHUNITERROR	A cash unit caused a problem that meant all cash units could not be tested or no cash units were testable. One or more WFS_EXEE_CDM_CASHUNITERROR events will be posted with the details.
WFS_ERR_CDM_UNSUPPOSITION	The position specified is not supported.
WFS_ERR_CDM_SHUTTERNOTOPEN	The shutter is not open or did not open when it should have. No items presented.
WFS_ERR_CDM_SHUTTEROPEN	The shutter is open when it should be closed. No items presented.
WFS_ERR_CDM_INVALIDCASHUNIT	The cash unit number specified is not valid.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_PRERRORNOITEMS	There was an error during the present operation - no items were presented.
WFS_ERR_CDM_PRERRORITEMS	There was an error during the present operation - at least some of the items were presented.
WFS_ERR_CDM_PRERRORUNKNOWN	There was an error during the present operation - the position of the items is unknown. Intervention may be required to reconcile the cash amount totals.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_USRE_CDM_CASHUNITTHRESHOLD	A threshold condition has been reached in one of the cash units.

WFS_EXEE_CDM_CASHUNITERROR	A cash unit has failed the test or a cash unit was not testable.
WFS_SRVE_CDM_ITEMSTAKEN	The items presented have been removed by the user.
WFS_SRVE_CDM_CASHUNITINFOCHANGED	A cash unit was updated as a result of this command.
WFS_EXEE_CDM_NOTEERROR	An item detection error has occurred.
WFS_EXEE_CDM_INPUT_P6	Level 2 and/or level 3 notes have been detected.
WFS_SRVE_CDM_SHUTTERSTATUSCHANGED	The shutter status has changed.
WFS_EXEE_CDM_INFO_AVAILABLE	Information is available for items being processed by this operation.

**Comments**      None.

**4.186.18 WFS\_CMD\_CDM\_SET\_GUIDANCE\_LIGHT**

**Description** This command is used to set the status of the CDM guidance lights. This includes defining the flash rate, the color and the direction. When an application tries to use a color or direction that is not supported then the Service Provider will return the generic error WFS\_ERR\_UNSUPP\_DATA.

**Input Param** LPWFSCDMSETGUIDLIGHT lpSetGuidLight;

```
typedef struct _wfs_cdm_set_guidlight
{
    WORD wGuidLight;
    DWORD dwCommand;
} WFS_CDM_SET_GUIDLIGHT, *LPWFSCDMSETGUIDLIGHT;
```

*wGuidLight*

Specifies the index of the guidance light to set as one of the values defined within the capabilities section in the *dwGuidLights [...]* field.

*dwCommand*

Specifies the state of the guidance light indicator as WFS\_CDM\_GUIDANCE\_OFF or a combination of the following flags consisting of one type B, optionally one type C and optionally [one](#) type D. If no value of type C is specified then the default color is used. The Service Provider determines which color is used as the default color.

Value	Meaning	Type
WFS_CDM_GUIDANCE_OFF	The light indicator is turned off.	A
WFS_CDM_GUIDANCE_SLOW_FLASH	The light indicator is set to flash slowly.	B
WFS_CDM_GUIDANCE_MEDIUM_FLASH	The light indicator is set to flash medium frequency.	B
WFS_CDM_GUIDANCE_QUICK_FLASH	The light indicator is set to flash quickly.	B
WFS_CDM_GUIDANCE_CONTINUOUS	The light indicator is turned on continuously (steady).	B
WFS_CDM_GUIDANCE_RED	The light indicator color is set to red.	C
WFS_CDM_GUIDANCE_GREEN	The light indicator color is set to green.	C
WFS_CDM_GUIDANCE_YELLOW	The light indicator color is set to yellow.	C
WFS_CDM_GUIDANCE_BLUE	The light indicator color is set to blue.	C
WFS_CDM_GUIDANCE_CYAN	The light indicator color is set to cyan.	C
WFS_CDM_GUIDANCE_MAGENTA	The light indicator color is set to magenta.	C
WFS_CDM_GUIDANCE_WHITE	The light indicator color is set to white.	C
<a href="#">WFS_CDM_GUIDANCE_ENTRY</a>	<a href="#">The light indicator is set to the entry state.</a>	<a href="#">D</a>
WFS_CDM_GUIDANCE_EXIT	The light indicator is set to the exit state.	D

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_INVALID_PORT	An attempt to set a guidance light to a new value was invalid because the guidance light does not exist.

**Events** Only the generic events defined in [Ref. 1] can be generated by this command.

**Comments** Guidance light support was added into the CDM primarily to support guidance lights for workstations where more than one instance of a CDM is present. The original SIU guidance light mechanism was not able to manage guidance lights for workstations with multiple CDMs. This command can also be used to set the status of the CDM guidance lights when only one instance of a CDM is present.

The slow and medium flash rates must not be greater than 2.0 Hz. It should be noted that in order to comply with American Disabilities Act guidelines only a slow or medium flash rate must be used.

**4.196.19 WFS\_CMD\_CDM\_POWER\_SAVE\_CONTROL**

---

**Description** This command activates or deactivates the power-saving mode.  
 If the Service Provider receives another execute command while in power saving mode, the Service Provider automatically exits the power saving mode, and executes the requested command. If the Service Provider receives an information command while in power saving mode, the Service Provider will not exit the power saving mode.

**Input Param** LPWFSCDMPOWERSAVECONTROL lpPowerSaveControl;

```
typedef struct _wfs_cdm_power_save_control
{
    USHORT usMaxPowerSaveRecoveryTime;
} WFS_CDMPOWERSAVECONTROL, *LPWFSCDMPOWERSAVECONTROL;
```

*usMaxPowerSaveRecoveryTime*

Specifies the maximum number of seconds in which the device must be able to return to its normal operating state when exiting power save mode. The device will be set to the highest possible power save mode within this constraint. If *usMaxPowerSaveRecoveryTime* is set to zero then the device will exit the power saving mode.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_POWERSAVETOOSHORT	The power saving mode has not been activated because the device is not able to resume from the power saving mode within the specified <i>usMaxPowerSaveRecoveryTime</i> value.
WFS_ERR_CDM_POWERSAVEMEDIAPRESENT	The power saving mode has not been activated because media is present inside the device.
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

**Events** In addition to the generic events defined in [Ref. 1], the following events can be generated by this command:

Value	Meaning
WFS_SRVE_CDM_POWER_SAVE_CHANGE	The power save recovery time has changed.

**Comments** None.

**4.206.20 WFS\_CMD\_CDM\_PREPARE\_DISPENSE**

**Description** On some hardware it can take a significant amount of time for the dispenser to get ready to dispense media. On this type of hardware the WFS\_CMD\_CDM\_PREPARE\_DISPENSE command can be used to improve transaction performance.

If this command is supported (see the *bPrepareDispense* capability) then applications can help to improve the time taken to dispense media by issuing this command as soon as the application knows that a dispense is likely to happen. This command either prepares the device for the next dispense operation, or terminates the dispense preparation if the subsequent dispense operation is no longer required.

With the exception of the WFS\_CMD\_CDM\_DENOMINATE [command](#) and [WFS\\_CMD\\_CDM\\_DISPENSE commands](#), which will not stop the dispense preparation, any execute command on CDM or CIM will automatically stop the dispense preparation.

If this command is executed and the device is already in the specified *wAction* state, then this execution will have no effect and will complete with WFS\_SUCCESS.

**Input Param** LPWFSCDMPREPAREDISPENSE lpPrepareDispense;

```
typedef struct _wfs_cdm_prepare_dispense
{
    WORD wAction;
} WFS_CDM_PREPAREDISPENSE, *LPWFSCDMPREPAREDISPENSE;
```

*wAction*

A value specifying the type of actions. The value is set to one of the following values:

Value	Meaning
WFS_CDM_START	Initiates the action to prepare for the next dispense command. This command does not wait until the device is ready to dispense before returning a completion event, it completes as soon as the preparation has been initiated.
WFS_CDM_STOP	Stops the previously activated dispense preparation. For example the motor of the transport will be stopped. This should be used if for some reason the subsequent dispense operation is no longer required.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.

**Events** Only the generic events defined in [Ref. 1] can be generated by this command.

**Comments** None.

## 4.216.21 WFS\_CMD\_CDM\_SET\_BLACKLIST

---

<b>Description</b>	This command is used to set all blacklist information. This list is persistent. <a href="#">Information set by this command overrides any existing blacklist or classification list, although it is not recommended that an application use both this command and WFS_CMD_CDM_SET_CLASSIFICATION_LIST to avoid overlap and confusion.</a>
<b>Input Param</b>	<p>This parameter should be set to NULL if the application wishes to empty the blacklist.</p> <p>LPWFSCDMBLACKLIST lpBlacklist;</p> <p>The LPWFSCDMBLACKLIST structure is defined in the documentation of the WFS_INF_CDM_GET_BLACKLIST command.</p> <p><i>lpzVersion</i> This is an application defined Unicode string that sets the version identifier of the blacklist. This can be set to NULL if it has no version identifier.</p> <p><i>usCount</i> Number of pointers to WFSCDMBLACKLISTELEMENT structures returned in <i>lppBlacklistElements</i>.</p> <p><i>lppBlacklistElements</i> Pointer to an array of pointers to WFSCDMBLACKLISTELEMENT structures. Each element represents a serial number, currency and value combination that a banknote will be matched against to determine if it is blacklisted.</p> <p>The WFSCDMBLACKLISTELEMENT structure is defined in the documentation of the WFS_INF_CDM_GET_BLACKLIST command.</p> <p><i>lpzSerialNumber</i> This Unicode string defines the serial number or a mask of serial numbers of one blacklist element with the defined currency and value. For a definition of the mask see Section 24.</p> <p><i>cCurrencyID</i> The three character ISO format currency identifier [Ref. 2] of the blacklist element.</p> <p><i>ulValue</i> The value of a blacklist element. This field can be set to zero to match all values.</p>
<b>Output Param</b>	None.
<b>Error Codes</b>	Only the generic error codes defined in [Ref. 1] can be generated by this command.
<b>Events</b>	Only the generic events defined in [Ref. 1] can be generated by this command.
<b>Comments</b>	Some classes of counterfeit banknotes have the same or similar serial numbers. By setting a serial number blacklist financial institutions can react quickly to a threat from counterfeit banknotes.

**4.226.22 WFS\_CMD\_CDM\_SYNCHRONIZE\_COMMAND**

**Description** This command is used to reduce response time of a command (e.g. for synchronization with display) as well as to synchronize actions of the different device classes. This command is intended to be used only on hardware which is capable of synchronizing functionality within a single device class or with other device classes.

The list of execute commands which this command supports for synchronization is retrieved in the *lpdwSynchronizableCommands* parameter of the WFS\_INF\_CDM\_CAPABILITIES.

This command is optional, i.e. any other command can be called without having to call it in advance. Any preparation that occurs by calling this command will not affect any other subsequent command. However, any subsequent execute command other than the one that was specified in the *dwCommand* input parameter will execute normally and may invalidate the pending synchronization. In this case the application should call the WFS\_CMD\_CDM\_SYNCHRONIZE\_COMMAND again in order to start a synchronization.

**Input Param** LPWFSCDMSYNCHRONIZECOMMAND lpSynchronizeCommand;

```
typedef struct _wfs_cdm_synchronize_command
{
    DWORD dwCommand;
    LPVOID lpCmdData;
} WFS_CMD_CDM_SYNCHRONIZECOMMAND, *LPWFSCDMSYNCHRONIZECOMMAND;
```

*dwCommand*

The command ID of the command to be synchronized and executed next.

*lpCmdData*

Pointer to data or a data structure that represents the parameter that is normally associated with the command that is specified in *dwCommand*. For example, if *dwCommand* is WFS\_CMD\_CDM\_RETRACT then *lpCmdData* will point to a WFS\_CDMRETRACT structure. This parameter can be NULL if no command input parameter is needed or if this detail is not needed to synchronize for the command.

It will be device-dependent whether the synchronization is effective or not in the case where the application synchronizes for a command with this command specifying a parameter but subsequently executes the synchronized command with a different parameter. This case should not result in an error; however, the preparation effect could be different from what the application expects. The application should, therefore, make sure to use the same parameter between *lpCmdData* of this command and the subsequent corresponding execute command.

**Output Param** None.

**Error Codes** In addition to the generic error codes defined in [Ref. 1], the following error codes can be generated by this command:

Value	Meaning
WFS_ERR_CDM_EXCHANGEACTIVE	The CDM is in an exchange state.
WFS_ERR_CDM_COMMANDUNSUPP	The command specified in the <i>dwCommand</i> field is not supported by the Service Provider.
WFS_ERR_CDM_SYNCHRONIZEUNSUPP	The preparation for the command specified in the <i>dwCommand</i> with the parameter specified in the <i>lpCmdData</i> is not supported by the Service Provider.

**Events** Only the generic events defined in [Ref. 1] can be generated by this command.

**Comments** For sample flows of this synchronization see the [Ref 1] Appendix C.

## 6.23 WFS\_CMD\_CDM\_SET\_CLASSIFICATION\_LIST

---

<b>Description</b>	<p><u>This command is used to specify the entire note classification list. Any items not specified in this list will be handled according to normal classification rules. This information is persistent. Information set by this command overrides any existing blacklist or classification list, although it is not recommended that an application use both this command and WFS_CMD_CDM_SET_BLACKLIST to avoid overlap and confusion.</u></p> <p><u>If a note is reclassified, it is handled as though it was a note of the new classification. For example, a fit note reclassified as unfit would be treated as though it were unfit, which may mean that the note is not dispensed.</u></p> <p><u>Reclassification cannot be used to change a note's classification to a higher level, for example, a note recognized as counterfeit by the device cannot be reclassified as genuine. In addition, it is not possible to re-classify a level 2 note as level 1.</u></p> <p><u>If two or more classification elements specify overlapping note definitions, but different <i>usLevel</i> values then the first one takes priority.</u></p>
<b>Input Param</b>	<p><u>LPWFSCDMCLASSIFICATIONLIST lpClassificationList;</u></p> <p><u>The LPWFSCDMCLASSIFICATIONLIST structure is defined in WFS_INF_CDM_GET_CLASSIFICATION_LIST. This parameter should be set to NULL if the application wishes to empty the note classification list.</u></p>
<b>Output Param</b>	<p><u>None.</u></p>
<b>Error Codes</b>	<p><u>Only the generic error codes defined in [Ref. 1] can be generated by this command.</u></p>
<b>Events</b>	<p><u>Only the generic events defined in [Ref. 1] can be generated by this command.</u></p>
<b>Comments</b>	<p><u>None.</u></p>

## 5.7. Events

---

### 5.47.1 WFS\_SRVE\_CDM\_SAFEDOOROPEN

---

<b>Description</b>	This service event is generated when the safe door has been opened.
<b>Event Param</b>	None.
<b>Comments</b>	None.

**5.27.2 WFS\_SRVE\_CDM\_SAFEDOORCLOSED**

---

<b>Description</b>	This service event is generated when the safe door has been closed.
<b>Event Param</b>	None.
<b>Comments</b>	None.

### 5.37.3 WFS\_USRE\_CDM\_CASHUNITTHRESHOLD

---

<b>Description</b>	<p>This user event is generated when a threshold condition has occurred in one of the logical cash units. If the logical cash unit is a shared cash unit in a compound CIM/CDM then this event can also be generated as a result of a CIM operation.</p> <p>This event can be triggered either by hardware sensors in the device or by the logical <i>ulCount</i> reaching the <i>ulMinimum</i> or <i>ulMaximum</i> value as specified in the WFS_CDM_CASHUNIT structure.</p> <p>The application can check if the device has hardware sensors by querying the <i>bHardwareSensor</i> field of the physical cash unit structure. If any of the physical cash units associated with the logical cash unit have this capability then threshold events based on hardware sensors will be triggered if the <i>ulMaximum</i> or <i>ulMinimum</i> values are not used and are set to zero.</p> <p>In the situation where the cash unit is associated with multiple physical cash units the WFS_SRVE_CDM_CASHUNITINFOCHANGED event will be generated when any of the physical cash units reaches the threshold. When the final physical cash unit reaches the threshold, the WFS_USRE_CDM_CASHUNITTHRESHOLD event as well as the WFS_SRVE_CDM_CASHUNITINFOCHANGED event will be generated.</p>
<b>Event Param</b>	<p>LPWFS_CDM_CASHUNIT lpCashUnit;</p> <p><i>lpCashUnit</i>                  Pointer to a WFS_CDM_CASHUNIT structure, describing the cash unit on which the threshold condition occurred. See <i>lpCashUnit-&gt;usStatus</i> for the current status. For a description of the WFS_CDM_CASHUNIT structure, see the definition of the WFS_INF_CDM_CASH_UNIT_INFO command.</p>
<b>Comments</b>	<p>None.</p>

#### 5.47.4 WFS\_SRVE\_CDM\_CASHUNITINFOCHANGED

---

<b>Description</b>	<p>This service event is generated under the following circumstances:</p> <ul style="list-style-type: none"><li>• It is generated whenever <i>usStatus</i> and/or <i>usPStatus</i> changes. For instance, a physical cash unit has been removed or inserted, or a physical/logical cash unit has become empty or full.</li><li>• This event will also be generated for every cash unit changed in any way (including changes to counts, e.g. <i>ulCount</i>, <i>ulRejectCount</i>, <i>ulInitialCount</i>, <i>ulDispensedCount</i> and <i>ulPresentedCount</i>) as a result of the following commands:  WFS_CMD_CDM_SET_CASH_UNIT_INFO WFS_CMD_CDM_END_EXCHANGE</li><li>• This event will also be fired when any change is made to a cash unit by the following commands, except for changes to counts (e.g. <i>ulCount</i>, <i>ulRejectCount</i>, <i>ulInitialCount</i>, <i>ulDispensedCount</i> and <i>ulPresentedCount</i>):  WFS_CMD_CDM_CALIBRATE_CASH_UNIT WFS_CMD_CDM_TEST_CASH_UNITS</li></ul> <p>If the cash unit is shared cash unit in a compound CIM/CDM then this event can also be generated as a result of a CIM operation.</p> <p>When a physical cash unit is removed, the status of the physical cash unit becomes WFS_CDM_STATCUMISSING. If there are no physical cash units of the same logical type remaining the status of the logical type becomes WFS_CDM_STATCUMISSING.</p> <p>When a physical cash unit is inserted and this physical cash unit is of an existing logical type, both the logical and the physical cash unit structures will be updated.</p> <p>If a physical cash unit of a new logical type is inserted the cash unit structure reported by the last WFS_INF_CDM_CASH_UNIT_INFO command is no longer valid. In that case an application should issue a WFS_INF_CDM_CASH_UNIT_INFO command after receiving this event to obtain updated cash unit information.</p>
<b>Event Param</b>	<p>LPWFSCDMCASHUNIT lpCashUnit;</p> <p><i>lpCashUnit</i></p> <p>Pointer to the changed cash unit structure. For a description of the WFS_CDM_CASHUNIT structure see the definition of the WFS_INF_CDM_CASH_UNIT_INFO command.</p>
<b>Comments</b>	<p>None.</p>

### 5.57.5 WFS\_SRVE\_CDM\_TELLERINFOCHANGED

---

<b>Description</b>	This service event is generated when the counts assigned to a teller have changed. This event is only returned as a result of a WFS_CMD_CDM_SET_TELLER_INFO command.
<b>Event Param</b>	LPUSHORT <i>lpusTellerID</i> ; <i>lpusTellerID</i> Pointer to an unsigned short holding the ID of the teller whose counts have changed.
<b>Comments</b>	None.

**5.67.6 WFS\_EXEE\_CDM\_DELAYEDDISPENSE**

---

<b>Description</b>	This execute event is generated if the start of a dispense operation has been delayed.
<b>Event Param</b>	LPULONG lpulDelay;  <i>lpulDelay</i> Pointer to an unsigned long holding the time in milliseconds by which the dispense operation will be delayed.
<b>Comments</b>	None.

### 5.77.7 WFS\_EXEE\_CDM\_STARTDISPENSE

---

<b>Description</b>	This execute event is generated when a delayed dispense operation begins.
<b>Event Param</b>	LPREQUESTID lpReqID; <i>lpReqID</i> Pointer to the <i>RequestID</i> of the original dispense command.
<b>Comments</b>	None.

### 5.87.8 WFS\_EXEE\_CDM\_CASHUNITERROR

---

**Description** This execute event is generated if there is a problem with a cash unit during the execution of a command.

**Event Param** LPWFSCDMCUERROR lpCashUnitError;

```
typedef struct _wfs_cdm_cu_error
{
    WORD wFailure;
    LPWFSCDMCASHUNIT lpCashUnit;
} WFS_CDM_CU_ERROR, *LPWFSCDMCUERROR;
```

*wFailure*

Specifies the kind of failure that occurred in the cash unit. Values are:

Value	Meaning
WFS_CDM_CASHUNITEMPTY	Specified cash unit is empty.
WFS_CDM_CASHUNITERROR	Specified cash unit has malfunctioned.
WFS_CDM_CASHUNITFULL	Specified cash unit is full.
WFS_CDM_CASHUNITLOCKED	Specified cash unit is locked.
WFS_CDM_CASHUNITINVALID	Specified cash unit is invalid.
WFS_CDM_CASHUNITCONFIG	An attempt has been made to change the settings of a self-configuring cash unit.
WFS_CDM_CASHUNITNOTCONF	Specified cash unit is not configured.

*lpCashUnit*

Pointer to the cash unit structure that caused the problem. The WFS\_CDM\_CASHUNIT structure is defined in the documentation of the WFS\_INF\_CDM\_CASH\_UNIT\_INFO command. It is possible that this pointer may be NULL if the *wFailure* field is WFS\_CDM\_CASHUNITINVALID.

**Comments** None.

**5.97.9 WFS\_SRVE\_CDM\_ITEMSTAKEN**

---

**Description** This service event is generated when items presented to the user have been taken. This event may be generated at any time.

**Event Param** LPWORD lpfwPosition;

*lpfwPosition*

Pointer to the output position from which the items have been removed. Possible values are:

Value	Meaning
WFS_CDM_POSNULL	The default configuration.
WFS_CDM_POSLEFT	The left output position.
WFS_CDM_POSRIGHT	The right output position.
WFS_CDM_POSCENTER	The center output position.
WFS_CDM_POSTOP	The top output position.
WFS_CDM_POSBOTTOM	The bottom output position.
WFS_CDM_POSFRONT	The front output position.
WFS_CDM_POSREAR	The rear output position.

**Comments** None.

**5.107.10** WFS\_SRVE\_CDM\_COUNTS\_CHANGED

---

**Description** This service event is generated if the device is a compound device together with a CIM and the counts in a shared cash unit have changed as a result of any CIM operation other than WFS\_CMD\_CIM\_SET\_CASH\_UNIT\_INFO and WFS\_CMD\_CIM\_END\_EXCHANGE.

**Event Param** LPWFSCDMCOUNTSCHANGED lpCountsChanged;

```
typedef struct _wfs_cdm_counts_changed
{
    USHORT                usCount;
    LPUSHORT              lpusCUNumList;
} WFS_CDMCOUNTSCHANGED, *LPWFSCDMCOUNTSCHANGED;
```

*usCount*

The size of *lpusCUNumList*.

*lpusCUNumList*

Pointer to a list of the *usNumber* values of the cash units whose counts have changed.

**Comments** None.

**5.117.11** WFS\_EXEE\_CDM\_PARTIALDISPENSE

---

<b>Description</b>	This execute event is generated when a dispense operation is divided into several sub-dispense operations because the hardware capacity of the CDM is exceeded.
<b>Event Param</b>	LPUSHORT lpusDispNum;  <i>lpusDispNum</i> Pointer to an unsigned short holding the number of sub-dispense operations into which the dispense operation has been divided.
<b>Comments</b>	None.

**5.127.12** **WFS\_EXEE\_CDM\_SUBDISPENSEOK**

---

<b>Description</b>	This execute event is generated when one of the sub-dispense operations into which the dispense operation was divided has finished successfully.
<b>Event Param</b>	LPWFSCDMDENOMINATION lpDenomination; <i>lpDenomination</i> The WFS_CDM_DENOMINATION structure is defined in the documentation of the command WFS_CMD_CDM_DENOMINATE. Note that in this case the values in this structure report the amount and number of each denomination dispensed in the sub-dispense operation.
<b>Comments</b>	None.

**5.137.13** WFS\_EXEE\_CDM\_INCOMPLETEDISPENSE

---

<b>Description</b>	This execute event is generated <del>when not all of the items specified in a during</del> WFS_CMD_CDM_DISPENSE <del>operation could be dispensed. Some of the items have when it has</del> not been <del>dispensed. If possible to dispense the entire denomination but part of the requested</del> denomination is on the <del>device has no</del> intermediate stacker <del>then the items that were dispensed will</del> be <del>or</del> in customer access.
<b>Event Param</b>	LPWFSCDMDENOMINATION lpDenomination; <i>lpDenomination</i> The WFS_CDM_DENOMINATION structure is defined in the documentation of the command WFS_CMD_CDM_DENOMINATE. Note that in this case the values in this structure report the amount and number of each denomination that <del>has actually been dispensed</del> are in customer access or on the intermediate stacker. WFS_INF_CDM_PRESENT_STATUS can be used to determine whether the items are in customer access.
<b>Comments</b>	None.

**5.147.14 WFS\_EXEE\_CDM\_NOTEERROR**

---

**Description** This execute event specifies the reason for a note detection error during the execution of a command.

**Event Param** LPUSHORT lpusReason;

*lpusReason*

Pointer to an unsigned short holding the reason for the notes detection error. Possible values are:

Value	Meaning
WFS_CDM_DOUBLENOTEDETECTED	Double notes have been detected.
WFS_CDM_LONGNOTEDETECTED	A long note has been detected.
WFS_CDM_SKEWEDNOTE	A skewed note has been detected.
WFS_CDM_INCORRECTCOUNT	An item counting error has occurred.
WFS_CDM_NOTESTOOCLOSE	Notes have been detected as being too close.
WFS_CDM_OTHERNOTEERROR	An item error not covered by the other values has been detected.
WFS_CDM_SHORTNOTEDETECTED	Short notes have been detected.

**Comments** None.

**5.157.15** WFS\_SRVE\_CDM\_ITEMSPRESENTED

---

**Description** This service event specifies that items have been presented to the user during a count operation and need to be taken.

**Event Param** None.

**Comments** None.

**5.167.16** **WFS\_SRVE\_CDM\_MEDIADETECTED**

---

<b>Description</b>	This service event is generated if media is detected during a reset (WFS_CMD_CDM_RESET). The parameter on the event informs the application of the position of the media after the reset completes. If the device has been unable to successfully move the items found then this parameter will be NULL.
<b>Event Param</b>	LPWFSCDMITEMPOSITION *lpItemPosition; For a description of this parameter see section WFS_CMD_CDM_RESET. <a href="#">This parameter is a pointer to a pointer to WFSCDMITEMPOSITION structure.</a>
<b>Comments</b>	None.

**5.177.17** WFS\_EXEE\_CDM\_INPUT\_P6

---

<b>Description</b>	This execute event is generated if level 2 and/or level 3 notes are detected during execution of a CDM command. <del>Details about the notes detected and their associated signatures are obtained through the CIM interface.</del>
<b>Event Param</b>	None.
<b>Comments</b>	None.

**5.187.18** WFS\_SRVE\_CDM\_DEVICEPOSITION

---

**Description** This service event reports that the device has changed its position status.

**Event Param** LPWFSCDMDEVICEPOSITION lpDevicePosition;

```
typedef struct _wfs_cdm_device_position
{
    WORD wPosition;
} WFS_CDM_DEVICEPOSITION, *LPWFSCDMDEVICEPOSITION;
```

*wPosition*

Position of the device as one of the following values:

Value	Meaning
WFS_CDM_DEVICEINPOSITION	The device is in its normal operating position.
WFS_CDM_DEVICENOTINPOSITION	The device has been removed from its normal operating position.
WFS_CDM_DEVICEPOSUNKNOWN	The position of the device cannot be determined.

**Comments** None.

**5.197.19** WFS\_SRVE\_CDM\_POWER\_SAVE\_CHANGE

---

**Description** This service event specifies that the power save recovery time has changed.

**Event Param** LPWFSCDMPOWERSAVECHANGE lpPowerSaveChange;

```
typedef struct _wfs_cdm_power_save_change
{
    USHORT                usPowerSaveRecoveryTime;
} WFS_CDMPOWERSAVECHANGE, *LPWFSCDMPOWERSAVECHANGE;
```

*usPowerSaveRecoveryTime*

Specifies the actual number of seconds required by the device to resume its normal operational state. This value is zero if the device exited the power saving mode.

**Comments** If another device class compounded with this device enters into a power saving mode, this device will automatically enter into the same power saving mode and this event will be generated.

**5.207.20** **WFS\_EXEE\_CDM\_INFO\_AVAILABLE**

---

**Description** This execute event is generated when information is available for items being processed by the Service Provider.

**Event Param** LPWFSCDMITEMINFOSUMMARY \*lppItemInfoSummary;  
Pointer to a NULL-terminated array of pointers to WFS\_CDM\_ITEM\_INFO\_SUMMARY structures, one structure for every level.

```
typedef struct _wfs_cdm_item_info_summary
{
    USHORT          usLevel;
    USHORT          usNumOfItems;
} WFS_CDM_ITEM_INFO_SUMMARY, *LPWFSCDMITEMINFOSUMMARY;
```

*usLevel*  
Defines the note level. Possible values are:

Value	Meaning
WFS_CDM_LEVEL_1	Information for level 1 notes.
WFS_CDM_LEVEL_2	Information for level 2 notes.
WFS_CDM_LEVEL_3	Information for level 3 notes.
WFS_CDM_LEVEL_4	Information for level 4 notes.

*usNumOfItems*  
Number of items classified as *usLevel* which have information available.

**Comments** None.

**5.217.21 WFS\_EXEE\_CDM\_INCOMPLETERETRACT**

---

**Description** This execute event is sent when the WFS\_CMD\_CDM\_RETRACT or WFS\_CMD\_CDM\_RESET command has completed with an error and not all of the items have been retracted.

**Event Param** LPWFSCDMINCOMPLETERETRACT lpIncompleteRetract;

```
typedef struct _wfs_cdm_incomplete_retract
{
    WFSCDMITEMNUMBERLIST lpItemNumberList;
    USHORT                usReason;
} WFSCDMINCOMPLETERETRACT, *LPWFSCDMINCOMPLETERETRACT;
```

*lpItemNumberList:*

The [lpItemNumberList parameter](#) is a WFSCDMITEMNUMBERLIST structure [is](#) defined in the description of the command WFS\_CMD\_CDM\_RETRACT. Note that in this case the values in this structure report the amount and number of each denomination that were successfully moved during the command prior to the failure.

*usReason*

The reason for not having retracted items. The value is specified as one of the following values:

Value	Meaning
WFS_CDM_IRRETRACTFAILURE	The retract has partially failed for a reason not covered by the other reasons listed in this event, for example failing to pick an item to be retracted.
WFS_CDM_IRRETRACTAREAFULL	The specified retract area (see input parameter <i>usRetractArea</i> ) has become full during the retract operation.
WFS_CDM_IRFOREIGNITEMSDETECTED	Foreign items have been detected.
WFS_CDM_IRINVALIDBUNCH	An invalid bunch of items has been detected, e.g. it is too large or could not be processed.

**Comments** None.

**5.227.22 WFS\_SRVE\_CDM\_SHUTTERSTATUSCHANGED**

---

**Description** Within the limitations of the hardware sensors this service event is generated whenever the status of a shutter changes. The shutter status can change because of an explicit, implicit or manual operation depending on how the shutter is operated.

**Event Param** LPWFSCDMSHUTTERSTATUSCHANGED lpShutterStatusChanged;

```
typedef struct _wfs_cdm_shutter_status_changed
{
    WORD                fwPosition;
    WORD                fwShutter;
} WFS_CDM_SHUTTERSTATUSCHANGED, *LPWFSCDMSHUTTERSTATUSCHANGED;
```

*fwPosition*

Specifies one of the CDM output positions whose shutter status has changed as one of the following values:

Value	Meaning
WFS_CDM_POSLEFT	Left output position.
WFS_CDM_POSRIGHT	Right output position.
WFS_CDM_POSCENTER	Center output position.
WFS_CDM_POSTOP	Top output position.
WFS_CDM_POSBOTTOM	Bottom output position.
WFS_CDM_POSFRONT	Front output position.
WFS_CDM_POSREAR	Rear output position.

*fwShutter*

Specifies the new state of the shutter as one of the following values:

Value	Meaning
WFS_CDM_SHTCLOSED	The shutter is closed.
WFS_CDM_SHTOPEN	The shutter is opened.
WFS_CDM_SHTJAMMED	The shutter is jammed.
WFS_CDM_SHTUNKNOWN	Due to a hardware error or other condition, the state of the shutter cannot be determined.

**Comments** None.

## 6.8. Sub-Dispensing Command Flow

“Sub-dispensing” of bills occur when a WFS\_CMD\_CDM\_DISPENSE execute command is issued and the required number of bills to be dispensed exceeds the CDM hardware limit for bills that can be dispensed with a single “hardware level” dispense command. In this situation, the CDM Service Provider determines the number of “hardware level” dispense commands required and enters what is referred to as a “sub-dispensing” operation until the full amount has been dispensed. Through use of a “sub-dispensing” operation the application is fully removed from “hardware level dependencies” as to how many bills can be dispensed based on hardware vendor design limitations.

The following series of tables illustrate the steps taken on behalf of an end-user, application, XFS Service Provider, and CDM hardware for sub-dispensing operations: All examples below assume the *bPresent* field in the WFS\_CMD\_CDM\_DISPENSE command is set to TRUE.

### Sub-Dispensing Is Not Required - Transaction Successful

This table illustrates a successful WFS\_CMD\_CDM\_DISPENSE command where sub-dispensing is not required:

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 40 USD.			
2.		WFS_CMD_CDM_DISPENSE command issued.		
3.			Determines that a single “hardware level” dispense command can be issued for full dispense request.	
4.			“Hardware level” dispense command issued.	
5.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
6.		WFS_CMD_CDM_DISPENSE completes successfully.		
7.	User takes bills.			
8.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	

### Sub-Dispensing Is Required - Command Successful

This table illustrates a successful WFS\_CMD\_CDM\_DISPENSE command where sub-dispensing is required:

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 130 USD in 1 USD denominations.			
2.		WFS_CMD_CDM_DISPENSE command issued.		
3.			Three “hardware level” dispense commands are required. CDM hardware is limited to dispensing 50 bills in any single “hardware level” dispense.	
4.			WFS_EXEE_CDM_PARTIAL-DISPENSE event generated.	
5.			“Hardware level” dispense command issued for 50 USD.	
6.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
7.			WFS_SRVE_CDM_SUBDISPENSEOK event generated.	
8.	User takes bills.			
9.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	
10.			“Hardware level” dispense command issued for 50 USD.	
11.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
12.			WFS_SRVE_CDM_SUBDISPENSE_O K event generated.	
13.	User takes bills.			
14.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	
15.			“Hardware level” dispense command issued for 30 USD.	
16.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
17.			WFS_SRVE_CDM_SUBDISPENSEOK event generated.	
18.		WFS_CMD_CDM_DISPENSE completes successfully.		
19.	User takes bills.			
20.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	

### Sub-Dispensing Is Required - Command Unsuccessful

This table illustrates an unsuccessful WFS\_CMD\_CDM\_DISPENSE command where sub-dispensing is required and the end-user does not take the bills during the second “hardware level” dispense, resulting in a timeout condition.

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 130 USD in 1 USD denominations.			
2.		WFS_CMD_CDM_DISPENSE command issued.		
3.			Three “hardware level” dispense commands are required. CDM hardware is limited to dispensing 50 bills in any single “hardware level” dispense command.	
4.			WFS_EXEE_CDM_PARTIAL-DISPENSE event generated.	
5.			“Hardware level” dispense command issued for 50 USD.	
6.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented
7.			WFS_SRVE_CDM_SUBDISPENSEOK event generated.	
8.	User takes bills.			
9.			WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	
10.			“Hardware level” dispense command issued for 50 USD.	
11.			WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
12.			WFS_SRVE_CDM_SUBDISPENSEOK event generated.	
13.	User does not take bills.			
14.			Timeout occurs waiting on end-user to take bills.	
15.		WFS_CMD_CDM_DISPENSE completes with WFS_ERR_CDM_ITEMSNOT-TAKEN.		

## **7.9. Rules for Cash Unit Exchange**

---

The XFS Start and End Exchange commands should be used by applications to supply the latest information with regards to cash unit replenishment state and content. This guarantees a certain amount of control to an application as to which denominations are stored in which position as well as the general physical state of the logical/physical cash units.

If a cash unit is removed from the CDM outside of the Start/End Exchange operations and subsequently reinserted the status of the physical cash unit should be set to WFS\_CDM\_STATCUMANIP to indicate to the application that the physical cash unit has been removed, reinserted and possibly tampered with. While the cash unit has this status the Service Provider should not attempt to use it as part of a Dispense operation. The WFS\_CDM\_STATCUMANIP status should not change until the next Start/End Exchange operation is performed, even if the cash unit is replaced in its original position.

If all the physical cash units belonging to a logical cash unit are manipulated the parent logical cash unit that the physical cash units belong to should also have its status set to WFS\_CDM\_STATCUMANIP.

When a cash unit is removed and/or replaced outside of the Start/End Exchange operations the original logical cash unit information such as the values, currency and counts should be preserved in the Cash Unit Info structure reported to the application for accounting purposes until the next Start/End Exchange operations, even if the cash unit physically contains a different denomination.

## 8.10. Events Associated with Cash Unit Status Changes

The following instances illustrate which events will be posted when the cash unit statuses change. In all cases *bHardwareSensor* == TRUE, *ulMaximum* == 0 and *ulMinimum* == 0.

### 8.10.1 One Physical Cash Unit Goes LOW

The following table describes a dispense transaction case where the status of a physical cash unit only changes from WFS\_CDM\_STATCUOK to WFS\_CDM\_STATCULOW.

- *Logical CU 1 consists of Physical CU 1 and Physical CU 2*

	Action	Status/Event
1.		Logical CU 1: WFS_CDM_STATCUOK - Physical CU 1: WFS_CDM_STATCUOK - Physical CU 2: WFS_CDM_STATCUOK
2.	A user withdraws items.	
3.	The device dispenses and presents the items from Physical CU 1, whose status changes to low.	
4.	The status of Logical CU 1 does not change.	Logical CU 1: WFS_CDM_STATCUOK - Physical CU 1: <b>WFS_CDM_STATCULOW</b> - Physical CU 2: WFS_CDM_STATCUOK  WFS_SRVE_CDM_CASHUNITINFOCHANGED

**8.210.2 Last Physical Cash Unit Goes LOW**

The following table describes a dispense transaction case where the status of a logical cash unit changes from WFS\_CDM\_STATCUOK to WFS\_CDM\_STATCULOW.

- *Logical CU 1 consists of Physical CU 1 and Physical CU 2*

	Action	Status/Event
1.		Logical CU 1: WFS_CDM_STATCUOK - Physical CU 1: WFS_CDM_STATCULOW - Physical CU 2: WFS_CDM_STATCUOK
2.	A user withdraws items.	
3.	The device dispenses and presents the items from Physical CU 2, whose status changes to low.	
4.	As a result, the status of Logical CU 1 changes to low.	Logical CU 1: <b>WFS_CDM_STATCULOW</b> - Physical CU 1: WFS_CDM_STATCULOW - Physical CU 2: <b>WFS_CDM_STATCULOW</b>  WFS_SRVE_CDM_CASHUNITINFOCHANGED WFS_USRE_CDM_CASHUNITTHRESHOLD

**8-310.3 One Physical Cash Unit Goes INOP**

The following table describes a dispense transaction case where the status of a logical cash unit changes from WFS\_CDM\_STATCUOK to WFS\_CDM\_STATCULOW as the result of a physical cash unit failure.

- Logical CU 1 consists of Physical CU 1 and Physical CU 2
- The device has ability to continue transaction when a problem occurs in a physical cash unit.

	Action	Status/Event
1.		Logical CU 1: WFS_CDM_STATCUOK - Physical CU 1: WFS_CDM_STATCUOK - Physical CU 2: WFS_CDM_STATCULOW
2.	A user withdraws items.	
3.	The device tries to dispense the items from Physical CU 1; however, a problem occurs in the cash unit, whose status changes to inoperative.	
4.	The device complements the items by dispensing from Physical CU 2.	
5.	As a result, the status of Logical CU 1 changes to low.	Logical CU 1: <b>WFS_CDM_STATCULOW</b> - Physical CU 1: <b>WFS_CDM_STATCUINOP</b> - Physical CU 2: WFS_CDM_STATCULOW  WFS_EXEE_CDM_CASHUNITERROR WFS_SRVE_CDM_CASHUNITINFOCHANGED WFS_USRE_CDM_CASHUNITTHRESHOLD

**8.410.4 Last Physical Cash Unit Goes EMPTY**

The following table describes a dispense transaction case where the status of a logical cash unit changes from WFS\_CDM\_STATCULOW to WFS\_CDM\_STATCUEMPTY.

- *Logical CU 1 consists of Physical CU 1 and Physical CU 2*

	Action	Status/Event
1.		Logical CU 1: WFS_CDM_STATCULOW - Physical CU 1: WFS_CDM_STATCUEMPTY - Physical CU 2: WFS_CDM_STATCULOW
2.	A user withdraws items.	
3.	The device dispenses and presents the items from Physical CU 2, whose status changes to empty.	
4.	As a result, the status of Logical CU 1 changes to empty.	Logical CU 1: WFS_CDM_STATCUEMPTY - Physical CU 1: WFS_CDM_STATCUEMPTY - Physical CU 2: WFS_CDM_STATCUEMPTY  WFS_SRVE_CDM_CASHUNITINFOCHANGED

## 9.11. Multiple Dispense Command Flow

The Multiple Dispense feature occurs when a WFS\_CMD\_CDM\_DISPENSE execute command is issued multiple times to place items on the stacker. Adding to the stacked items with a second or third dispense may be required where the initially picked Cash Unit fails to fulfill the full dispense request. The application can choose to add to the stacker from another Cash Unit to fulfill the request. Additionally this feature covers the requirement to dispense multiple currencies with a mix number other than WFS\_CDM\_INDIVIDUAL. Multiple currencies can be picked separately with the bunch of items assembled on the stacker before presentation to the customer.

Applications can refer to WFS\_CDMCAPS.fwMoveItems to determine if the Service Provider supports the feature. If a Service Provider supports this feature but an application does not wish to use it, the application should check WFS\_CDMSTATUS.fwIntermediateStacker to determine whether items on the stacker need to be purged prior to a dispense.

### Multiple Dispense Example ‘Out of Notes’

In the following example WFS\_CDMCAPS.fwMoveItems reports WFS\_CDM\_TOSTACKER. The CDM has 2 logical Cash Units. Cash Unit 1 has 20USD, Cash Unit 2 has 10USD. Cash Unit 1 has only 2 notes left. This table illustrates multiple WFS\_CMD\_CDM\_DISPENSE commands to fulfill a dispense request.

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 60 USD.	WFS_CMD_CDM_DISPENSE usMixNumber = WFS_CDM_INDIVIDUAL bPresent = FALSE  Request USD20x3 from Cash Unit 1.		2 of 3 items picked and stacked.
2.			WFS_EXEE_CDM_INCOMPLETEDISPENSE event.  lpDenomination output records that 2x20USD were stacked.	
3.			WFS_CMD_CDM_DISPENSE completes WFS_ERR_CDM_NOTDISPENSABLE	
4.		The application decides that the dispense can be fulfilled and calculates the 20USD shortfall can be made up from the 10USD Cash Unit.  WFS_CMD_CDM_DISPENSE usMixNumber = WFS_CDM_INDIVIDUAL bPresent = FALSE  Request USD10x2 from Cash Unit 2.		2 of 2 notes picked and stacked together with the items already stacked.
5.			WFS_CMD_CDM_DISPENSE completes WFS_SUCCESS lpDenomination output records that 2x10USD were stacked.	
6.		Call WFS_CMD_CDM_PRESENT	WFS_SRVE_CDM_SHUTTERSTATUS-CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
7.			WFS_CMD_CDM_PRESENT completes WFS_SUCCESS	
8.	User takes bills.		WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS-CHANGED(WFS_CDM_SHTCLOSED) event generated	

## Multiple Dispense Example ‘Multiple Currency with Vendor Mix’

In the following example WFS\_CDMCAPS, *fwMoveItems* reports WFS\_CDM\_TOSTACKER. The CDM has 2 logical Cash Units with good supply of notes in each. Cash Unit 1 has 20CHF, Cash Unit 2 has 20EUR.

This table illustrates multiple WFS\_CMD\_CDM\_DISPENSE commands to fulfill a dispense request of EUR and CHF notes with vendor defined mix number. WFS\_CDM\_MIXTYPE.*usMixNumber* = 1.

Step	End-User	Application	XFS SP	CDM Hardware
1.	User wants to dispense 100 EUR and 100 CHF.	Application will split the dispense stacking all money before a single present.  WFS_CMD_CDM_DISPENSE <i>usMixNumber</i> = 1 <i>bPresent</i> = FALSE  Request 100 EUR.		100 EUR picked and stacked.
2.			WFS_CMD_CDM_DISPENSE completes WFS_SUCCESS <i>lpDenomination</i> output records that 5x20EUR were stacked.	
3.		WFS_CMD_CDM_DISPENSE <i>usMixNumber</i> = WFS_CDM_INDIVIDUAL <i>bPresent</i> = FALSE  Request 100 CHF.		100 CHF picked and stacked.
4.			WFS_CMD_CDM_DISPENSE completes WFS_SUCCESS <i>lpDenomination</i> output records that 5x20CHF were stacked.	
5.		Call WFS_CMD_CDM_PRESENT	WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTOPEN) event generated	Items presented.
6.			WFS_CMD_CDM_PRESENT completes WFS_SUCCESS	
7.	User takes bills.		WFS_SRVE_CDM_ITEMSTAKEN event generated. WFS_SRVE_CDM_SHUTTERSTATUS CHANGED(WFS_CDM_SHTCLOSED) event generated	

## 10-12. C - Header file

```

/*****
*
* xfscdm.h      XFS - Cash Dispenser (CDM) definitions
*
*              Version 3.30 (March 19 2015) 40 (December 6 2019)
*
*
*****/

#ifndef __INC_XFSCDM_H
#define __INC_XFSCDM_H

#ifdef __cplusplus
extern "C" {
#endif

#include <xfsap.h>

/* be aware of alignment */
#pragma pack (push, 1)

/* values of WFSCDMCAPS.wClass */

#define WFS_SERVICE_CLASS_CDM (3)
#define WFS_SERVICE_CLASS_VERSION_CDM (0x1E030x2803) /* Version 3.3040 */
#define WFS_SERVICE_CLASS_NAME_CDM "CDM"

#define CDM_SERVICE_OFFSET (WFS_SERVICE_CLASS_CDM * 100)

/* CDM Info Commands */

#define WFS_INF_CDM_STATUS (CDM_SERVICE_OFFSET + 1)
#define WFS_INF_CDM_CAPABILITIES (CDM_SERVICE_OFFSET + 2)
#define WFS_INF_CDM_CASH_UNIT_INFO (CDM_SERVICE_OFFSET + 3)
#define WFS_INF_CDM_TELLER_INFO (CDM_SERVICE_OFFSET + 4)
#define WFS_INF_CDM_CURRENCY_EXP (CDM_SERVICE_OFFSET + 6)
#define WFS_INF_CDM_MIX_TYPES (CDM_SERVICE_OFFSET + 7)
#define WFS_INF_CDM_MIX_TABLE (CDM_SERVICE_OFFSET + 8)
#define WFS_INF_CDM_PRESENT_STATUS (CDM_SERVICE_OFFSET + 9)
#define WFS_INF_CDM_GET_ITEM_INFO (CDM_SERVICE_OFFSET + 10)
#define WFS_INF_CDM_GET_BLACKLIST (CDM_SERVICE_OFFSET + 11)
#define WFS_INF_CDM_GET_ALL_ITEMS_INFO (CDM_SERVICE_OFFSET + 12)
#define WFS_INF_CDM_GET_CLASSIFICATION_LIST (CDM_SERVICE_OFFSET + 13)

/* CDM Execute Commands */

#define WFS_CMD_CDM_DENOMINATE (CDM_SERVICE_OFFSET + 1)
#define WFS_CMD_CDM_DISPENSE (CDM_SERVICE_OFFSET + 2)
#define WFS_CMD_CDM_PRESENT (CDM_SERVICE_OFFSET + 3)
#define WFS_CMD_CDM_REJECT (CDM_SERVICE_OFFSET + 4)
#define WFS_CMD_CDM_RETRACT (CDM_SERVICE_OFFSET + 5)
#define WFS_CMD_CDM_OPEN_SHUTTER (CDM_SERVICE_OFFSET + 7)
#define WFS_CMD_CDM_CLOSE_SHUTTER (CDM_SERVICE_OFFSET + 8)
#define WFS_CMD_CDM_SET_TELLER_INFO (CDM_SERVICE_OFFSET + 9)
#define WFS_CMD_CDM_SET_CASH_UNIT_INFO (CDM_SERVICE_OFFSET + 10)
#define WFS_CMD_CDM_START_EXCHANGE (CDM_SERVICE_OFFSET + 11)
#define WFS_CMD_CDM_END_EXCHANGE (CDM_SERVICE_OFFSET + 12)
#define WFS_CMD_CDM_OPEN_SAFE_DOOR (CDM_SERVICE_OFFSET + 13)
#define WFS_CMD_CDM_CALIBRATE_CASH_UNIT (CDM_SERVICE_OFFSET + 15)
#define WFS_CMD_CDM_SET_MIX_TABLE (CDM_SERVICE_OFFSET + 20)
#define WFS_CMD_CDM_RESET (CDM_SERVICE_OFFSET + 21)
#define WFS_CMD_CDM_TEST_CASH_UNITS (CDM_SERVICE_OFFSET + 22)
#define WFS_CMD_CDM_COUNT (CDM_SERVICE_OFFSET + 23)
#define WFS_CMD_CDM_SET_GUIDANCE_LIGHT (CDM_SERVICE_OFFSET + 24)

```

```
#define WFS_CMD_CDM_POWER_SAVE_CONTROL (CDM_SERVICE_OFFSET + 25)
#define WFS_CMD_CDM_PREPARE_DISPENSE (CDM_SERVICE_OFFSET + 26)
#define WFS_CMD_CDM_SET_BLACKLIST (CDM_SERVICE_OFFSET + 27)
#define WFS_CMD_CDM_SYNCHRONIZE_COMMAND (CDM_SERVICE_OFFSET + 28)
#define WFS_CMD_CDM_SET_CLASSIFICATION_LIST (CDM_SERVICE_OFFSET + 29)
```

/\* CDM Messages \*/

```
#define WFS_SRVE_CDM_SAFEDOOROPEN (CDM_SERVICE_OFFSET + 1)
#define WFS_SRVE_CDM_SAFEDOORCLOSED (CDM_SERVICE_OFFSET + 2)
#define WFS_USRE_CDM_CASHUNITTHRESHOLD (CDM_SERVICE_OFFSET + 3)
#define WFS_SRVE_CDM_CASHUNITINFOCHANGED (CDM_SERVICE_OFFSET + 4)
#define WFS_SRVE_CDM_TELLERINFOCHANGED (CDM_SERVICE_OFFSET + 5)
#define WFS_EXEE_CDM_DELAYEDDISPENSE (CDM_SERVICE_OFFSET + 6)
#define WFS_EXEE_CDM_STARTDISPENSE (CDM_SERVICE_OFFSET + 7)
#define WFS_EXEE_CDM_CASHUNITERROR (CDM_SERVICE_OFFSET + 8)
#define WFS_SRVE_CDM_ITEMSTAKEN (CDM_SERVICE_OFFSET + 9)
#define WFS_EXEE_CDM_PARTIALDISPENSE (CDM_SERVICE_OFFSET + 10)
#define WFS_EXEE_CDM_SUBDISPENSEOK (CDM_SERVICE_OFFSET + 11)
#define WFS_SRVE_CDM_ITEMSPRESENTED (CDM_SERVICE_OFFSET + 13)
#define WFS_SRVE_CDM_COUNTS_CHANGED (CDM_SERVICE_OFFSET + 14)
#define WFS_EXEE_CDM_INCOMPLETEDISPENSE (CDM_SERVICE_OFFSET + 15)
#define WFS_EXEE_CDM_NOTEERROR (CDM_SERVICE_OFFSET + 16)
#define WFS_SRVE_CDM_MEDIADETECTED (CDM_SERVICE_OFFSET + 17)
#define WFS_EXEE_CDM_INPUT_P6 (CDM_SERVICE_OFFSET + 18)
#define WFS_SRVE_CDM_DEVICEPOSITION (CDM_SERVICE_OFFSET + 19)
#define WFS_SRVE_CDM_POWER_SAVE_CHANGE (CDM_SERVICE_OFFSET + 20)
#define WFS_EXEE_CDM_INFO_AVAILABLE (CDM_SERVICE_OFFSET + 21)
#define WFS_EXEE_CDM_INCOMPLETERETRACT (CDM_SERVICE_OFFSET + 22)
#define WFS_SRVE_CDM_SHUTTERSTATUSCHANGED (CDM_SERVICE_OFFSET + 23)
```

/\* values of WFS\_CDM\_STATUS.fwDevice \*/

```
#define WFS_CDM_DEVONLINE WFS_STAT_DEVONLINE
#define WFS_CDM_DEVOFFLINE WFS_STAT_DEVOFFLINE
#define WFS_CDM_DEVPOWEROFF WFS_STAT_DEVPOWEROFF
#define WFS_CDM_DEVNODEVICE WFS_STAT_DEVNODEVICE
#define WFS_CDM_DEVHWERROR WFS_STAT_DEVHWERROR
#define WFS_CDM_DEVUSERERROR WFS_STAT_DEVUSERERROR
#define WFS_CDM_DEVBUSY WFS_STAT_DEVBUSY
#define WFS_CDM_DEVFRAUDATTEMPT WFS_STAT_DEVFRAUDATTEMPT
#define WFS_CDM_DEVPOTENTIALFRAUD WFS_STAT_DEVPOTENTIALFRAUD
```

/\* values of WFS\_CDM\_STATUS.fwSafeDoor \*/

```
#define WFS_CDM_DOORNOTSUPPORTED (1)
#define WFS_CDM_DOOROPEN (2)
#define WFS_CDM_DOORCLOSED (3)
#define WFS_CDM_DOORUNKNOWN (5)
```

/\* values of WFS\_CDM\_STATUS.fwDispenser \*/

```
#define WFS_CDM_DISPOK (0)
#define WFS_CDM_DISPCUSTATE (1)
#define WFS_CDM_DISPCUSTOP (2)
#define WFS_CDM_DISPCUUNKNOWN (3)
```

/\* values of WFS\_CDM\_STATUS.fwIntermediateStacker \*/

```
#define WFS_CDM_ISEMPY (0)
#define WFS_CDM_ISNOTEMPTY (1)
#define WFS_CDM_ISNOTEMPTYCUST (2)
#define WFS_CDM_ISNOTEMPTYUNK (3)
#define WFS_CDM_ISUNKNOWN (4)
#define WFS_CDM_ISNOTSUPPORTED (5)
```

/\* Size and max index of dwGuidLights array \*/

```
#define WFS_CDM_GUIDLIGHTS_SIZE (32)
```

```

#define      WFS_CDM_GUIDLIGHTS_MAX                (WFS_CDM_GUIDLIGHTS_SIZE - 1)

/* Indices of WFSCDMSTATUS.dwGuidLights [...]
   WFSCDMCAPS.dwGuidLights [...] */

#define      WFS_CDM_GUIDANCE_POSOUTNULL          (0)
#define      WFS_CDM_GUIDANCE_POSOUTLEFT         (1)
#define      WFS_CDM_GUIDANCE_POSOUTRIGHT        (2)
#define      WFS_CDM_GUIDANCE_POSOUTCENTER       (3)
#define      WFS_CDM_GUIDANCE_POSOUTTOP          (4)
#define      WFS_CDM_GUIDANCE_POSOUTBOTTOM       (5)
#define      WFS_CDM_GUIDANCE_POSOUTFRONT        (6)
#define      WFS_CDM_GUIDANCE_POSOUTREAR        (7)

/* Values of WFSCDMSTATUS.dwGuidLights [...]
   WFSCDMCAPS.dwGuidLights [...] */

#define      WFS_CDM_GUIDANCE_NOT_AVAILABLE      (0x00000000)
#define      WFS_CDM_GUIDANCE_OFF                (0x00000001)
#define      WFS_CDM_GUIDANCE_SLOW_FLASH        (0x00000004)
#define      WFS_CDM_GUIDANCE_MEDIUM_FLASH      (0x00000008)
#define      WFS_CDM_GUIDANCE_QUICK_FLASH       (0x00000010)
#define      WFS_CDM_GUIDANCE_CONTINUOUS        (0x00000080)
#define      WFS_CDM_GUIDANCE_RED               (0x00000100)
#define      WFS_CDM_GUIDANCE_GREEN             (0x00000200)
#define      WFS_CDM_GUIDANCE_YELLOW            (0x00000400)
#define      WFS_CDM_GUIDANCE_BLUE              (0x00000800)
#define      WFS_CDM_GUIDANCE_CYAN              (0x00001000)
#define      WFS_CDM_GUIDANCE_MAGENTA           (0x00002000)
#define      WFS_CDM_GUIDANCE_WHITE             (0x00004000)
#define      WFS_CDM_GUIDANCE_ENTRY             (0x00100000)
#define      WFS_CDM_GUIDANCE_EXIT              (0x00200000)

/* Values of WFSCDMSTATUS.dwGuidLights [...]
   WFSCDMCAPS.dwGuidLights [...] */

#define      WFS_CDM_GUIDANCE_NOT_AVAILABLE      (0x0000)

/* values of WFSCDMSTATUS.wDevicePosition
   WFSCDMDEVICEPOSITION.wPosition */

#define      WFS_CDM_DEVICEINPOSITION            (0)
#define      WFS_CDM_DEVICENOTINPOSITION         (1)
#define      WFS_CDM_DEVICEPOSUNKNOWN           (2)
#define      WFS_CDM_DEVICEPOSNOTSUPP           (3)

/* values of WFSCDMOUTPOS.fwShutter */

#define      WFS_CDM_SHTCLOSED                   (0)
#define      WFS_CDM_SHTOPEN                     (1)
#define      WFS_CDM_SHTJAMMED                   (2)
#define      WFS_CDM_SHTUNKNOWN                  (3)
#define      WFS_CDM_SHTNOTSUPPORTED             (4)

/* values of WFSCDMOUTPOS.fwPositionStatus */

#define      WFS_CDM_PSEMPTY                     (0)
#define      WFS_CDM_PSNOTEMPTY                  (1)
#define      WFS_CDM_PSUNKNOWN                   (2)
#define      WFS_CDM_PSNOTSUPPORTED              (3)

/* values of WFSCDMOUTPOS.fwTransport */

#define      WFS_CDM_TPOK                        (0)
#define      WFS_CDM_TPINOP                      (1)
#define      WFS_CDM_TPUNKNOWN                   (2)
#define      WFS_CDM_TPNOTSUPPORTED              (3)

/* values of WFSCDMOUTPOS.fwTransportStatus */

```

```
#define WFS_CDM_TPSTATEMPTY (0)
#define WFS_CDM_TPSTATNOTEMPTY (1)
#define WFS_CDM_TPSTATNOTEMPTYCUST (2)
#define WFS_CDM_TPSTATNOTEMPTY_UNK (3)
#define WFS_CDM_TPSTATNOTSUPPORTED (4)

/* values of WFS_CDM_OUTPOS.fwJammedShutterPosition */

#define WFS_CDM_SHUTTERPOS_NOTSUPPORTED (0)
#define WFS_CDM_SHUTTERPOS_NOTJAMMED (1)
#define WFS_CDM_SHUTTERPOS_OPEN (2)
#define WFS_CDM_SHUTTERPOS_PARTIALLY_OPEN (3)
#define WFS_CDM_SHUTTERPOS_CLOSED (4)
#define WFS_CDM_SHUTTERPOS_UNKNOWN (5)

/* values of WFS_CDM_CAPS.fwType */

#define WFS_CDM_TELLERBILL (0)
#define WFS_CDM_SELFERVICEBILL (1)
#define WFS_CDM_TELLERCOIN (2)
#define WFS_CDM_SELFERVICECOIN (3)

/* values of WFS_CDM_CAPS.fwRetractAreas,
WFS_CDM_RETRACT.usRetractArea */

#define WFS_CDM_RA_RETRACT (0x0001)
#define WFS_CDM_RA_TRANSPORT (0x0002)
#define WFS_CDM_RA_STACKER (0x0004)
#define WFS_CDM_RA_REJECT (0x0008)
#define WFS_CDM_RA_NOTSUPP (0x0010)
#define WFS_CDM_RA_ITEMCASSETTE (0x0020)

/* values of WFS_CDM_CAPS.fwRetractTransportActions,
WFS_CDM_CAPS.fwRetractStackerActions */

#define WFS_CDM_PRESENT (0x0001)
#define WFS_CDM_RETRACT (0x0002)
#define WFS_CDM_REJECT (0x0004)
#define WFS_CDM_NOTSUPP (0x0008)
#define WFS_CDM_ITEMCASSETTE (0x0010)

/* values of WFS_CDM_CAPS.fwMoveItems */

#define WFS_CDM_FROMCU (0x0001)
#define WFS_CDM_TOCU (0x0002)
#define WFS_CDM_TOTRANSPORT (0x0004)
#define WFS_CDM_TOSTACKER (0x0008)

/* values of WFS_CDM_CASHUNIT.usType */

#define WFS_CDM_TYPENA (1)
#define WFS_CDM_TYPEREJECTCASSETTE (2)
#define WFS_CDM_TYPEBILLCASSETTE (3)
#define WFS_CDM_TYPECOINCYLINDER (4)
#define WFS_CDM_TYPECOINDISPENSER (5)
#define WFS_CDM_TYPERETRACTCASSETTE (6)
#define WFS_CDM_TYPECOUPON (7)
#define WFS_CDM_TYPEDOCUMENT (8)
#define WFS_CDM_TYPEREPCONTAINER (11)
#define WFS_CDM_TYPERECYCLING (12)

/* values of WFS_CDM_CASHUNIT.usStatus */

#define WFS_CDM_STATCUOK (0)
#define WFS_CDM_STATCUFULL (1)
#define WFS_CDM_STATCUHIGH (2)
#define WFS_CDM_STATCULOW (3)
#define WFS_CDM_STATCUEMPTY (4)
#define WFS_CDM_STATCUINOP (5)
#define WFS_CDM_STATCUMISSING (6)
```

```

#define      WFS_CDM_STATCUNOVAL                (7)
#define      WFS_CDM_STATCUNOREF              (8)
#define      WFS_CDM_STATCUMANIP              (9)

/* values of WFSCDM MIXTYPE.usMixType */

#define      WFS_CDM_MIXALGORITHM              (1)
#define      WFS_CDM_MIXTABLE                  (2)

/* values of WFSCDM MIXTYPE.usMixNumber */

#define      WFS_CDM_INDIVIDUAL                (0)

/* values of WFSCDM MIXTYPE.usSubType (predefined mix algorithms) */

#define      WFS_CDM_MIX_MINIMUM_NUMBER_OF_BILLS (1)
#define      WFS_CDM_MIX_EQUAL_EMPTYING_OF_CASH_UNITS (2)
#define      WFS_CDM_MIX_MAXIMUM_NUMBER_OF_CASH_UNITS (3)

/* values of WFSCDM PRESENTSTATUS.wPresentState */

#define      WFS_CDM_PRESENTED                 (1)
#define      WFS_CDM_NOTPRESENTED              (2)
#define      WFS_CDM_UNKNOWN                   (3)

/* values of WFSCDM DISPENSE.fwPosition,
   WFSCDM CAPS.fwPositions,
   WFSCDM OUTPOS.fwPosition,
   WFSCDM TELLERDETAILS.fwOutputPosition,
   WFSCDM PHYSICALCU.fwPosition */

#define      WFS_CDM_POSNULL                   (0x0000)
#define      WFS_CDM_POSLEFT                   (0x0001)
#define      WFS_CDM_POSRIGHT                  (0x0002)
#define      WFS_CDM_POSCENTER                 (0x0004)
#define      WFS_CDM_POSTOP                    (0x0040)
#define      WFS_CDM_POSBOTTOM                 (0x0080)
#define      WFS_CDM_POSFRONT                  (0x0800)
#define      WFS_CDM_POSREAR                   (0x1000)

/* additional values of WFSCDM PHYSICALCU.fwPosition */
#define      WFS_CDM_POSREJECT                  (0x0100)

/* values of WFSCDM TELLERDETAILS.ulInputPosition */

#define      WFS_CDM_POSINLEFT                 (0x0001)
#define      WFS_CDM_POSINRIGHT                (0x0002)
#define      WFS_CDM_POSINCENTER               (0x0004)
#define      WFS_CDM_POSINTOP                  (0x0008)
#define      WFS_CDM_POSINBOTTOM              (0x0010)
#define      WFS_CDM_POSINFRONT                (0x0020)
#define      WFS_CDM_POSINREAR                (0x0040)

/* values of fwExchangeType */

#define      WFS_CDM_EXBYHAND                   (0x0001)
#define      WFS_CDM_EXTOCASSETTES             (0x0002)

/* values of WFSCDM TELLERUPDATE.usAction */

#define      WFS_CDM_CREATE_TELLER              (1)
#define      WFS_CDM_MODIFY_TELLER             (2)
#define      WFS_CDM_DELETE_TELLER             (3)

/* values of WFSCDM CUERROR.wFailure */

#define      WFS_CDM_CASHUNITEMPTY             (1)
#define      WFS_CDM_CASHUNITERROR             (2)
#define      WFS_CDM_CASHUNITFULL             (4)
#define      WFS_CDM_CASHUNITLOCKED           (5)

```

```
#define WFS_CDM_CASHUNITINVALID (6)
#define WFS_CDM_CASHUNITCONFIG (7)
#define WFS_CDM_CASHUNITNOTCONF (8)

/* values of lpusReason in WFS_EXEE_CDM_NOTEERROR */

#define WFS_CDM_DOUBLENOTEDETECTED (1)
#define WFS_CDM_LONGNOTEDETECTED (2)
#define WFS_CDM_SKEWEDNOTE (3)
#define WFS_CDM_INCORRECTCOUNT (4)
#define WFS_CDM_NOTESTOOCLOSE (5)
#define WFS_CDM_OTHERNOTEERROR (6)
#define WFS_CDM_SHORTNOTEDETECTED (7)

/* values of WFSCDMPREPAREDISPENSE.wAction */

#define WFS_CDM_START (1)
#define WFS_CDM_STOP (2)

/* values of WFSCDMSTATUS.wAntiFraudModule */

#define WFS_CDM_AFMNOTSUPP (0)
#define WFS_CDM_AFMOK (1)
#define WFS_CDM_AFMINOP (2)
#define WFS_CDM_AFMDEVICEDETECTED (3)
#define WFS_CDM_AFMUNKNOWN (4)

/* values of WFSCDMGETITEMINFO.usLevel,
WFSCDMITEMINFOSUMMARY.usLevel,
WFSCDMGETALLITEMSINFO.usLevel,
WFSCDMITEMINFOALL.usLevel */

#define WFS_CDM_LEVEL_1 (1)
#define WFS_CDM_LEVEL_2 (2)
#define WFS_CDM_LEVEL_3 (3)
#define WFS_CDM_LEVEL_4 (4)

/* values of WFSCDMITEMINFOALL.usLevel */

#define WFS_CDM_LEVEL_ALL (0)

/* values for WFSCDMGETITEMINFO.dwItemInfoType */

#define WFS_CDM_ITEM_SERIALNUMBER (0x00000001)
#define WFS_CDM_ITEM_SIGNATURE (0x00000002)
#define WFS_CDM_ITEM_IMAGEFILE (0x00000004)

/* values of lpusReason in WFS_EXEE_CDM_INCOMPLETERETRACT */

#define WFS_CDM_IRRETRACTFAILURE (1)
#define WFS_CDM_IRRETRACTAREAFULL (2)
#define WFS_CDM_IRFOREIGNITEMSDETECTED (3)
#define WFS_CDM_IRINVALIDBUNCH (4)

/* values for WFSCDMITEMINFOALL.wOnBlacklist */

#define WFS_CDM_ONBLACKLIST (0x0001)
#define WFS_CDM_NOTONBLACKLIST (0x0002)
#define WFS_CDM_BLACKLISTUNKNOWN (0x0003)

/* values for WFSCDMITEMINFOALL.wItemLocation */

#define WFS_CDM_LOCATION_DEVICE (0x0001)
#define WFS_CDM_LOCATION_CASHUNIT (0x0002)
#define WFS_CDM_LOCATION_CUSTOMER (0x0003)
#define WFS_CDM_LOCATION_UNKNOWN (0x0004)

/* values for WFSCDMITEMINFOALL.wOnClassificationList */
#define WFS_CDM_CLASSIFICATIONLIST_ON (0x0001)
```

```

#define WFS_CDM_CLASSIFICATIONLIST NOTON (0x0002)
#define WFS_CDM_CLASSIFICATIONLIST UNKNOWN (0x0003)

/* values for WFS_CDMITEMINFOALL.wItemDeviceLocation */

#define WFS_CDM_DEVLOC STACKER (0x0001)
#define WFS_CDM_DEVLOC OUTPUT (0x0002)
#define WFS_CDM_DEVLOC TRANSPORT (0x0003)
#define WFS_CDM_DEVLOC UNKNOWN (0x0004)

/* XFS CDM Errors */

#define WFS_ERR_CDM_INVALIDCURRENCY (- (CDM_SERVICE_OFFSET + 0))
#define WFS_ERR_CDM_INVALIDTELLERID (- (CDM_SERVICE_OFFSET + 1))
#define WFS_ERR_CDM_CASHUNITERROR (- (CDM_SERVICE_OFFSET + 2))
#define WFS_ERR_CDM_INVALIDDENOMINATION (- (CDM_SERVICE_OFFSET + 3))
#define WFS_ERR_CDM_INVALIDMIXNUMBER (- (CDM_SERVICE_OFFSET + 4))
#define WFS_ERR_CDM_NOCURRENCYMIX (- (CDM_SERVICE_OFFSET + 5))
#define WFS_ERR_CDM_NOTDISPENSABLE (- (CDM_SERVICE_OFFSET + 6))
#define WFS_ERR_CDM_TOOMANYITEMS (- (CDM_SERVICE_OFFSET + 7))
#define WFS_ERR_CDM_UNSUPPOSITION (- (CDM_SERVICE_OFFSET + 8))
#define WFS_ERR_CDM_SAFEDOOROPEN (- (CDM_SERVICE_OFFSET + 10))
#define WFS_ERR_CDM_SHUTTERNOTOPEN (- (CDM_SERVICE_OFFSET + 12))
#define WFS_ERR_CDM_SHUTTEROPEN (- (CDM_SERVICE_OFFSET + 13))
#define WFS_ERR_CDM_SHUTTERCLOSED (- (CDM_SERVICE_OFFSET + 14))
#define WFS_ERR_CDM_INVALIDCASHUNIT (- (CDM_SERVICE_OFFSET + 15))
#define WFS_ERR_CDM_NOITEMS (- (CDM_SERVICE_OFFSET + 16))
#define WFS_ERR_CDM_EXCHANGEACTIVE (- (CDM_SERVICE_OFFSET + 17))
#define WFS_ERR_CDM_NOEXCHANGEACTIVE (- (CDM_SERVICE_OFFSET + 18))
#define WFS_ERR_CDM_SHUTTERNOTCLOSED (- (CDM_SERVICE_OFFSET + 19))
#define WFS_ERR_CDM_PRERRORNOITEMS (- (CDM_SERVICE_OFFSET + 20))
#define WFS_ERR_CDM_PRERRORITEMS (- (CDM_SERVICE_OFFSET + 21))
#define WFS_ERR_CDM_PRERRORUNKNOWN (- (CDM_SERVICE_OFFSET + 22))
#define WFS_ERR_CDM_ITEMSTAKEN (- (CDM_SERVICE_OFFSET + 23))
#define WFS_ERR_CDM_INVALIDMIXTABLE (- (CDM_SERVICE_OFFSET + 27))
#define WFS_ERR_CDM_OUTPUTPOS_NOT_EMPTY (- (CDM_SERVICE_OFFSET + 28))
#define WFS_ERR_CDM_INVALIDRETRACTPOSITION (- (CDM_SERVICE_OFFSET + 29))
#define WFS_ERR_CDM_NOTRETRACTAREA (- (CDM_SERVICE_OFFSET + 30))
#define WFS_ERR_CDM_NOCASHBOXPRESENT (- (CDM_SERVICE_OFFSET + 33))
#define WFS_ERR_CDM_AMOUNTNOTINMIXTABLE (- (CDM_SERVICE_OFFSET + 34))
#define WFS_ERR_CDM_ITEMSNOTTAKEN (- (CDM_SERVICE_OFFSET + 35))
#define WFS_ERR_CDM_ITEMSLEFT (- (CDM_SERVICE_OFFSET + 36))
#define WFS_ERR_CDM_INVALID_PORT (- (CDM_SERVICE_OFFSET + 37))
#define WFS_ERR_CDM_POWERSAVETOOSHORT (- (CDM_SERVICE_OFFSET + 38))
#define WFS_ERR_CDM_POWERSAVEMEDIAPRESENT (- (CDM_SERVICE_OFFSET + 39))
#define WFS_ERR_CDM_POSITION_NOT_EMPTY (- (CDM_SERVICE_OFFSET + 40))
#define WFS_ERR_CDM_INCOMPLETERETRACT (- (CDM_SERVICE_OFFSET + 41))
#define WFS_ERR_CDM_COMMANDUNSPP (- (CDM_SERVICE_OFFSET + 42))
#define WFS_ERR_CDM_SYNCHRONIZEUNSPP (- (CDM_SERVICE_OFFSET + 43))

/*=====*/
/* CDM Info Command Structures */
/*=====*/

typedef struct _wfs_cdm_position
{
    WORD fwPosition;
    WORD fwShutter;
    WORD fwPositionStatus;
    WORD fwTransport;
    WORD fwTransportStatus;
    WORD fwJammedShutterPosition;
} WFS_CDMOUTPOS, *LPWFS_CDMOUTPOS;

typedef struct _wfs_cdm_status
{
    WORD fwDevice;
    WORD fwSafeDoor;
    WORD fwDispenser;
    WORD fwIntermediateStacker;
}

```

```

LPWFSCDMOUTPOS      *lppPositions;
LPSTR               lpszExtra;
DWORD              dwGuidLights[WFS_CDM_GUIDLIGHTS_SIZE];
WORD               wDevicePosition;
USHORT            usPowerSaveRecoveryTime;
WORD               wAntiFraudModule;
} WFS_CDMSTATUS, *LPWFSCDMSTATUS;

typedef struct _wfs_cdm_caps
{
    WORD           wClass;
    WORD           fwType;
    WORD           wMaxDispenseItems;
    BOOL          bCompound;
    BOOL          bShutter;
    BOOL          bShutterControl;
    WORD          fwRetractAreas;
    WORD          fwRetractTransportActions;
    WORD          fwRetractStackerActions;
    BOOL          bSafeDoor;
    BOOL          bCashBox;
    BOOL          bIntermediateStacker;
    BOOL          bItemsTakenSensor;
    WORD          fwPositions;
    WORD          fwMoveItems;
    WORD          fwExchangeType;
    LPSTR         lpszExtra;
    DWORD        dwGuidLights[WFS_CDM_GUIDLIGHTS_SIZE];
    BOOL          bPowerSaveControl;
    BOOL          bPrepareDispense;
    BOOL          bAntiFraudModule;
    DWORD        dwItemInfoTypes;
    BOOL          bBlacklist;
    LPDWORD      lpdwSynchronizableCommands;
    BOOL          bClassificationList;
} WFS_CDMCAPS, *LPWFSCDMCAPS;

typedef struct _wfs_cdm_physicalcu
{
    LPSTR         lpPhysicalPositionName;
    CHAR          cUnitID[5];
    ULONG        ulInitialCount;
    ULONG        ulCount;
    ULONG        ulRejectCount;
    ULONG        ulMaximum;
    USHORT       usPStatus;
    BOOL         bHardwareSensor;
    ULONG        ulDispensedCount;
    ULONG        ulPresentedCount;
    ULONG        ulRetractedCount;
} WFS_CDMPHCU, *LPWFSCDMPHCU;

typedef struct _wfs_cdm_cashunit
{
    USHORT       usNumber;
    USHORT       usType;
    LPSTR         lpszCashUnitName;
    CHAR          cUnitID[5];
    CHAR          cCurrencyID[3];
    ULONG        ulValues;
    ULONG        ulInitialCount;
    ULONG        ulCount;
    ULONG        ulRejectCount;
    ULONG        ulMinimum;
    ULONG        ulMaximum;
    BOOL         bAppLock;
    USHORT       usStatus;
    USHORT       usNumPhysicalCUs;
    LPWFSCDMPHCU *lppPhysical;
    ULONG        ulDispensedCount;
}

```

```

        ULONG                ulPresentedCount;
        ULONG                ulRetractedCount;
    } WFSCDMCASHUNIT, *LPWFSCDMCASHUNIT;

typedef struct _wfs_cdm_cu_info
{
    USHORT                usTellerID;
    USHORT                usCount;
    LPWFSCDMCASHUNIT    *lppList;
} WFSCDMCUINFO, *LPWFSCDMCUINFO;

typedef struct _wfs_cdm_teller_info
{
    USHORT                usTellerID;
    CHAR                 cCurrencyID[3];
} WFSCDMTELLERINFO, *LPWFSCDMTELLERINFO;

typedef struct _wfs_cdm_teller_totals
{
    CHAR                 cCurrencyID[3];
    ULONG                ulItemsReceived;
    ULONG                ulItemsDispensed;
    ULONG                ulCoinsReceived;
    ULONG                ulCoinsDispensed;
    ULONG                ulCashBoxReceived;
    ULONG                ulCashBoxDispensed;
} WFSCDMTELLERTOTALS, *LPWFSCDMTELLERTOTALS;

typedef struct _wfs_cdm_teller_details
{
    USHORT                usTellerID;
    ULONG                ulInputPosition;
    WORD                 fwOutputPosition;
    LPWFSCDMTELLERTOTALS *lppTellerTotals;
} WFSCDMTELLERDETAILS, *LPWFSCDMTELLERDETAILS;

typedef struct _wfs_cdm_currency_exp
{
    CHAR                 cCurrencyID[3];
    SHORT                sExponent;
} WFSCDMCURRENCYEXP, *LPWFSCDMCURRENCYEXP;

typedef struct _wfs_cdm_mix_type
{
    USHORT                usMixNumber;
    USHORT                usMixType;
    USHORT                usSubType;
    LPSTR                lpszName;
} WFSCDMMIXTYPE, *LPWFSCDMMIXTYPE;

typedef struct _wfs_cdm_mix_row
{
    ULONG                ulAmount;
    LPUSHORT             lpusMixture;
} WFSCDMMIXROW, *LPWFSCDMMIXROW;

typedef struct _wfs_cdm_mix_table
{
    USHORT                usMixNumber;
    LPSTR                lpszName;
    USHORT                usRows;
    USHORT                usCols;
    LPULONG              lpulMixHeader;
    LPWFSCDMMIXROW      *lppMixRows;
} WFSCDMMIXTABLE, *LPWFSCDMMIXTABLE;

typedef struct _wfs_cdm_denomination
{
    CHAR                 cCurrencyID[3];
    ULONG                ulAmount;
}

```

```
    USHORT                usCount;
    LPULONG               lpulValues;
    ULONG                 ulCashBox;
} WFSCDMDENOMINATION, *LPWFSCDMDENOMINATION;

typedef struct _wfs_cdm_present_status
{
    LPWFSCDMDENOMINATION lpDenomination;
    WORD                 wPresentState;
    LPSTR                lpszExtra;
} WFSCDMPRESENTSTATUS, *LPWFSCDMPRESENTSTATUS;

typedef struct _wfs_cdm_signature
{
    ULONG                ulLength;
    LPVOID               lpData;
} WFSCDMSIGNATURE, *LPWFSCDMSIGNATURE;

typedef struct _wfs_cdm_get_item_info
{
    USHORT               usLevel;
    USHORT               usIndex;
    DWORD                dwItemInfoType;
} WFSCDMGETITEMINFO, *LPWFSCDMGETITEMINFO;

typedef struct _wfs_cdm_item_info
{
    CHAR                 cCurrencyID[3];
    ULONG                ulValue;
    USHORT               usRelease;
    LPWSTR               lpszSerialNumber;
    LPWFSCDMSIGNATURE    lpSignature;
    LPSTR                lpszImageFileName;
} WFSCDMITEMINFO, *LPWFSCDMITEMINFO;

typedef struct _wfs_cdm_get_all_items_info
{
    USHORT               usLevel;
} WFSCDMGETALLITEMSINFO, *LPWFSCDMGETALLITEMSINFO;

typedef struct _wfs_cdm_item_info_all
{
    USHORT               usLevel;
    CHAR                 cCurrencyID[3];
    ULONG                ulValue;
    USHORT               usRelease;
    LPWSTR               lpszSerialNumber;
    LPSTR                lpszImageFileName;
    WORD                 wOnBlacklist;
    WORD                 wItemLocation;
    USHORT               usNumber;
    WORD                 wOnClassificationList;
    WORD                 wItemDeviceLocation;
} WFSCDMITEMINFOALL, *LPWFSCDMITEMINFOALL;

typedef struct _wfs_cdm_all_items_info
{
    USHORT               usCount;
    LPWFSCDMITEMINFOALL *lppItemsList;
} WFSCDMALLITEMSINFO, *LPWFSCDMALLITEMSINFO;

typedef struct wfs_cdm_classification_element
{
    LPWSTR                lpszSerialNumber;
    CHAR                 cCurrencyID[3];
    ULONG                ulValue;
    USHORT               usLevel;
    BOOL                 bUnfit;
} WFSCDMCLASSIFICATIONELEMENT, *LPWFSCDMCLASSIFICATIONELEMENT;
```

```

typedef struct wfs_cdm_classification_list
{
    LPWSTR                lpszVersion;
    USHORT                usCount;
    LPWFSCDMCLASSIFICATIONELEMENT *lppClassificationElements;
} WFSCDMCLASSIFICATIONLIST, *LPWFSCDMCLASSIFICATIONLIST;

/*=====*/
/* CDM Execute Command Structures */
/*=====*/

typedef struct _wfs_cdm_denominate
{
    USHORT                usTellerID;
    USHORT                usMixNumber;
    LPWFSCDMDENOMINATION lpDenomination;
} WFSCDMDENOMINATE, *LPWFSCDMDENOMINATE;

typedef struct _wfs_cdm_dispense
{
    USHORT                usTellerID;
    USHORT                usMixNumber;
    WORD                 fwPosition;
    BOOL                 bPresent;
    LPWFSCDMDENOMINATION lpDenomination;
} WFSCDMDISPENSE, *LPWFSCDMDISPENSE;

typedef struct _wfs_cdm_physical_cu
{
    BOOL                 bEmptyAll;
    WORD                 fwPosition;
    LPSTR                lpPhysicalPositionName;
} WFSCDMPHYSICALCU, *LPWFSCDMPHYSICALCU;

typedef struct _wfs_cdm_counted_phys_cu
{
    LPSTR                lpPhysicalPositionName;
    CHAR                 cUnitId[5];
    ULONG                ulDispensed;
    ULONG                ulCounted;
    USHORT               usPStatus;
} WFSCDMCOUNTEDPHYSCU, *LPWFSCDMCOUNTEDPHYSCU;

typedef struct _wfs_cdm_count
{
    USHORT                usNumPhysicalCUs;
    LPWFSCDMCOUNTEDPHYSCU *lppCountedPhysCUs;
} WFSCDMCOUNT, *LPWFSCDMCOUNT;

typedef struct _wfs_cdm_retract
{
    WORD                 fwOutputPosition;
    USHORT               usRetractArea;
    USHORT               usIndex;
} WFSCDMRETRACT, *LPWFSCDMRETRACT;

typedef struct _wfs_cdm_item_number
{
    CHAR                 cCurrencyID[3];
    ULONG                ulValues;
    USHORT               usRelease;
    ULONG                ulCount;
    USHORT               usNumber;
} WFSCDMITEMNUMBER, *LPWFSCDMITEMNUMBER;

typedef struct _wfs_cdm_item_number_list
{
    USHORT                usNumOfItemNumbers;
    LPWFSCDMITEMNUMBER   *lppItemNumber;
}

```

```
} WFSCDMITEMNUMBERLIST, *LPWFSCDMITEMNUMBERLIST;

typedef struct _wfs_cdm_teller_update
{
    USHORT                usAction;
    LPWFSCDMTELLERDETAILS lpTellerDetails;
} WFSCDMTELLERUPDATE, *LPWFSCDMTELLERUPDATE;

typedef struct _wfs_cdm_start_ex
{
    WORD                fwExchangeType;
    USHORT              usTellerID;
    USHORT              usCount;
    LPUSHORT            lpusCUNumList;
} WFSCDMSTARTEX, *LPWFSCDMSTARTEX;

typedef struct _wfs_cdm_itemposition
{
    USHORT              usNumber;
    LPWFSCDMRETRACT    lpRetractArea;
    WORD                fwOutputPosition;
} WFSCDMITEMPOSITION, *LPWFSCDMITEMPOSITION;

typedef struct _wfs_cdm_calibrate
{
    USHORT              usNumber;
    USHORT              usNumOfBills;
    LPWFSCDMITEMPOSITION *lpPosition;
} WFSCDMCALIBRATE, *LPWFSCDMCALIBRATE;

typedef struct _wfs_cdm_set_guidlight
{
    WORD                wGuidLight;
    DWORD               dwCommand;
} WFSCDMSETGUIDLIGHT, *LPWFSCDMSETGUIDLIGHT;

typedef struct _wfs_cdm_power_save_control
{
    USHORT              usMaxPowerSaveRecoveryTime;
} WFSCDMPOWERSAVECONTROL, *LPWFSCDMPOWERSAVECONTROL;

typedef struct _wfs_cdm_prepare_dispense
{
    WORD                wAction;
} WFSCDMPREPAREDISPENSE, *LPWFSCDMPREPAREDISPENSE;

typedef struct _wfs_cdm_blacklist_element
{
    LPWSTR              lpszSerialNumber;
    CHAR                cCurrencyID[3];
    ULONG               ulValue;
} WFSCDMBLACKLISTELEMENT, *LPWFSCDMBLACKLISTELEMENT;

typedef struct _wfs_cdm_blacklist
{
    LPWSTR              lpszVersion;
    USHORT              usCount;
    LPWFSCDMBLACKLISTELEMENT *lppBlacklistElements;
} WFSCDMBLACKLIST, *LPWFSCDMBLACKLIST;

typedef struct _wfs_cdm_synchronize_command
{
    DWORD               dwCommand;
    LPVOID              lpCmdData;
} WFSCDMSYNCHRONIZECOMMAND, *LPWFSCDMSYNCHRONIZECOMMAND;

/*=====*/
/* CDM Message Structures */
/*=====*/
```

```
typedef struct _wfs_cdm_cu_error
{
    WORD                wFailure;
    LPWFSCDMCASHUNIT    lpCashUnit;
} WFSCDMCUERROR, *LPWFSCDMCUERROR;

typedef struct _wfs_cdm_counts_changed
{
    USHORT              usCount;
    LPUSHORT            lpusCUNumList;
} WFSCDMCOUNTSCHANGED, *LPWFSCDMCOUNTSCHANGED;

typedef struct _wfs_cdm_device_position
{
    WORD                wPosition;
} WFSCDMDEVICEPOSITION, *LPWFSCDMDEVICEPOSITION;

typedef struct _wfs_cdm_power_save_change
{
    USHORT              usPowerSaveRecoveryTime;
} WFSCDMPOWERSAVECHANGE, *LPWFSCDMPOWERSAVECHANGE;

typedef struct _wfs_cdm_item_info_summary
{
    USHORT              usLevel;
    USHORT              usNumOfItems;
} WFSCDMITEMINFOSUMMARY, *LPWFSCDMITEMINFOSUMMARY;

typedef struct _wfs_cdm_incomplete_retract
{
    WFSCDMITEMNUMBERLIST lpItemNumberList;
    USHORT              usReason;
} WFSCDMINCOMPLETERETRACT, *LPWFSCDMINCOMPLETERETRACT;

typedef struct _wfs_cdm_shutter_status_changed
{
    WORD                fwPosition;
    WORD                fwShutter;
} WFSCDMSHUTTERSTATUSCHANGED, *LPWFSCDMSHUTTERSTATUSCHANGED;

/* restore alignment */
#pragma pack (pop)

#ifdef __cplusplus
} /*extern "C"*/
#endif

#endif /* __INC_XFSCDM__H */
```